


Update Firmware

1. Unzip the file to disk
2. Run the file (FirmwareTools.exe)
3. Connect the USB of **aircraft** to computer
4. Wait for update button to be available
5. Click the update button

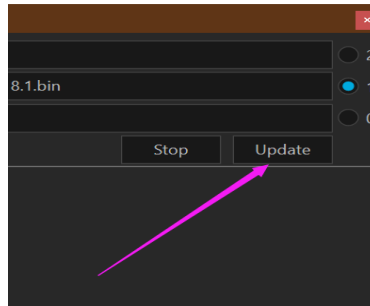

view firmware version

1. Turn on the power of the aircraft and remote control
2. Connect the **remote-control USB** to the computer
3. Wait a moment, click **FW Information** button to read the Current firmware information
4. After the read is successful, the firmware information will be displayed. As shown in figure, the number following BUILD: is the firmware Version number
5. If the firmware information read failed, repeat step3

