

**Digalox® DPM36-AV****Instruction manual (Rev-2025-03)**

Panel meter for 300V/10A AC/DC

Package contents: Panel meter Digalox® DPM36, 5 jumpers,
2 instruction manuals (EN+DE)

1. Safety instructions

- Read instruction manual carefully before operating the device! Keep for later reference.
- Mounting and installation must be carried out by suitably qualified and competent persons only.
- **WARNING: The measurement inputs of the device can carry life-threatening voltages!**
- **WARNING: When working on the device hazardous voltages must not be connected to the device! The jumper terminals are not isolated from the measuring circuit.**
- **DANGER: When the USB port is connected, only voltages less than 50 V may be present at the measurement inputs. The USB port is not isolated from the measuring circuit.**
- At maximum current (10 A), 500 mW of waste heat is generated at the measuring resistor. The tip of the measuring resistor becomes very hot (approx. 100 °C). Maintain appropriate safety distances and ensure good ventilation!
- The device is not intended to protect persons or facilities against harm. Specific devices must be used to guarantee safety (protection relays, cut-off switches, etc.).
- When connecting switches to the jumper terminals, only switches must be used whose isolation voltage is at least twice the maximum occurring measurement voltage. For example, when measuring 250 V AC switches must be isolated for at least 500 V.
- Do not use the device in the presence of explosive or flammable substances!
- All cables carrying hazardous voltages must be secured with external separators.


2. Meaning of symbols

General warning sign
(Attention, observe the documentation!)

3. Intended use

- Measurement of current, voltage and frequency in the specified measuring ranges.
- Indoor use non condensing, non corrosive.
- Panel mounting.
- In operation, supply the device preferably via screw terminals with 8 to 24 V DC instead of via USB.
- Failure to comply with these instructions will void all guarantee and warranty.

4. Product overview

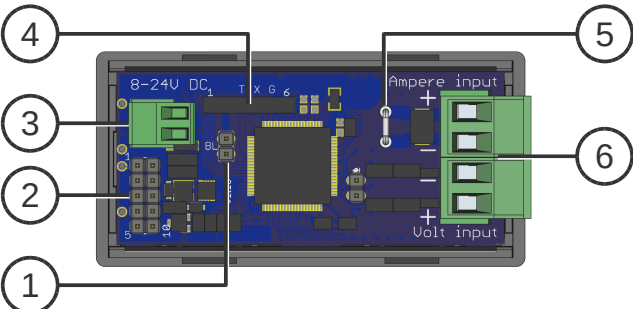	Front 1 Digital measurement value 2 Unit of measurement 3 Upper scale caption 4 Bargraph
	Back 1 Jumper connector BL for activating the backlight 2 Function connectors 3 Supply voltage input 4 Interface 5 Measuring resistor (hot!) 6 Measurement inputs

5. Description

The measurement types volt AC/DC, current AC/DC and frequency are supported. During operation, it is possible to switch between four measurement modes using a switch contact. The currently measured value can be frozen using a switch contact (hold function). Min and max values are recorded. They can be displayed using a switch contact and reset by changing the measurement mode or restarting. The backlight can be switched on or off using a switch contact.

A programming menu that can be operated using a jumper allows further settings. The full scale of the bar display can be programmed for each measurement mode. The

The measured values can be continuously transmitted together with min and max values via the UART interface or via the optionally available USB card. In addition, further programming can be carried out using interface commands, e.g. the selection of the symbols to be displayed.

Carefully insert the device into the panel cut-out from the front and press it towards the panel until the device sits tight. The device is held in place by 4 locking lugs. To ensure IP65 protection (dust and water jet) when mounting in a front panel, use a gasket. Panel thickness: max. 3 mm.

Function connectors:
 Mode1 (J1)
 Mode2 (J2)
 Prog (J3)
 Hold/Prog-Menu (J4)
 MaxMin/Prog-Next (J5)



8. Features

During operation, the following functions can be activated independently of each other by short-circuiting the pins of the corresponding function connectors, e.g. using a jumper or switch:

Backlight

Set jumper to BL: backlight active


Measurement mode

Set jumpers to Mode1/Mode2:

Mode1	Mode2	Measurement mode (factory preset)
		Volt AC
x		Ampere AC
	x	Volt DC
x	x	Ampere DC

Hold

Set jumper to Hold: The current display value is frozen until the jumper is removed or the device is restarted.

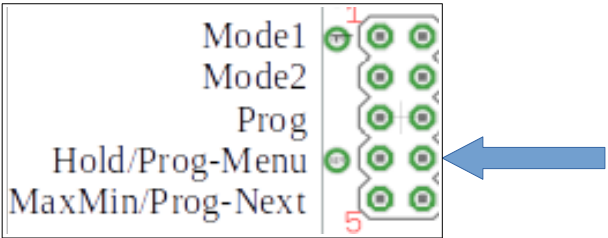

Max/Min mode

1. Set jumper to MaxMin, display shows maximum value
2. Remove jumper, display shows measured value
3. Set jumper to MaxMin, display shows minimum value
4. Remove jumper, display shows current measured value

9. Programming

Set the mode to be programmed at Mode1 and Mode2 using jumpers. Only one additional jumper is required for the following programming.

Upper scale caption

1. Set jumper to Prog, display shows "Prog" and then "bAr"
2. Remove jumper
3. Set jumper to Prog-Next, display shows "bAr", upper scale caption flashes

4. First select the range 0-99 or 100-990 by setting jumper to Prog-Next. (The third digit can only be 0. It is simply made visible or invisible.)
5. Switch to the first digit by setting jumper to Prog-Menu
6. Change the first digit by setting jumper to Prog-Next
7. Switch to the second digit by setting jumper to Prog-Menu
8. Change the second digit by setting jumper to Prog-Next
9. Set jumper to Prog, display shows "Save"
10. Remove jumper

Measurment mode type

1. Set jumper to Prog, display shows "Prog" and then "bAr"
2. Remove jumper
3. Set jumper to Prog-Menu, display shows "Type"
4. Select measurement mode type by setting jumper to Prog-Next
5. Set jumper to Prog, display shows "Save"
6. Remove jumper

Scaling factor

1. Set jumper to Prog, display shows "Prog" and then "bAr"
2. Remove jumper
3. Set jumper to Prog-Menu, display shows "Type"
4. Remove jumper
5. Set jumper to Prog-Menu, display shows "Fctr"
6. Change scaling factor by setting jumper to Prog-Next (1-1000)
7. Set jumper to Prog, display shows "Save"
8. Remove jumper

Supply monitoring threshold

1. Set jumper to Prog, display shows "Prog" and then "bAr"
2. Remove jumper
3. Set jumper to Prog-Menu, display shows "Type"
4. Remove jumper
5. Set jumper to Prog-Menu, display shows "Fctr"
6. Remove jumper
7. Set jumper to Prog-Menu, display shows "SPLY"
8. Set jumper to Prog-Next, display shows threshold
9. Change the flashing digit by setting jumper to Prog-Next (0-9)
10. Switch to another digit by setting jumper to Prog-Menu
11. Repeat steps 9 and 10 until the threshold is set
12. Set jumper to Prog, display shows "Save"
13. Remove jumper

Reset to factory settings

1. Set jumper to Prog, display shows "Prog" and then "bAr"
2. Remove jumper
3. Set jumper to Prog-Menu, display shows "Type"
4. Remove jumper
5. Set jumper to Prog-Menu, display shows "Fctr"
6. Remove jumper
7. Set jumper to Prog-Menu, display shows "SPLY"
8. Remove jumper
9. Set jumper to Prog-Menu, display shows "dFlt"
10. Set jumper to Prog, display shows "Save"
11. Remove jumper

10. Maintenance

Periodically check all external cable connections.

11. Cleaning


Observe the safety instructions before cleaning the device. Clean the device with a dry lint-free soft cloth. Do not use solvents.

12. Specification

Supply	8 - 24 V DC $\pm 10\%$
Backlight supply	Via main supply, activated by jumper
Required external fuse for supply	100 mA, fast (F)
Power consumption	Max. 0.5 W
Main display	4-digit LCD, 12.3 mm digit height
Bargraph display	21 segments, upper scale caption 2-digit plus 0 (0-990)
Measuring range voltage	± 300 V AC/DC, 10 - 500 Hz
Accuracy voltage	± 1 % true RMS
Internal resistance voltage	2 M Ω
Measuring range ampere	± 10 A AC/DC and 5 A AC current transformer, 10 - 500 Hz
Accuracy ampere	± 1 % true RMS
Internal resistance ampere	5 m Ω
Required external fuse for ampere	For rated current, ultrafast (FF)
Measuring range frequency	10 - 3000 Hz
Accuracy frequency	± 1 %
Measuring value update	5 Hz (16 kHz sampling rate)
Connections	

(measuring inputs) - Wire gauge - Wire strip length - Pitch	0.2 – 2.5 mm ² (28 - 12 AWG) 7 mm 5.08 mm
Connections (supply) - Wire gauge - Wire strip length - Pitch	0.13 – 1.3 mm ² (26 - 16 AWG) 6 - 7 mm 3.5 mm
Operating temperature	0 °C to +50 °C
Storage temperature	-20 °C to +70 °C
Operating altitude	0 to 2000 m above sea level
IP code	IP65 (front), IP00 (back)
Dimensions	36 mm × 72 mm × 34 mm
Panel cut-out	33 mm × 68 mm
Mounting depth	30 mm (with plugs, cable direction rear facing)
Net weight	44 g

13. Dimensions [mm]

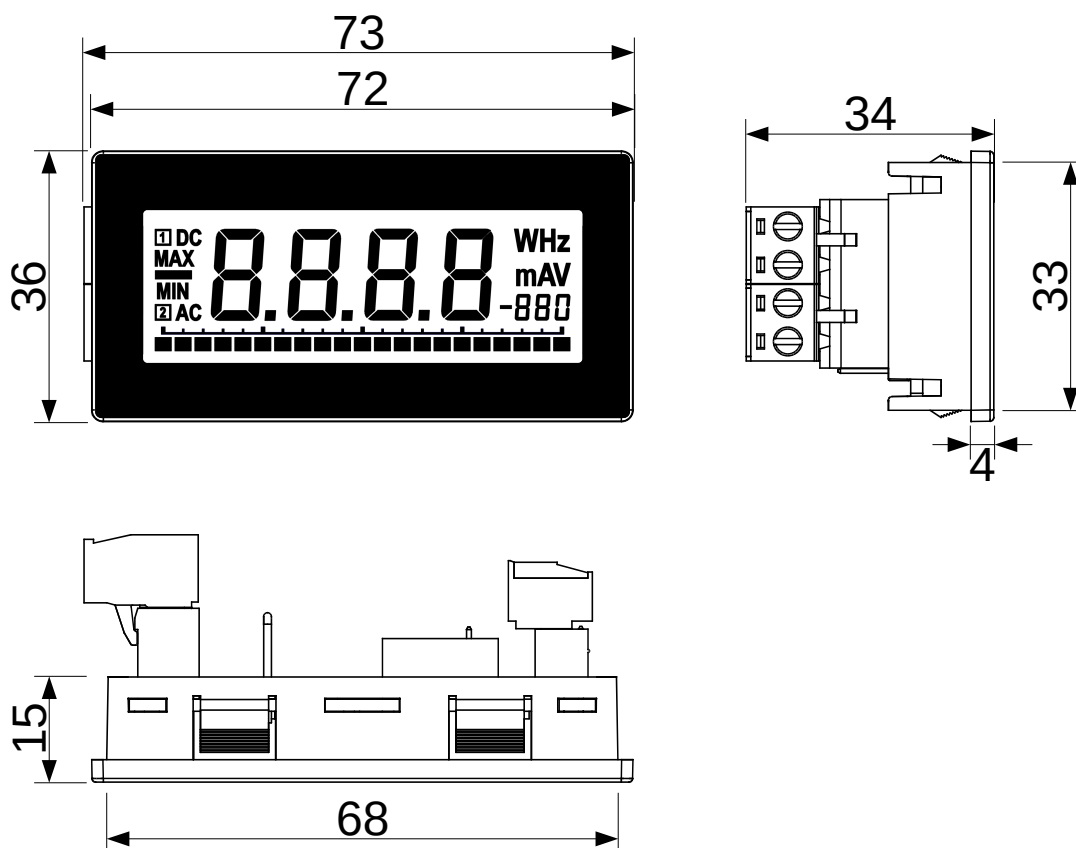

14. Available accessories

- TDE Instruments Digalox® EX-USB USB interface
- ENTES ENT.A Current transformer with 5 A secondary current

15. Contact information

TDE Instruments GmbH, Gewerbestraße 8, D-71144 Steinenbronn

Phone: +49 7157 20801, Technical support: +49 351 84127746

E-mail: info@tde-instruments.de

Internet: www.tde-instruments.de, www.digalox.com