


# AIR PIX

## QUICK FLIGHT GUIDE

### STEP 1

Scan the QR code to download AirSelfie app from the Apple App Store or Google Play. Turn the AIR PIX on by holding the on button for 2-3 seconds.

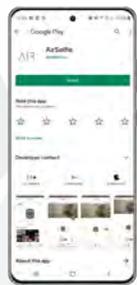

### STEP 2

Select an AirSelfie and follow the in-app prompts to connect your phone to your AIR PIX via a wi-fi connection. Then calibrate your AIR PIX.

### STEP 3

After you calibrate, tap the Camera icon then scroll across to AutoFly on the bottom of your screen. When using the AutoFly mode, it's very important to be in a well-lit area, making sure to keep the main source of light in front of you and have at least 8 feet of open space.



### STEP 4

Capturing your first selfie in AutoFly. Press the Gold Control Button in the middle of the screen and the propellers will start to gently spin. Gently toss the AIR PIX out in front of you with the logo facing you. When the AIR PIX finds your face it will blink twice and when it is about to take a picture it will flash rapidly. If the AIR PIX cannot find your face, it will softly land. Move to a better lit area and try again.



- Dip down for forward
- Tip up for backward



- Tilt left to go left
- Tilt right to go right



### STEP 5

You can use Manual Mode in either portrait (default) or game mode. Press to launch. Press while slowly tilting your phone from side to side, forward and back to control the AIR PIX. Press to land.

Check out the in-app video tutorials for more tips.

### STEP 6

View, edit and share images in the Gallery.



## Button Reference



Outdoor Mode



Indoor Mode



Launch



Land



Photo In Manual Mode



Video In Manual Mode



Game Mode



Orientation In Game Mode



Capture Me



Number of Pictures



Control Button



Tutorials



Photo In AutoFly Mode