

# USER MANUAL

**CD-Radio with  
CD / Cassette / FM / AUX-IN**

**Model Nr.: RCR2260**



Read the entire instructions for the device carefully before using the product. Keep these for future use.



# IMPORTANT NOTES

---

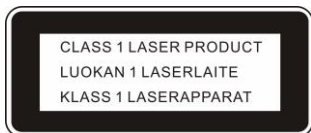 
## INTRODUCTION

- Thank you for buying this product.
- Please read through these operating instructions, so you will know how to operate your equipment properly. After you finished reading the instructions manual, put it in a safe place for future reference.

## CAUTION

Use of controls or adjustment or performance of procedures other than those specified herein may result in hazardous radiation exposure.

## DANGER



This Compact disc player is classified as a Class 1 LASER PRODUCT. THE CLASS 1 LASER PRODUCT label is located on the rear exterior.

**NOTE:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications.

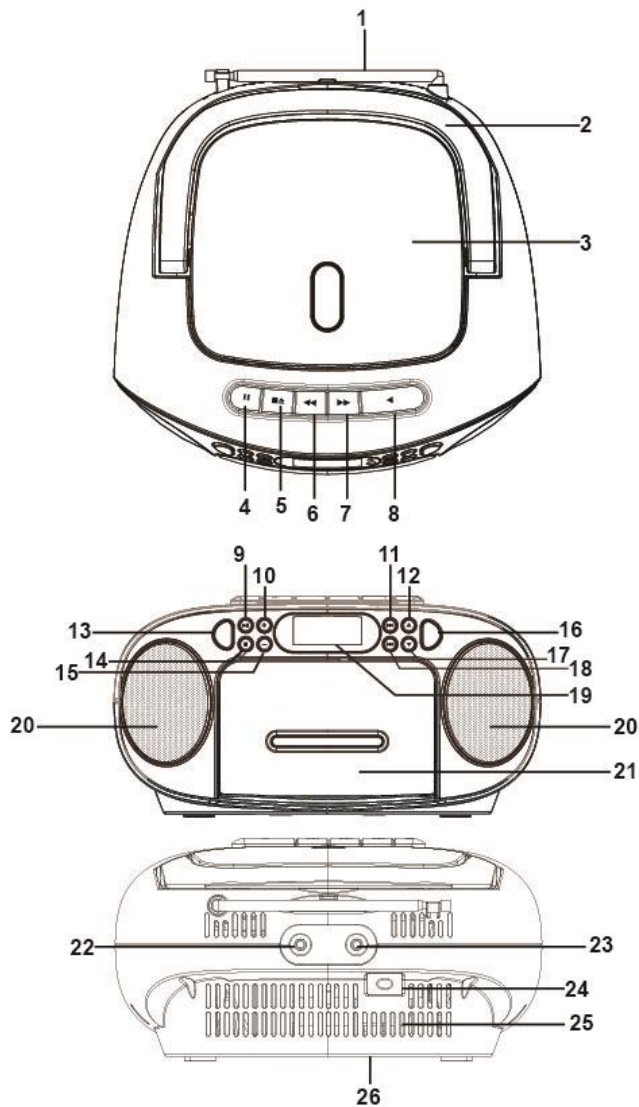 
- Avoid installing the unit in locations described below:
  1. Places exposed to direct sunlight or close to heat radiating appliances such as electric heaters, or other equipments that radiate too much heat.
  2. Places subjected to constant vibration.
  3. Unventilated or dusty places.
  4. Humid or moist places.
- Operate buttons and switches as instructed in the manual.
- Before turning on the power for the first time, make sure that the power cord is properly installed and the voltage switch is correctly set.
- Store your CD or other devices in a cool area to avoid damage from heat.

**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). DO NOT OPEN THE UNIT. ANY SERVICING PLEASE REFER TO QUALIFIED SERVICE PERSONNEL.





## WARNING:

- Remove batteries if exhausted or if they will not be used for a long period.
- The incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst. Therefore:
- Do not mix battery types, e.g. alkaline with zinc carbonate.
- When inserting new batteries, replace all batteries at the same time.

## LOCATION OF CONTROLS



## NAMES OF CONTROLS

- |  |  |
|--|--|
| 1. FM ANTENNA  | 14. STOP BUTTON  |
| 2. HANDLE  | 15. M.- BUTTON   |
| 3. CD DOOR   | 16.  /FUNC. BUTTON  |
| 4. CASSETTE PAUSE KEY  | 17. VOLUME - BUTTON  |
| 5. CASSETTE STOP/EJECT KEY   | 18. TUN.- /  BUTTON |
| 6. CASSETTE FAST FORWARD KEY   | 19. LCD DISPLAY  |
| 7. CASSETTE REWIND KEY   | 20. SPEAKERS   |
| 8. CASSETTE PLAY KEY   | 21. CASSETTE COMPARTMENT   |
| 9.  /SCANBUTTON     | 22. AUX IN JACK  |
| 10. M.+ BUTTON   | 23. HEAD PHONE JACK  |
| 11. TUN.+ /  BUTTON | 24. AC SOCKET  |
| 12. VOLUME + BUTTON  | 25. VENTILATION HOLES  |
| 13. PROG./M./P-MODE BUTTON   | 26. BATTERY COMPARTMENT  |

## POWER SOURCE

This unit is designed to be operated on AC/DC.

## AC OPERATION

Plug the tail of AC power cord into AC socket on unit and the plug into household AC outlet. The batteries will be automatically disconnected.

## DC OPERATION



Open the BATTERY COMPARTMENT DOOR. Install 6 pcs UM-2/C size batteries (not included) into compartment. Please follow correct polarities as indicated.


## CAUTION

Remove batteries if they are flat or not being used for a long period of time.  
Batteries contain chemical substances, so they should be disposed of properly.

## BASIC FUNCTIONS

### TURNING THE UNIT ON/OFF

Press the /FUNC. button to turn the unit on, press and hold the /FUNC. button to turn the unit off.

**Note:** In AUX/CD /TAPE mode, when the unit is not providing the main function for 15 minutes, the unit will automatically switch into standby mode. Press the /FUNC. button to turn on the unit again.

Please note that low volume setting in the audio source may be recognized as "no audio signal", this will affect the capability of signal detection from the device and can also originate an automatic switch into standby mode. If this happens please reactive the audio signal transmission or increase the volume setting on the audio source player in order to resume playback.

**Electrostatic Discharge hints**-The unit may reset or many not reset to normal operation mode due to electrostatic discharge, just switch if off and reconnect again.

## ADJUSTING VOLUME

Press the volume+/- volume-button to increase or decrease volume.

## HEADPHONE JACK

For private listening, connect a 3.5mm headphone (not included) to the HEADPHONE jack. The SPEAKER will be automatically disabled.

## HEADPHONE WARNINGS:

Set the volume of the device to minimum before using headphones. A volume that is set too high can lead to hearing impairment / damage over a long period of time. Therefore, to protect your hearing, use a comfortable room volume.

# USING THE CASSETTE

---

## UNDERSTANDING THE BUTTONS

**PLAY** - Press to play cassettes.

**REWIND** - From stop mode, press to rewind the tape toward the beginning.

**F.FWD** - From stop mode, press to advance the tape toward the end.

**STOP/EJ.** - Press to stop current tape activity or to open the cassette compartment door when no buttons are active.

**PAUSE** - Press to interrupt tape play mode. Press the second time to resume tape play mode.

## PLAYING A CASSETTE TAPE


 

 
 


1. Press the **⏻/FUNC.** button on unit to select TAPE mode.
2. Press STOP/EJ. Key to open the cassette compartment door.
3. Insert cassette tape into the compartment with the open edge facing up and the full reel on the right.
4. Close the door securely.
5. Press REWIND or F.FWD to move tape to the desired starting point.
6. Press PLAY key to begin playing the tape.
7. Adjust the volume to your desired listening level.

## AUTOMATIC STOP FEATURE


When the cassette deck is operating in play mode and the end of the tape is reached, the unit automatically shuts itself off and returns all buttons to the off position.

## RADIO OPERATION

---

 

1. Press the /FUNC. button on unit to select the FM function.
2. Tune to desired station by pressing the TUN.+/ or TUN.-/ button on unit, the display will show the band frequency. Example: **FM 97.10** MHz. If the radio receive Stereo signal, "ST" will show on the display.
3. Press and hold the TUN.+/ or TUN.-/ BUTTON, the unit will scan the frequencies until a broadcasting station strong enough for good reception is found.
4. Extend FM TELESCOPIC ANTENNA to its full length and gently move the unit back and forth to get the best reception, or place the unit in an open location.
5. To turn off the radio, press the /FUNC. button to select other functions, or press and hold the /FUNC. button to turn off the unit.

### RADIO AUTO SCAN (SEARCH)

Press the  /SCAN button on unit, the unit will conduct auto scan and program until having found a strong signal. The unit will start to broadcast from the P01 after searching finished. Use the **M.+** or **M.-** button to choose between the preset stations.

### RADIO STATION MEMORY OPERATION

You may pre-store 30 (FM) radio stations in memory for your preference.

1. Press the TUN.+/ or TUN.-/ button to select the first desired station. Then press and hold the **PROG./M./P-MODE** button on unit, "P01" will show on the display.
2. Use **M.+** or **M.-** button to choose the desired sequence you want to store, then press the **PROG./M./P-MODE** button on unit to confirm.
3. Search another station, repeat steps (1) & (2) until all desired stations stored. Up to 30 stations can be programmed.
4. To choose between the stored stations, press the **M.+** or **M.-** button.


## CD OPERATION

---

### Discs for Playback

This system only can playback digital audio CD, finalized digital audio CD-Recordable (CD-R) discs, finalized digital audio CD-Rewritable (CD-RW) discs.

### LOADING A DISC

1. Press the /FUNC. button on until to select "CD" mode.
2. Press the OPEN/CLOSE button to open the CD door, "OP" will be shown on the display.
3. Place an audio CD DISC into the tray with the front side facing up.
4. Close the CD door.  
The display will show a flashing "- - -", then the total number of tracks and the playback will start from the first track.
5. To remove the CD, press **STOP** button and press OPEN/CLOSE button to open CD door, the display will show "OP". Hold the CD by its edges, and carefully take it out.

**Note:**

- ✧ Make sure the disc is stopped before opening the CD DOOR.
- ✧ To ensure good system performance; wait until the unit completely reads the disc before proceeding.
- ✧ If no disc loaded into the tray, or the disc is unreadable, the display will show "NO".

**PLAYING A DISC**

1. The unit will start playback from track 1 after reading finished. The track no. and play time would be shown on the display.  
To interrupt playback, press the **▶II** button. The play time will flash on the display.  
To resume playback, press the **▶II** button again.
2. To stop playback, press the **STOP** button, the total number of tracks appears on the display.

**SELECTING A DESIRED TRACK/PASSAGE****To select a desired track**

Press the TUN.+/**▶▶** or TUN.-/**◀◀** button in stop mode or during play until the desired track appears on the display. It will start play automatically. If the unit is in stop mode, press **▶II** to start play.

**To search for a particular passage during playback (track scanning at high speed)**

Press and hold the TUN.+/**▶▶** or TUN.-/**◀◀** button to scan the current playing track at high speed until desired point passage, and then release the button. Playback will start again from this point.

 

**PROGRAM TRACKS**

Programming tracks of disc are possible when playback is stopped. Up to CD 20 tracks can be stored in the memory in any order.

 

1. In stop mode, press the **PROG./M./P-MODE** button, the P01 will be on and "PROG" will flash on the display.
2. Press the TUN.+/**▶▶** or TUN.-/**◀◀** button to select the first desired track to be programmed. Press the **PROG./M./P-MODE** button to enter. The display changes to show **P02**.
3. Repeat steps 1 & 2 to store other desired tracks until all tracks are programmed.
4. Press the **▶II** button to start playback from the first programmed track.
5. Press the **STOP** button to stop program playback. To clear the program, you may press the **STOP** button when the disc stopped and open the CD compartment lid, program will be erased.

## REPEAT PLAY

### To Repeat a Single Track

1. Press the **PROG./M./P-MODE** button once in play mode, “” will flash on the display.  
The current track will be played over and over again until you press the **STOP** button.
2. To cancel repeat play, Press the **PROG./M./P-MODE** button until the “” disappears from the display.

### To repeat all the Tracks

1. Press **PROG./M./P-MODE** button twice in play mode, “” shows steady on the display, all tracks on the disc will be played repeatedly until the **STOP** button is pressed.
2. To cancel repeat play, Press the **PROG./M./P-MODE** button until the “” disappear.

## RANDOM PLAY

Press the **PROG./M./P-MODE** button in play mode till the “**RDM**” shows steady on the display, the random play will start from next track automatically(or press CD skip forward button), until all tracks are played over and then it will stop. Press the **PROG./M./P-MODE** button again until the “**RDM**” disappears from the display to cancel.


## INTRO

Press the **PROG./M./P-MODE** button on unit in play mode till the “**INTRO**” shows steadily on the display, the intro play will start and scan 10 seconds for every track. To cancel intro play, press the **PROG./M./P-MODE** button until “**INTRO**” disappears from the display.

## AUX-IN OPERATION

---

This unit has provided special AUX-IN jack, through this jack other audio sources can be connected to this unit and be amplified.

1. Press the  **/FUNC.** button to select “AUX” mode.
2. Connect the audio cable into the AUX-IN jack and the other end connect to the AUDIO OUT jack of the external audio source.
3. Adjust the volume of the main unit to your desired level.

Note: In Aux-in mode, Proceed play/ pause and next/ previous are controlled by the connected external device



# COMPACT DISC MAINTENANCE

1. Always use a compact disc bearing the mark as shown.



2. Notes on handling discs

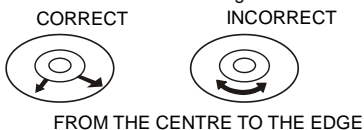 
- Removing the disc from its storage case and loading it.
- Do not touch the reflective recorded surface.
- Do not stick paper or write anything on the surface.
- Do not bend the disc.

3. Storage

- Store the disc in its case.
- DO not expose discs to direct sunlight or high temperatures, high humidity or dusty places.

4. Cleaning a disc

- Should the disc become soiled, wipe off dust, dirt and fingerprints with a soft cloth.
- The disc should be cleaned from the center to the edge.



- Never use benzene, thinners, record cleaner fluid or anti-static spray.
- Be sure to close the CD door, so the lens is not contaminated by dust.
- Do not touch the lens.

# SPECIFICATIONS

---

## GENERAL

Power Source:	AC 100-240V~60/50Hz
	DC 9V 1.5V UM-2/C x 6pcs
Power consumption	13 Watts
Dimensions	Approx.230mm (L) x 216mm (W) x 115mm (H)
Operation temperature	+ 5°C - + 35°C

## RECEIVER SECTION

Antenna	FM rod antenna
FM Frequency Range	87.5-108MHz

## COMPACT DISC SECTION

Optical Pickup	3-Beam Laser
Frequency Response	100Hz - 16KH z

## AUDIO SECTION

Power output	12 Watts x 2
Aux Jack	3.5mm
Phone Jack	3.5mm

## ACCESSORIES

Instruction Manual	1
Power cord	1

Specifications are subject to change for continuous improvement, we reserve the rights to modification without prior notice.

**BATTERIES AND RECHARGEABLE BATTERIES MUST NOT BE DISPOSED OF WITH HOUSEHOLD WASTE! NON-PROFESSIONAL DISPOSAL OF BATTERIES AND RECHARGEABLE BATTERIES CAUSES ENVIRONMENTAL POLLUTION / DAMAGE.**

EVERY CONSUMER IS REQUIRED BY LAW TO RETURN BATTERIES AND ACCUMULATORS AT THE END OF THEIR WORKING LIFE CYCLE TO APPROPRIATE COLLECTION POINTS, SUCH AS THEIR MUNICIPALITY/BOROUGH OR RETAIL OUTLET. DROP-OFF AT COLLECTION POINTS IS FREE OF CHARGE. BY HANDING THEM IN AT COLLECTION POINTS, BATTERIES AND ACCUMULATORS ARE RECYCLED AND THUS DISPOSED OF IN AN ENVIRONMENTALLY FRIENDLY WAY.

DISPOSING OF BATTERIES AND RECHARGEABLE BATTERIES IN HOUSEHOLD WASTE DOES NOT ENSURE ENVIRONMENTALLY FRIENDLY DISPOSAL AND MAY CAUSE DAMAGE TO THE ENVIRONMENT.

**BATTERIES AND ACCUMULATORS MUST BE REMOVED FROM THE DEVICE BEFORE DISPOSAL. PLEASE RETURN ONLY IN DISCHARGED CONDITION!**

**\*) MARKED WITH:**

**CD = CADMIUM,**

**HG = MERCURY,**

**PB = LEAD**

## **DISPOSAL INSTRUCTIONS**



This symbol on the product or in the instructions means that the device as well as electrical and electronic devices and batteries must be disposed of separately from your household waste at the end of their service life. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or the dealer where you purchased the product.

## **Simplified EU declaration of conformity**

Hereby, UltraMedia GmbH & Co. Handels KG declares that the radio equipment type RCR2260 is in compliance with Directive 2014/53 / EU.

The full text of the EU Declaration of Conformity is available at the following internet address.

<https://www.ultramedia.de/produktansicht/CDR2260.html>

We hope you enjoy using the device.

Your UltraMedia team



# WARRANTY



Dear Customer,

Thank you for choosing one of our products. Our products undergo precise quality control in the course of production. If one of our devices gives you cause for complaint, or you have questions about one of our devices, please call our customer support.

We give a 36 month warranty on TV and SAT devices, and a 24 month warranty on portable DVD and audio devices from the date of purchase. Outside of the warranty, we offer you a paid repair based on a cost estimate. Please contact our customer support before submitting.

The warranty relates to material and production defects. Your device will be repaired or replaced during the warranty period. Unfortunately, UltraMedia cannot reimburse the purchase price. Damage caused by improper use, the use of third-party accessories, falls, dust, water damage and signs of wear (e.g. scratches, optical wear and tear) caused by the customer or external influences are excluded from the guarantee.

In order to assert the warranty claims, send the device with all accessories, a copy of the invoice and the description of the fault to the address given below. Devices that do not have a proof of purchase cannot be guaranteed. Please do not forget to include your full address and a telephone number / email address for any queries.

Shipping to us takes place at your own expense. Unpaid parcels cannot be accepted and are returned to the sender.

Please pack the device securely for transport. UltraMedia assumes no liability for damage in transit that occurs on the way to us. After receiving your submission, we will process your device as soon as possible and send it back to you.

Before sending your device in, please contact our customer support or your specialist dealer, as many problems can also be solved over the phone.

UltraMedia GmbH & Co. Handels KG  
 Friedrich-Penseler-Str. 28  
 D-21337 Lüneburg  
[www.ultramedia.de](http://www.ultramedia.de)

[service@ultramedia.de](mailto:service@ultramedia.de)  
 Tel.: +49 / (0) 4131/9239-20  
 Mo.-Do.: 08:00-17:00  
 Fr.: 08:00-14:30