



NEEDED TO START (EXCL.)

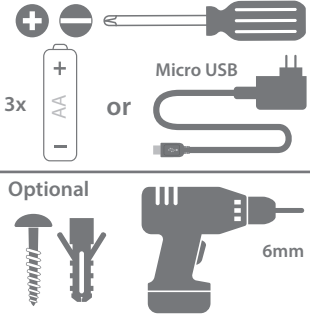


BOX CONTENT | INHALT | CONTENUS | INHOUD DOOS | CONTENUTO | CONTENIDO DE LA CAJA

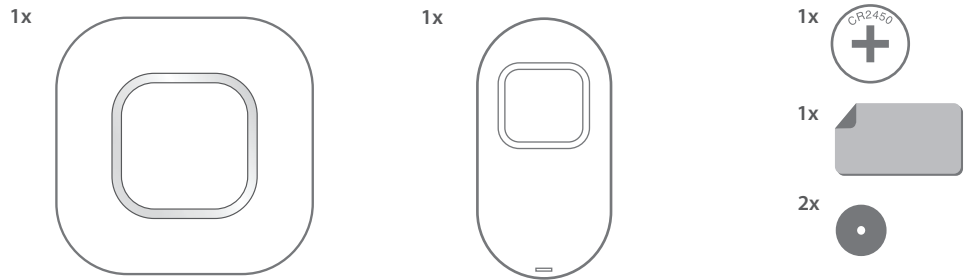


FIRST SET-UP | ERSTEINRICHTUNG | PREMIÈRE CONFIGURATION | EERSTE INSTALLATIE | PRIMO SET-UP | PRIMERA CONFIGURACIÓN


1

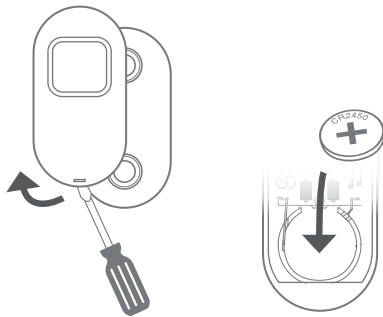

2

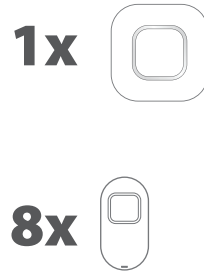


3

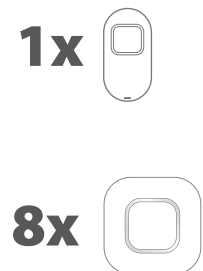

CHOOSE INSTALLATION METHOD

2A

Batteries

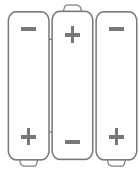

WARNING: DO NOT USE USB WHEN INSERTING BATTERIES

2B


Micro USB



WARNING: DO NOT INSERT BATTERIES WHILE USING USB

FIRST SET-UP USING BATTERIES


2A

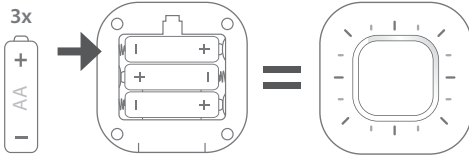

or


FIRST SET-UP USING MICRO USB

2B

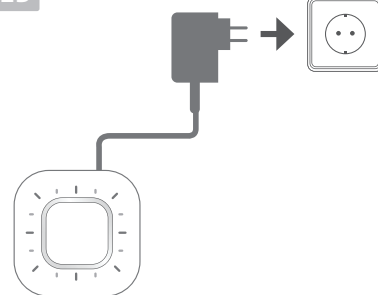


FIRST SET-UP | ERSTEINRICHTUNG | PREMIÈRE CONFIGURATION | EERSTE INSTALLATIE | PRIMO SET-UP | PRIMERA CONFIGURACIÓN

3

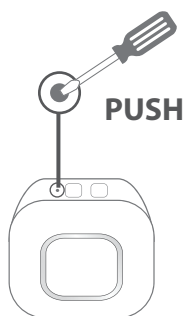


4

HOLD → FLASH

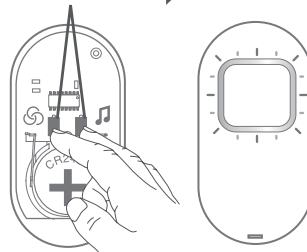

5

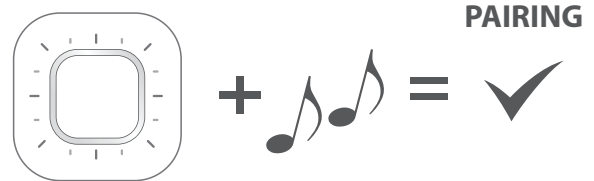

FEATURES | EIGENSCHAFTEN | CARACTÉRISTIQUES | KENMERKEN | CARATTERISTICHE | CARACTERÍSTICAS

--	--	--	--


FEATURES | EIGENSCHAFTEN | CARACTÉRISTIQUES | KENMERKEN | CARATTERISTICHE | CARACTERÍSTICAS

<p>COLOUR</p>	<p>1</p>	<p>8</p>	<p>3</p>
----------------------	----------	----------	----------

TROUBLESHOOTING | FEHLERBEHEBUNG | RÉOLUTION DE PROBLÈMES | PROBLEMEN OPLOSSEN | RISOLUZIONE DEI PROBLEMI | SOLUCIÓN DE PROBLEMAS

<p>RESET</p> <p>PUSH</p> <p>hold 10 sec</p>	<p>2</p> <p>RESET ✓</p>	<p>RESET</p> <p>HOLD 5 sec → 2X FLASH within 10 sec.</p>	
--	--------------------------------	---	--

WWW.CHBYRON.EU

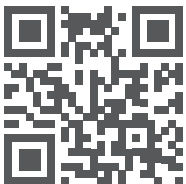

Or contact us directly:

smartwares[®]
Europe
Jules Verneweg 87
5015 BH Tilburg
The Netherlands
www.chbyron.eu

Find us on



CE Conforms to all relevant European Directives.

Frequency band: 868.4 MHz
Maximum radio-frequency power: +5.92dB
Range: 200 meters

Wireless Doorbell DBY-24721/DBY-24729
Battery: 3xAA 4.5V 400mA
Power: USB 5V 2A Max
Indoor Use Only



Push button - DBY-24510

Power supply: 1 x CR2450 3V
IP44 Weather Resistant

