EMO-730 Current Output Module

Code : EMO-730 0/4-20 mA === Current output module

Function : Current output

Output rating : 0 to 20 mA === max.load 600 Ohm

Dielectric strength : From device supply to module output 2kV ~ From device ground to module output $_$ 500V \sim

> : From device supply to module output >999.9MOhm From device ground to module output >999,9MOhm

Overall size of the equipment : 14mm x 52,5mm x 41,4mm : ESM-7750, ESM-7700 Applicable products

Module labels

Insulation resistance






Modul presenting label







Before the module installation you must read instruction manual of which applicable product,

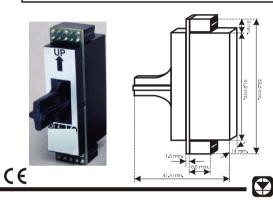

PACK LIST

Please visual check

 
- 1 piece of EMO-730 Current output module
- 1 piece of EMO-730 module presenting label

Thank you very much for buying EMKO's product.






Installing and Pulling Out Input/Output Modules





 Suppress to the lock pins where top and bottom of the controller.



Pull the cover case with your other hand from front panel to rear



Pull out the cover case from the controller



Slide input/output modules into socket. Pull out the module from it's socket, instead of this module install the new one or other module user wants to use.




Replace the cover case by taking care of the terminal numbers should be at right orientation.



After adding or changing modules to the unit, these changes must be taken into consideration while mounting of the unit to the system. If mounting is incorrect, it can cause accidents to harm system, operator or person who does the mounting. Responsibility of these kind of harmful events belongs to the user.



After the module installed to the device successfully, please to stick on module presenting label where to participate in the module packet, to suitable module presenting box where on the device label.

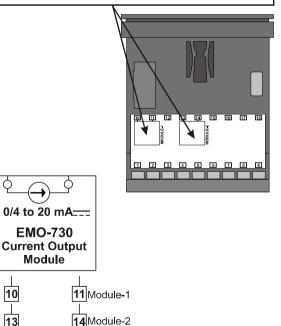

Module presenting label

10

13



CE

