

MPLAB XC16 Compiler PRO Dongle License

Part Number: SW006022-DGL

**BUY
IT NOW**



Share

The MPLAB[®] XC16 C Compiler is a full-featured, highly-optimized ANSI C compiler for all 16-bit PIC Microcontroller families. This compiler integrates into Microchip's MPLAB X IDE, is compatible with all Microchip debuggers and emulators, and runs on Windows[®], Linux[®] and macOS[®].

The MPLAB XC16 PRO Compiler Dongle License unlocks the full potential and performance of all possible optimizations with the advantage of being interchangeable among workstations and highly portable – not tied to a PC or workstation. Some of its features include:



- License file is installed on a USB device
- Intended for multiple users and mobile use – plug into the workstation's USB and go
- Includes unlimited updates to new compiler versions without the need for HPA (perpetual license)
- One dongle license is needed for each compiler type – MPLAB XC8, MPLAB XC16 and MPLAB XC32/XC32++
- Replaceable for a fee – **only dongle licenses that have been registered in a mySoftware account are eligible**
 - Register your dongle here: www.microchip.com/mysoftware
 - Replacements can be obtained through [Technical Support](#) and can only be replaced once

For more information and documentation, go to: www.microchip.com/mplabxc .

Note: This compiler license can only be used with the following versions of MPLAB X IDE and MPLAB XC C Compilers:

- MPLAB X IDE version 3.55 or later
- MPLAB XC8 C Compiler version 1.41 or later
- MPLAB XC16 version 1.31 or later
- MPLAB XC32 version 1.43 or later

If there is a compiler license file previously installed on your workstation, remove it before using a dongle license.



Features | Package Contents | Host System Requirements

- License file is installed on a USB device
- Intended for multiple users and mobile use – plug into the workstation's USB and go
- Includes unlimited updates to new compiler versions without the need for HPA (perpetual license)

- One dongle license is needed for each compiler type – MPLAB XC8, MPLAB XC16 and MPLAB XC32/XC32++
- Replaceable for a fee with registration in mySoftware account

Documentation & Software

[Back To Top](#)

Documents	Last Updated	Size	
MPLAB XC16 User's Guide for Embedded Engineers Code Example	12/7/2016 10:18:50 AM	398KB	
MPLAB XC16 User's Guide for Embedded Engineers	11/29/2016 11:17:33 AM	593KB	
MPLAB XC16 User's Guide	8/3/2016 3:26:18 PM	2MB	
MPLAB XC16 Assembler, Linker and Utilities User's Guide	8/2/2016 11:13:01 AM	1MB	



[Products](#) | [Applications](#) | [Design Support](#) | [Training](#) | [Sample and Buy](#) | [About Us](#) | [Contact Us](#) | [Legal](#) | [Investors](#) | [Careers](#) | [Support](#)

©Copyright 1998-2017 Microchip Technology Inc. All rights reserved.