

GB Dismantling Instructions

Rechargeable Light Bar with Touch Sensor

Item no: 2373341

1 Dismantling recommendations

- Disconnect from power supply.
- Ask help from a professional if needed.

2 Dismantling instructions

Step 1

Overview




Step 2

Remove the screws from each end.



Step 3


Carefully pull the charging port out of the casing and remove the connectors.

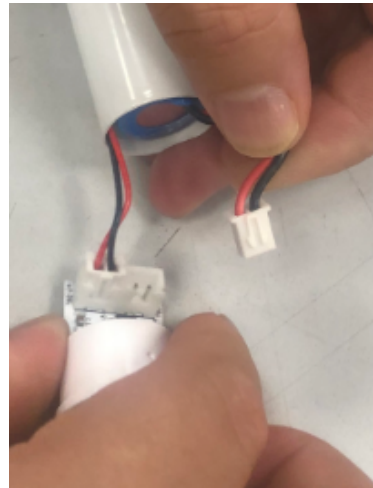

Step 4

Carefully slide the battery, PCB, and charging port out of the housing.



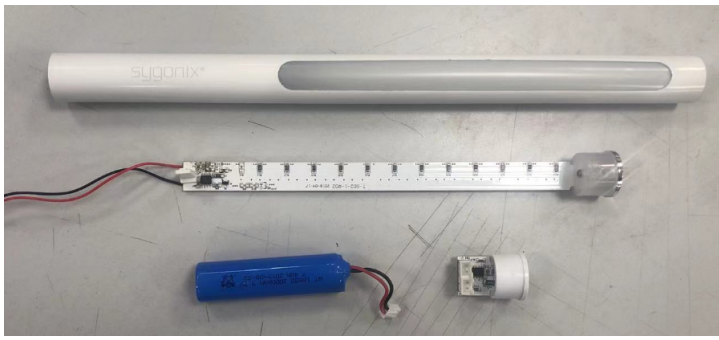

This is a publication by Conrad Electronic SE, Klaus-Conrad-Str. 1, D-92240 Hirschau (www.conrad.com).
All rights including translation reserved. Reproduction by any method (e.g. photocopying, microfilming or the capture in electronic data processing systems) requires prior written approval from the editor. Reprinting, also in part, is prohibited.
This publication reflects the technical status at the time of printing.
Copyright by Conrad Electronic SE.
*2373341_V1_0622_hs_en 9007199821739147 I2/O1 en