

Exclusive Board

Connection and important information

1 Important information

Before commissioning the device please read through the following safety instructions and the user manual thoroughly, comply with these carefully and keep them with the device for later reference. If you later give this device to another user, please also give them this manual.

1.1 Safety instructions

Please note that this product is not a child's toy within the meaning of Directive 2009/48/EC. If you let your children use the device, instruct them accordingly and ensure that the device is used only as intended.

- Keep the packaging bags and film away from babies and small children, as there is a danger of suffocation!
- In order to avoid damage, do not expose the device to heat, e.g. from radiators or from direct sunlight, and do not expose it to any kind of moisture.
- In order to avoid malfunctions, do not operate the device on or near devices that create magnetic fields or electromagnetic radiation, such as for example televisions, loudspeakers, mobile and cordless telephones, WiFi facilities etc.
- Do not open the device under any circumstances. It does not contain any parts which can be serviced. In the event of malfunction, contact the service address listed.

1.2 Notes on storage and cleaning

- Please note that this device is made from real wood. Handle the wood carefully, always store the device where it is dry and do not expose it to direct sunlight.
- When required, clean the device's surface with a slightly damp cloth only, and ensure that no moisture can penetrate into the device.
- Do not use solvents or other aggressive or abrasive cleaning agents, as these can damage the device's surfaces and lettering.

1.3 Notes on the power supply

Only operate the ChessGenius Exclusive with the supplied mains adaptor.


- Input 100–240 V 50/60 Hz, 0.45A max
- Output 9V DC 1A

When using the mains adaptor, please observe the following:

- The power socket should be located close to the device and should be easily accessible.
- The device should not be connected to more power sources than recommended.
- The electrical contacts must not be short-circuited.
- Before cleaning the device, ensure you disconnect the adaptor from the mains.
- Regularly check the product and the mains adaptor for damage, and do not use either of them if they are damaged. Never open them up.
- Please observe any safety information printed on the mains adaptor.

2 Connect Exclusive Board

1. Take the mains adaptor and insert the small connector on the end of the cable into the socket provided on your computer unit.
2. Take the connecting cable. The connectors at the ends are both the same. However, please be aware that the connector can only be inserted into the socket in one position. Proceed carefully. The connector has four narrow pins and one wider pin. Turn the connector so that the wider pin is at the bottom, so that it fits precisely into the socket. The arrow in the picture below shows the wider opening in the socket.
3. Insert the connector both into the board (input on the right-hand side of the chessboard) and also into the socket on the rear of the computer unit.
4. Connect the mains adaptor to a power socket.

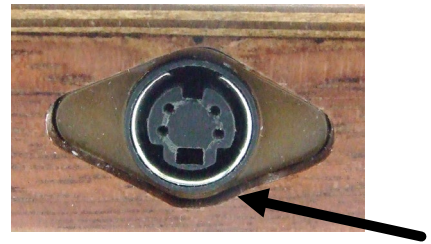

3 Disposal



Dispose of packing materials in an environmentally friendly manner by using the relevant collection containers provided for the purpose.



According to EC Directive 2012/19/EU, the device must be disposed of properly at the end of its service life. Suitable parts of the device will then be recycled, reducing environmental pollution. For more information, please contact your local waste disposal company or your municipal administration.

4 Warranty, servicing and manufacturer's contact data

Details of warranty conditions, warranty handling and other service information can be found on the warranty card that is included separately with the device. Please contact the service address stated there. If you no longer have your warranty card available, please contact our office in Germany, either by telephone or via our website:

Free of charge Service–Hotline (08:00 – 17:00h):

- Germany: +49 (0)800 – 64 55 366
 - Austria: +43 (0)800 – 28 18 29
 - Switzerland: +41 (0)800 – 83 51 28
- mail: support@millennium2000.de

Millennium service centre

Reiherstrasse 2
D–35708 Haiger, Germany
Tel: +49 (0)2773 7441 222
Tel: +49 (0)2773 7441 221

Product development by

MILLENNIUM 2000 GmbH
Heisenbergbogen 1 (Dornach)
D–85609 Aschheim, Germany
www.computerchess.com

NOTE: This product is not protected against the effects of electrostatic charges, strong electromagnetic radiation or other electrical interference, as malfunctioning as a result of these conditions is not critical.

Modification of specifications (especially in respect of technical advances) reserved and errors excepted.

This user manual was carefully compiled, and its contents carefully checked for accuracy. If, despite all expectation, these instructions nevertheless contain errors, this shall not constitute grounds for any claims. This user manual, including excerpts thereof, may not be reproduced without prior written permission.

Copyright © 2020, MILLENNIUM 2000 GmbH, Aschheim, Germany.