

## TO TURN ON

1. First turn on the boat after installing the battery (the ON/OFF switch locates on the top of boat).
2. Turn on the transmitter after installing the batteries. And then the hovercraft and transmitter would be auto-coded.

### ⚠ CAUTION

- Correctly charging battery pack will avoid short circuits. Short circuits will cause overheating, burning of the cords and other damage to the battery pack and charger.
- The Li-ion battery charger should be used for charging one battery pack. Do not use the charger for charging other types of batteries and battery packs.
- Do not use charger as a direct current outlet for other electrical appliances or machines.
- Make sure that the battery pack and charger are kept out of the hands of infants and small children at all times. Do not charge near fires, locations where the temperature is extremely high. Keep water away from battery pack, especially while charging.
- The battery and charger will slightly heat up while charging. Keep area free of obstacles while charging.
- If the power of the battery pack is weak in spite of proper charging, the batteries may be worn out from repeated use. Replace it with a new Li-ion battery pack.
- Disconnect the A/C Charger before making or breaking connections to the battery.
- Only use recommended battery pack.
- **WARNING! DO NOT ATTEMPT TO RECHARGE NON-RECHARGABLE BATTERIES IN CONTROLLER.**
- Use enclosed battery charger for the rechargeable battery pack only.

### ⚠ WARNING

- The charger is not intended for use by children under 8 years old. Charge under direct adult supervision.
- Inspect the charger on a consistent basis, especially the leads and connectors. Do not use if there are signs of damage.
- Never attempt to dismantle or repair the charger. Only use as a Li-ion battery charger. Not suitable as a main adaptor or transformer.
- Never attempt to recharge non-rechargeable batteries – this could result in damage to battery and charger.
- Do not overcharge your battery pack. This will not increase running time and will cause damage to your battery and charger.
- Do not charge near water.

### SPECIAL PRECAUTIONS

- Store and operate this product away from excessive heat and moisture.
- Charge battery pack indoors only.
- Dispose of used Li-ion battery packs correctly. Waste Electrical Products should not be disposed of with household waste. Recycle where facilities exist.
- Never dispose of into a fire.

## CLEANING AND REPAIR

 
If you do not operate the vehicle for a long period of time, remove the battery or the charge will be lost. Please use a clean, damp cloth to wipe down the product.

**Do not leave the boat or the remote controller near heat source or fire.**

**USE GOOD COMMON SENSE WHEN OPERATING, CHARGING OR STORING THE UNIT.**

## 2.4G REMOTE CONTROL BATTERY INSTALLATION

Screw the battery cover at the bottom of transmitter, and then install 2pcs of 1.5V AA batteries (batteries excluded) into the battery compartment, and then screw the cover.

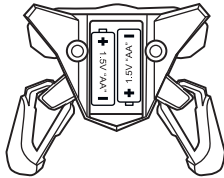


### Battery Precautions:

1. Do not mix new and old batteries.
2. Use batteries of same brand.
3. Always remove batteries when not in use.
4. Before using your hovercraft, make sure the radio controller is with enough battery power. Low battery power will lead to the loss of control of your hovercraft.

## CHARGING THE BATTERY PACK

 1. Join the connector of the charger to the connector of the battery pack.
2. Plug the charger into an electrical outlet.
3. Recharge for about 4 hours.
4. When the recharging is over, plug out the charger from the electrical outlet and detach the connectors.

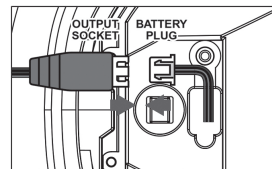

ALLOW MOTOR TO COOL DOWN BEFORE CHANGING TO NEW BATTERY!


### BATTERY CHARACTERISTICS AND RECHARGING TIPS

 Charging the battery for the first time after purchasing. Even after recharging, the playing time can be relatively short. The battery will gradually regain power after 2 or 3 repetitions of usage and recharging.

**RECHARGING: WARNING!**  
USE UNDER THE DIRECT SUPERVISION OF AN ADULT.

**Charge before operating.**

## OPERATING INSTRUCTIONS

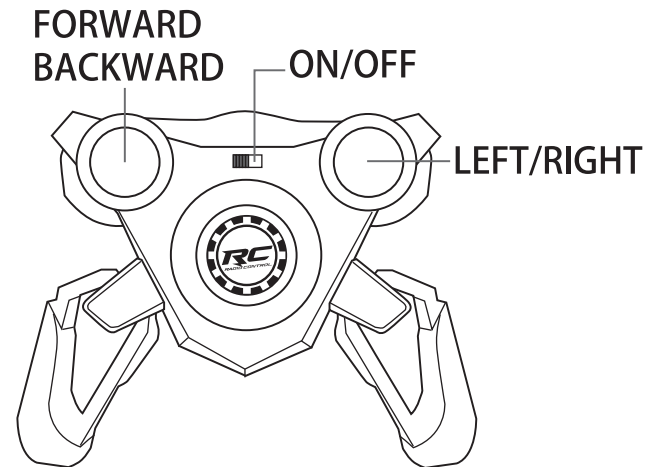

## TROUBLESHOOTING

PROBLEM	CAUSE	REMEDY
Speed control servo does not operate.	Transmitter and/or receiver is not switched on. Transmitter batteries are weak. Improper radio installation.	Switch on. Replace with new batteries. Correct as per radio instruction manual.
Motor does not rotate.	lithium battery capacity is insufficient. Improper radio installation. Loose connectors. Motor trouble.	Recharge lithium battery. Correct as per instruction manual. Make connectors tighter (e.g. with minus screwdriver). Replace with new motor.
Motor rotates but boat will not run. When rotation by hand, propeller feels heavy or does not rotate.	Joint is not installed. Or, screws are loose. Dirt entered rotating parts.	Tighten screws holding joint. Clean and regrease.

## NOTICE

1. Don't play the toy on the road, select a safe place for operating to avoid danger.
2. If abnormal speed or reaction, it may be because of insufficient battery power, please replace new batteries.
3. Please install the battery in a correct polarity.
4. Do not mix new and old batteries together, short-circuited.

**CHOKING HAZARD**-small parts, not for children under 3 years.  
Specifications, colors and contents may vary from illustrations.



MADE IN CHINA

The toys is only to be connected to Class II equipment bearing the following symbol. □