

Ⓞ Dismantling Instructions

WL4600 LED Work Light

Item no: 2483042

1 Dismantling recommendations

- Disconnect from power supply.
- Ask help from a professional if needed.

2 Dismantling instructions

Step 1

Remove the battery pack



Step 2

Remove all back side screws.



Step 3

Remove the side screw,



Step 4

Remove the other side screw.



Step 5

Carefully take the case apart to expose the PCB.




Step 6

Separate the LED casing.



Step 7

Remove the heat sink to access the SMD board.

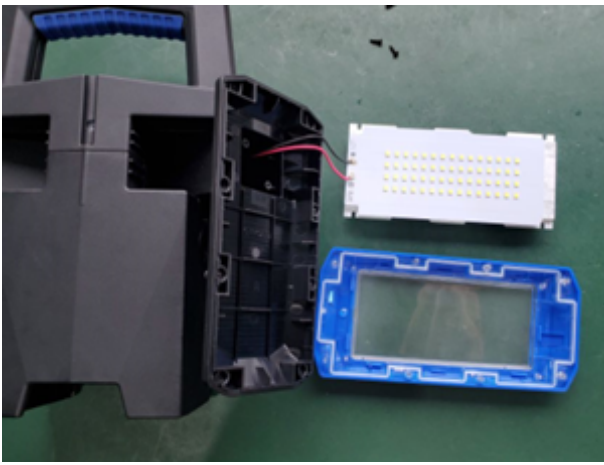

This is a publication by Conrad Electronic SE, Klaus-Conrad-Str. 1, D-92240 Hirschau (www.conrad.com).
All rights including translation reserved. Reproduction by any method (e.g. photocopying, microfilming or the capture in electronic data processing systems) requires prior written approval from the editor. Reprinting, also in part, is prohibited.
This publication reflects the technical status at the time of printing.
Copyright by Conrad Electronic SE.
*2483042_V1_0622_hs_en 567549963 11/01 en