

EN Operating instructions

RACLETTE GRILL

MODEL: RG-8P001

Please read the operating instructions and these notes on safety carefully before you use the appliance for the first time.

Keep the operating instructions in a safe place for later reference, and make sure that you hand over the operating instructions too should you give the raclette grill to a third party.

1. PURPOSE

The raclette grill has been designed exclusively for cooking food such as vegetables, meat and suchlike. It is not suitable for any other purposes!

2. NOTES ON SAFETY

The raclette grill's safety level complies with recognised technical regulations and the Equipment Safety Law. However, we see it as our obligation to familiarise you with the following safety notes:

General notes on safety to prevent the danger of electric shocks

1. Only connect the raclette grill to a standard power supply. Its voltage and frequency must comply with those on the type plate.
2. Only connect the raclette grill to a shockproof socket which has been installed in accordance with the regulations.
3. In order to avoid accidents, never use the same socket for several domestic appliances at the same time.
4. Never pull the plug out of the socket by the wire.
5. Only use the raclette grill indoors and never outdoors.
6. Keep the raclette grill away from heat, direct sunshine, damp and sharp edges.
7. Only use original accessories.

Safety notes on preventing fire and injury when using the raclette grill

8. Caution: when in use, the casing and the removable grill/hotplate heat up – risk of burns! For this reason, always allow the raclette grill sufficient time to cool down before touching it.
11. Place the raclette grill on a flat, heat-resistant surface.
12. Do not position the raclette grill close to highly inflammable materials during use. Inflammable materials are, for example, plastic tablecloths, carpets, cupboards and curtains.
13. Turn off the raclette grill, remove the plug immediately and take the raclette grill to a service point in the following cases:
 - if the power cable or the plug is defective,
 - if the raclette grill has fallen on the floor or has received a hard blow,
 - if the raclette grill has fallen into water.

Please note: please contact a service centre for repairs.

14. Remove the plug:

- after use,
- should you wish to install any attachments,
- before cleaning,
- in the case of malfunction.

15. Do not immerse the raclette grill in water and do not use fluids to clean it.

Note: for further information, please read the chapter entitled "Cleaning and maintenance".

16. Do not operate the raclette grill with wet or damp hands. Should the raclette grill nevertheless become wet or damp: Immediately pull the plug out of the socket. NEVER put your hands in the water!

17. Keep the operating instructions in a safe place for later reference or should you give the raclette grill to a third party.

18. Never try to repair a damaged cable. It must be replaced by the manufacturer, the manufacturer's customer service or a specialist workshop.

Note In order to avoid all risks, all repairs to electrical appliances must be carried out exclusively by people qualified to do so!

3. CAUTION

1. If the supply cord is damaged, it must be replaced by a qualified electrician to avoid any electric hazard.

2. Charcoal or such as fuel cannot be used for this raclette grill; This device has been designed only for home using. It's not designed for commercial using.

4. BEFORE THE FIRST USE

1. Leave the raclette grill on for about 10 minutes without any food on it, to remove the protective layers. A slight build-up of smoke is normal – ensure that the room is well ventilated!
 2. For this purpose lightly grease the raclette pan and the grill/hotplate and put the raclette pan into the storage space before use.
 3. Then clean the raclette pan and the removable grill/hotplate once they have cooled down.
- The device is now ready for use!

5. OPERATION – COOKING

1. Cut up into small pieces or slice all the ingredients for the grill/hotplate and raclette pan.
2. Lightly grease the raclette pan and the grill/hotplate.
3. Put the plug of the raclette grill into a socket.
4. Leave the raclette grill to heat up for about 10 minutes.
5. Place the ingredients to be grilled onto the grill/hotplate. You can use the raclette pan for topping ingredients of your choice (e.g. mushrooms, ham or small pieces of bread) with cheese and baking them.

Caution: in order to avoid damaging the non-stick coating of the grill/hotplate and the raclette pan, please proceed as following: use a wooden spatula or suchlike to turn the food on the grill or to remove it. Please use the original wooden spatula to remove baked food from the raclette pan.

When you have finished, remove the plug from the socket. Allow the raclette grill to cool down before cleaning it in accordance with the instructions in “Cleaning and maintenance”.

6. CLEANING AND MAINTENANCE

1. Always remove the plug from the socket before cleaning the raclette grill and ensure that the raclette grill has cooled down to room temperature.

2. Clean the removable grill/hotplate, the raclette pan and the accompanying wooden spatula in hot, soapy water.

Note: never use a wire brush, sharp objects or scouring agents to clean the raclette grill, otherwise the non-stick coating will be damaged.

3. Use a damp cloth to clean the casing of the device.

4. After use, always keep the raclette grill in a cool, dry place.

8 TECHNICAL DATA

Voltage: 230 V/AC, 50 Hz

Power: 1500 W