

Note: Read the entire instruction manual before you start installation and assembly.

The product is powered by electricity. In order to avoid burns, fire and electric shock and make sure the safe and correct use of the system and maintain the longevity of the overall construction and the built-in electronics, please read the instructions carefully.

 WARNING

 
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge must not use the appliance, unless they're under supervision, understand the hazards involved or they have been thoroughly instructed in the use of the apparatus by a person who is responsible for the safety of these persons.
- Don't leave the cords or plug unorganized in order to prevent tripping hazards.
- Any attempts to reconstruct the construction aren't allowed.
- Do not begin the installation until you have read and understood all the instructions and warnings contained in this installation sheet. If you have any questions regarding any of the instructions or warnings, please contact your local distributor.
- This mounting bracket was designed to be installed and utilised ONLY as specified in this manual. Improper installation of this product may cause damage or serious injury.
- This product should only be installed by someone with good mechanical ability who has basic building experience and fully understands this manual.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- Always use an assistant or mechanical lifting equipment to safely lift and position the equipment.
- Tighten screws firmly, but do not over tighten. Over tightening can cause damage to the items, This greatly reduces their holding power.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.
- Please do not disassemble or change the electronic components of the product without authorization.

Electrical Safety Instructions

- The appliance is only to be used with the power supply unit provided with the appliance. Alterations of the given power unit aren't allowed.
- Never operate the system with a damaged power supply cord or plug. If any parts is damaged, please contact your service agent of purchase for a replacement.
- Never operate the system if it's in moist environment or its electrical components has contact with liquids.
- Don't clean the product while the power is still connected.
- Don't disassemble or replace components while the power is still connected.
- Unplug the appliance when the system isn't in use, and place the power plug out of children reach.

Instruction Manual

**MOTORIZED TV
WALL MOUNT**

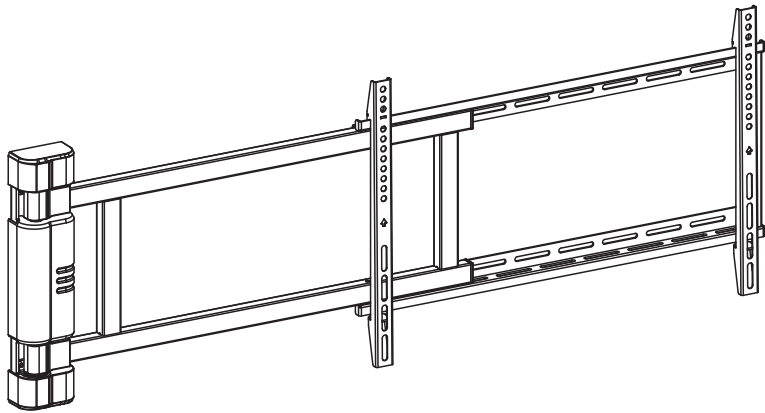


SP-TVM-701

VESA Compatible
200x200 200x300 200x400 300x200
300x300 300x400 400x200 400x300
400x400 600x200 600x300 600x400

75"
MAX
FLAT/CURVED

50kg
(110lbs)
RATED

 The Remote Control Operation Instructions

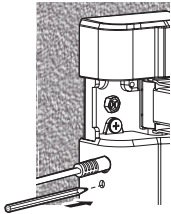

1 Pairing the Remote to the Mount

STEP 1:

Apply power, and then using a pin or other small item (such as a paperclip) press the code button located on the side of the TV Mount. You will hear a “beep” sound after pressing the code button.

STEP 2:

Press , you will hear a series of “beep” sounds for 10 seconds, the remote control is now successfully paired to the TV Mount.

2 Resetting the System

Press and hold  for 5 seconds. The system will start moving automatically, the TV wall mount will move to a 0 degrees position and then stop with a beep sound, which indicates that you successfully reset the system.

3 Storing a TV Mount Position in Memory 1

When the TV Mount is in the desired position, press and hold  for 2 seconds - you will hear a single “beep” sound indicating the position has been successfully saved in Location 1 of the Remote Control.

4 Storing a TV Mount Position in Memory 2

When the TV Mount is in the desired position press and hold  for 2 seconds - you will hear a single “beep” sound indicating the position has been successfully saved in Location 2 of the Remote Control.

5 To recall the first saved position, press , the TV wall mount will automatically swivel to the location 1 position.

6 To recall the second saved position, press , the TV wall mount will automatically swivel to the location 2 position.

7 Press and release , the TV wall mount will swivel to the left, press to stop.

8 Press and release , the TV wall mount will swivel to the right, press to stop.

9 The TV wall mount can be installed on two directions (normal or reverse installation). When you find the swivel direction of the TV wall mount is different from the direction button you pressed, set the remote control by following the process: press and hold for 5 seconds until you hear beep sound, the remote control is now successfully set to operate the mount.

10 Increase the swivel range:

The default swivel range of the TV mount is 0°-90°. If you want a swivel range more than 90°, follow the process:

Step 1: Adjust the TV wall mount to your desired position manually.

Step 2: Press and hold  for 5 seconds until the buzzer sounds one beep. Repeat this step five times until you hear the buzzer make a “beep beep” (2 beeps), this new swivel range is now successfully saved.

Note: The max swivel range is 170°.

Error Indications:

Over-current Protection: The buzzer makes a “beep beep” (2 beeps) once

Sensor indicates the mount is over range: The buzzer makes a “beep beep” (2 beeps) twice

Sensor indicates an operating fault: The buzzer makes a “beep beep” (2 beeps) three times

Unit senses abnormal power: The buzzer makes a “beep beep” (2 beeps) four times

In Front

This repair guide intends to help you identify and solve the minor problems caused by unusual operation of the electric system of our electric TV mounts. The simple procedures in this manual are easy to follow and capable of solving the most problems happened in everyday use.

Error Indication

1. The Buzzer Constantly Gives Out Alarm Sound: The Error Of Positioning Signal

Reset the system by following the instruction manual. If the alarm sound continues, please contact us to replace the product.



Remote Control Problems

1. Abnormal Loss Of Power (Normally Batteries Are Out Of Power After 24hrs Without Using The Remote Control.)

Please contact us to replace remote control.



2. Buttons On Remote Control Don't Work.

Please check if the batteries have power. If the problem isn't solved, please contact us to replace the remote control. If the problem is still not solved after the replacement, please contact us to replace the product.



3. The Insensitivity Of Remote Control

Please replace the batteries. If the problem is still not solved, please contact us to replace remote control.



 
Abnormal Operation: The TV Mount Can't Be Adjusted To 0° Or 170°

Please reset the system by following the instruction manual. If the problem is still not solved, please contact us to replace the product.



Can't Operate

Please check if the power adaptor is properly connected to the product. If so, please turn the power on. If there is no buzzer sound or red light power indication, please check if the power adaptor works properly. If the power adaptor doesn't work, please contact us to replace the power adaptor. If the power adaptor works properly, but the TV mount doesn't work, please contact us to replace the product.



Abnormal Noise

Please contact us to replace the product.



Motor Can't Stop/Anti-Collision Mechanism Slips

Please contact us to replace the product.



A (x1)

B (x1)

C (x2)

D (x1)

E (x1)

F (x1)

G (x1)

H (x1)

I (x5)

J (x1)
4mm

M-A (x4)
M5x14

M-B (x4)
M6x14

M-C (x4)
M6x30

M-D (x4)
M8x30

M-E (x4)
M8x50

M-F (x4)
D5-D8

M-G (x8)
Ø15xØ8x5

M-H (x8)
Ø15xØ8x15

W-A (x6)
ST6.3x55

W-B (x6)
Ø10x45

W-C (x4)
D6

1

90°

X

The swing arm needs to be adjusted according to the size of TV.

$X = L/2 + 330(\text{mm})$

X: Length of swing arm
L: Length of TV

X

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174

175

176

177

178

179

180

181

182

183

184

185

186

187

188

189

190

191

192

193

194

195

196

197

198

199

200

201

202

203

204

205

206

207

208

209

210

211

212

213

214

215

216

217

218

219

220

221

222

223

224

225

226

227

228

229

230

231

232

233

234

235

236

237

238

239

240

241

242

243

244

245

246

247

248

249

250

251

252

253

254

255

256

257

258

259

260

261

262

263

264

265

266

267

268

269

270

271

272

273

274

275

276

277

278

279

280

281

282

283

284

285

286

287

288

289

290

291

292

293

294

295

296

297

298

299

300

301

302

303

304

305

306

307

308

309

310

311

312

313

314

315

316

317

318

319

320

321

322

323

324

325

326

327

328

329

330

331

332

333

334

335

336

337

338

339

340

341

342

343

344

345

346

347

348

349

350

351

352

353

354

355

356

357

358

359

360

361

362

363

364

365

366

367

368

369

370

371

372

373

374

375

376

377

378

379

380

381

382

383

384

385

386

387

388

389

390

391

392

393

394

395

396

397

398

399

400

401

402

403

404

405

406

407

408

409

410

411

412

413

414

415

416

417

418

419

420

421

422

423

424

425

426

427

428

429

430

431

432

433

434

435

436

437

438

439

440

441

442

443

444

445

446

447

448

449

450

451

452

453

454

455

456

457

458

459

460

461

462

463

464

465

466

467

468

469

470

471

472

473

474

475

476

477

478

479

480

481

482

483

484

485

486

487

488

489

490

491

492

493

494

495

496

497

498

499

500

501

502

503

504

505

506

507

508

509