


ULTRASONIC CLEANER (model no.: SJ-A2)

Item No. 2620929

Operation instruction

Thank you for purchasing the ultrasonic cleaner please read these operation instructions carefully before using and retain them for future reference

Product Presentation

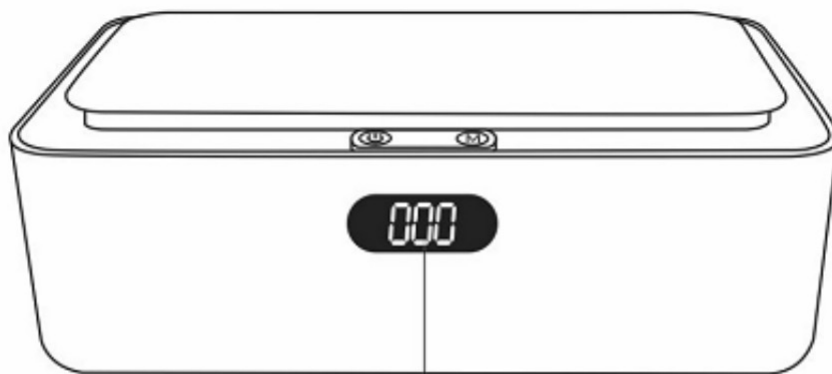

Timer



Digital display



ON/OFF



The Functions


Timer

Digital display

ON/OFF

When you connect the power plug, the display screen shows "000" and the machine is in standby mode.

Short press the "  " to switch to the desired cleaning time selection, and then press the "  " key to start it.

When the machine is working, tap the power "  " key to suspend and the screen countdown is suspended. Tap it again to restart it



Short press to select the time

[90s,180s,280s,380s,480s], touch control



ON/OFF, touch control

Safety Precautions

Safety precautions (must be strictly observed and implemented)

To avoid serious personal injury and damage to property, be sure to comply with the following instructions.

Ignoring the contents of the identification and the harm caused by using the wrong method will be distinguished by the following signs.

Warning The contents of the identification column cover Possible circumstances Leading to Death or Serious Injury

Notice The contents of the identification column cover Possible injury or Loss of Property.

Contents that we wish to be observed is distinguished by the following pattern. (Here is an example of a pattern)

This pattern indicates 「NO」

This pattern indicates 「Must be implemented」

Warning

Do not allow children to use or place the device in places that children cannot touch.

-- Could cause burns, electric shock and injury

People who fit with a pacemaker internally can't use this product -- Could cause a sense of discomfort.

Do not operate the machine without filling water into the tank -- Overheating will cause burns or malfunctions. Do not put in flammable liquid. -- Could cause a fire.

Do not spray water or liquid over the device and tank.

-- Wetting the bottom will cause internal water intake, which causes electric shock fire and malfunction Do not use the machine at any damp places

-- Could cause electric shock, fire and malfunction

Do not touch the electrical connection with any metal objects. -- Could cause electric shock, fire and malfunction Do not disassemble, repair modify the machine -- Could cause electric shock or injury.

Precautions for Use

Attention to Adapters

ATTENTION

- Do not use products other than special adapters -- Could cause fire electric shock.
- Do not touch the power plug with wet hands especially when inserting or removing the plug
- Could cause fire electric shock and malfunction
- Remove the power plug from the socket if the device is not going to be used for a long time
- Easy to cause fire electric shock and malfunction

Precautions for Use

ATTENTION

When the machine is used several times continuously, to avoid the damage and failure of the parts caused by overheating the machine will enter into a system of self-protection, it can be resumed after about 5 minutes

- Do not get water directly from the tap
- Flooding of the device and power switches will lead to malfunction
- Do not add anti-toxic, sterilizing or acidic solvents into the cleaning water.
- May cause deterioration of resin and damage of stainless steel
- Do not clean pearls and other low surface hardness articles. (Morse hardness of less than 8)
- Can cause damage, discoloration or loss of luster.
- Do not wash rings necklaces with gems and diamonds for long periods of time.
- May cause gems/diamonds to fall off
- DO NOT use the same socket as TV, radio and computer -- Can affect the picture clarity or cause noise.
- Prevent the device from a falling and a violent shaking -- Can cause breakage, deformation, malfunction。

Items Type

	Type	Specific items
Items can be cleaned	Glasses	Spectacles (without UV film) tortoiseshell frame
	Office supplies category	Ruler, scissors, pen seal...etc.
	Daily Supplies	Toothbrush, razor blade, comb...etc.
	Jewelry	Rings, Necklaces, earrings...etc.

	Type	Specific items
Items not suitable for ultrasonic cleaning	Wooden articles	Turtle shell frame pearl, earthen stone, opal emerald, coral, ivory, Emerald, stone, Lacquer ware
	Gems with softer surfaces	
	Coating and finishing inferior products	
	Bonded gemstones	
	Items with scratches and cracks	

*It may not be possible to completely remove the remaining denture stone dental wax. wax yellow, black spots and smoking dental wax...etc.

*Possible inability to clean fixed sedatives in dentures

*Discoloration and rust of metals and precious metals cannot be removed

*To clean bonding jewels, diamond necklaces and rings may cause them to fall off.

Specifications

Product Name: Ultrasonic cleaner

Product Model: SJ-A2

Rated voltage: 12 V/DC, 2A

Rated power: 16W

Frequency: 45kHz

Material of tank: SUS304

Tank size :180 x 70 x 45mm (Length x Width x Height)

Capacity: 500 ml






G.W.: 611 g

Product size: 208 x 108 x 72mm (Length x Width x Height)

Delivery contents: ultrasonic cleaner, power adapter, wash bracket x 1, operating manual

*Products such as specifications the appearance and the design are subject to modification without prior notice.

Operations

1. Open the lid add the clean water put what you need to clean inside the tank ensure the clean water is no higher than the “MAX” water level mark. Do not operate the unit without water in the tank.
2. Plug the power adapter DC plug into the DC socket of the Ultrasonic cleaner.
3. Plug the power adapter into the power socket.
4. Short press the “” button to switch to the desired time, then short press the “” button to start the work.
5. If you want to pause the cleaning job, you can short press the “” button to pause the countdown on the display, Short press the power button again to continue working
6. If you want to re-select the time then should pause it firstly (short press  button), then press the “” to select the time.
7. When the cleaning work is finished, please unplug the power. Open the lid take cleaned items from the tank then pour out dirty water, clean and wipe the tank.

Note: Pour water from the side

Daily Maintenance

1. Pour water into the tank with the measuring cup, half of tank's standard line. After washing with a soft sponge, rinse with the cleaning water.
2. Be careful not to seep water into the power connection at the bottom of the cleaning tank.
3. After cleaning, please rinse items with clean water once again*Don't seep water into the power connection when cleaning
4. When the stains are difficult to remove, please wet a clean cloth with water then wipe them.
5. Be careful not to seep water into the switch and power connections.

After wiping, dry the device with a dry cloth.

