

BN 2622668

Induction cooker

IMPORTANT SAFETY INSTRUCTIONS:

The following safety precautions should always be followed when using domestic electrical products to reduce the risk of electric shock, personal injury or fire. It is important to keep these instructions for further reference after you have read and understood them and before attempting to use the product.

1.This is a domestic electrical product, which must only be used for its intended purpose, in accordance with these instructions. This product should never be used in a commercial environment.

2.Check the rating plate to ensure that the correct input voltage is being supplied to the product.

3.Always switch off the product off and remove the plug from the wall socket when not in use and before cleaning or changing accessories.

4.Most domestic appliances must be attended at all times when in use. Never leave this product unattended when connected to the mains supply unless instructed to do so by these instructions.

5. Always ensure the product is switched off before connecting it to the mains supply.

6.Never reach for an electrical product that has fallen into water. To do so will result in an electric shock. Switch off the power at the wall socket and disconnect the plug before attempting to remove it from the water. After removing, never attempt to re-connect the product until it has fully dried and been tested and approved by a qualified person.

7.Domestic electrical products are not designed for use by children. Any child using a domestic electrical product should be closely supervised by a responsible adult to ensure all instructions and safety precautions are adhered to.

8.Never allow the mains cable to come into contact with a heat source, water or any other liquid. Ensure sharp objects like knives etc are never used close to a mains cable when the product is in use.

9.Never allow the cable of an electrical product to drape over the edge of a work surface where it could be pulled by a small child. Always check the position of the mains cable when the product is in use.

10.Never carry an electrical product by the mains cable as it could cause damage

resulting in electrical failure when next used.

11. Never operate this product if the cable or plug become damaged.

NOTE: Only a qualified person can carry out repairs on this item.

1. Be aware that many domestic electrical products become very hot during use. Never touch hot surfaces during use and ensure all users are aware of the risks

 
2. Where relevant, keep all ventilation slots clear from obstructions and observe safe working distances from walls etc. Never put anything into the ventilation slots of an electrical appliance.

3. Never operate this product with wet hands. Always ensure your hands, the appliances and work area, are dry before switching on.

4. Never use this product outdoors. This product is designed for indoor use only.

5. If this product stops working unexpectedly, switch off and unplug the product immediately. Seek professional advice before attempting to re-use the product.

PARTS NAME

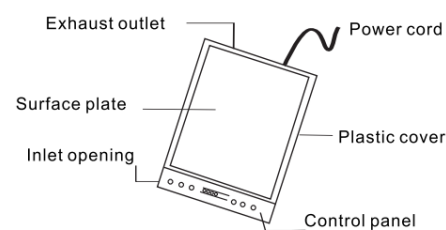

Specifications

Power Rate: 2000W

Voltage: 220-240V 50-60Hz

Temperature: 60°C-240°C

Max current: 6-15A

General Instructions

1. Do not plug into a socket where several other appliance are plugged in.
2. Don not use if the plug cord is damaged or when the power plug does not fit the socket securely.
3. Do not modify the parts, or repair this unit, the supply cord must be replaced by qualified technicians.
4. Do not use this unit near an open flame or wet places.
5. Keep out of children's reach.
6. Place on a stable, even surface.
7. Do not heat or overheat the pot empty.
8. Do not place metallic objects such as knives, forks, spoons, lids, cans and aluminium foils on the top surface or under the bottom of the stove.
9. Allow sufficient space around the cooking area (keep a minimum distance of 5 to 10 cm from the unit to walls or other items).
10. Never use the unit on low-heat-resistant materials(carpet, vinyl).
11. Do not place paper between the pot or the pan and the unit. The paper may get burnt.
12. Do not block air intake or exhaust vent.
13. Caution! The surface will remain hot for a period of time after use from the radiant head.
14. Unit can affect the items having or attracting magnetic fields, such as radios, televisions, automatic banking cards and cassette tapes.
15. Do not use the unit on the metallic surface.
16. Do not disconnect the power cord immediately after cooking, at least 15 seconds is necessary to cool down the unit.

Function

Hot pot:

- 1.Hot-pot default show 1200W.
- 2.User adjust the power according to ourselves needs,the power rang 300W-2000W.

Stir Fry:

- 1.Stir Fry default show 1600W.
- 2.User adjust the power according to ourselves needs,the power rang 300W-2000W.

Fried:

- 1.Fried default show 160°C.
- 2.User adjust the temperature according to ourselves needs,the temperature rang 60°C-240°C.

Soup:

- 1.Soup default show 2:00.
- 2.User adjust the timer according to ourselves needs,the timer rang 0:00-3:00.
- 3.Long press "+" button,the timer 10mins to increased. Long press"—" button ,the timer 10min to decrease.
- 4.Short press "+" button,the timer 1min to increased. Short press"—" button ,the timer 1min to decrease.

Stewing

- 1.Stewing default show 1:30.
- 2.User adjust the timer according to ourselves needs,the timer rang 0:00-3:00.
- 3.Long press "+" button,the timer 10mins to increased. Long press"—" button ,the timer 10min to decrease.
- 4.Short press "+" button,the timer 1min to increased. Short press"—" button ,the timer 1min to decrease.

Pancake

- 1.Pancake default show 180°C.
- 2.User adjust the temperature according to ourselves needs,the temperature rang 60°C-240°C.

ON/Standby FUNCTION

- 1.Press "ON/Standby" the LED will be show"ON" ,the machine will starting.
- 2.Press "ON/Standby" again,will be turn off.

TIMER FUNCION

1. Time range 0:00-3:00.
2. Long press "+" button,the timer 10mins to increased. Long press "-" button ,the timer 10min to decrease.
3. Short press "+" button,the timer 1min to increased. Short press "-" button ,the timer 1min to decrease.
4. If set a time 5s after has any operation, the time will confirm.

 
LOCK FUNCTION

1. Click the Lock button, will be show "Loc".Once "Loc",the other button can not be operation,except to "ON/Standby" button.
2. Long press the Lock button will unlock.

"H"

After shutdown, if the machine temperature over heat display "-H-".


Working principle

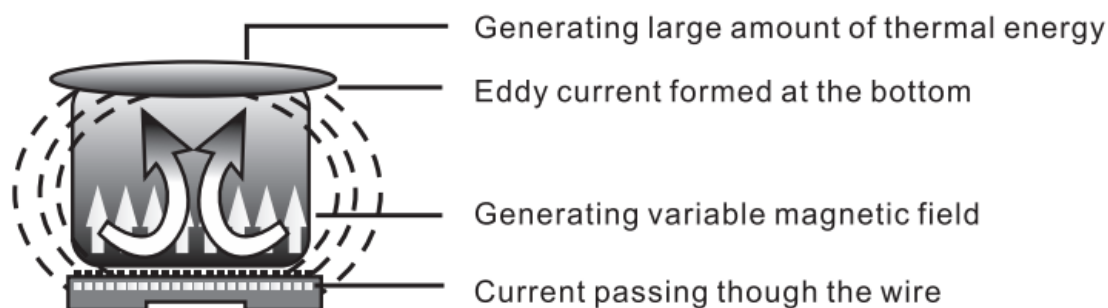

The induction cooker is mainly based in the electromagnetic induction technology.The sophisticated electronic circuitry of electro test produce high frequency electromagnetic field resulting high heat energy which heats up the bottom of the vessel and pass on the food directly effecting very fast cooking with thermal efficiency up to 95%.

Usable pans

 Steel or cast iron, enameled iron, stainless steel, flat-bottom pans/pots with diameter from 12 to 26 cm.

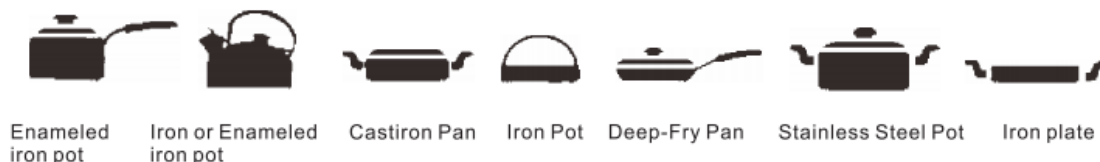

Non-use able pans

Heat-resisant glass, ceramic container, copper, aluminum pans/pots
Rounded-bottom pans/pots with bottom measuring less than 12 cm.



Rounded Bottom
pot



Aluminum
Copper Pot



Bottom Measuring
Less than 12 cm



Pot with Stands



Ceramic Pot



heat-Resistant
Glass Pot

Warning codes & Safety Protection

When the cooker experiences unsuitable operations from you or by other means, the cooker stops functioning exhibiting relevant codes on the display screen. This is meant only for the protection of the cooker and guidance to you.

Error code	Cause	Solution
E0	Unplaced cookware, cookware material discrepancies or diameter less than 12cm	Place pans and choose the right cookware
E1	Voltage lower than 85V	Abnormal voltage until the voltage returns to normal
E2	Voltage higher than 275V	Abnormal voltage until the voltage returns to normal
E3	Surface sensor open or short circuit	Please call customer service or consult a professional repair outlets
E4	IGBT sensor open or short circuit	Please call customer service or consult a professional repair outlets
E5	Surface temperature over than 280 degree	Uneven bottom of the pot or pan with a dry, until the cooker to cool before use
E6	IGBT temperature over than 105 degree, over heat protection	Check the cooker inlet and outlet whether the blockage, or if the cooker cooling fan running or not

Maintenance

1. Clean after each used. Disconnect plug and wait the unit has cooled down
2. if the surface plate get dirty, clean it with wet cloth, wash directly
3. Maintain the unit clean, avoid the insects go inside the unit, the performance
4. For the ventilation part, clean with tooth brush or cotton.
5. If something wrong with the unit, repaired by professionals only.