

Contents

| | |
|---|----|
| 1. Safety instructions..... | 1 |
| 1.1 About this manual. | 1 |
| 1.2 About the use of marks in this manual. | 1 |
| 1.3 Points for attention or product use. | 1 |
| 2. Grounding requirements. | 3 |
| 3. Product introduction | 4 |
| 4. Product technical parameters..... | 4 |
| 5. Operating instructions. | 5 |
| 6. Storage. | 9 |
| 6.1 Power cord storage..... | 9 |
| 6.2 Air dryer storage. | 9 |
| 7. Maintenance..... | 9 |
| 8. Exception handling..... | 10 |

1. Safety instructions

This product is suitable for use in the home environment.

1.1 About this manual

Before using this product, please read and understand all the contents of this manual and the labels of the product carefully. Please keep vigilant in the use of the product, and operate according to the instructions, which will ensure your safety. Please keep this manual for future use and product maintenance. If you transfer the product to a third party, please attach this manual with the machine. Any operation inconsistent with the instructions may cause serious personal injury or damage to the product itself. Any loss caused by failure to operate in accordance with the instructions is not covered by the warranty.

1.2 About the marks used in this manual

Please pay special attention to the instructions which are very important for your personal safety. Please read them carefully to avoid accidents and possible damage to the products.



warning

Reminder of the risks that may cause harm to your health and safety



be careful

Reminder of the possible risks that may cause injury to this product or other objects

1.3 Points for attention on product use



Warning: in order to reduce the risk of fire, electric shock and personal injury, pay special attention to the following items:

- The product is 220-240V 50 / 60Hz. Pay attention to match the label on the machine's name plate. Do not use power supply inconsistent with rated voltage and frequency;
- If it is found that the power cord or plug is damaged, the power socket is loose, and the power plug and socket do not match, do not use this product, or it may cause electric shock or overheating and cause fire;
- This product should not be used by children or people with physical or mental disorders or lack of relevant experience and knowledge, unless someone responsible for their safety supervises or instructs them to use this product ;
- Do not pull the power cord at sharp edges and corners to prevent accidental damage to the power cord;
- Before using this product, please carefully check whether the power cord is damaged or aged. If the power cord is damaged, please do not continue to use this product to avoid the risk of electric shock;
- If the plug or power cord is damaged, in order to avoid danger, do not repair it by yourself, and it must be replaced by professional personnel designated by the manufacture.

- If the dryer fails to work properly, or the product is accidentally dropped, damaged, left outdoors, or dropped into water, please send it to a professional repair shop for inspection before the next use, and then use it normally after confirming the safety of the product;
- When the product is not in use, please turn off the product switch and unplug the power plug;
- Before cleaning and maintaining this product, please turn off the product switch and unplug the power plug;
- If the power cord is damaged or entangled, please turn off the product switch and unplug the power plug;
- DO not pull the power cord or the whole machine to pull out the power plug. Hold the plug and pull out the plug;
- The power line should be away from heat source, oil or sharp edge;
- It is recommended that this product be used in the circuit with leakage current less than 30mA;
- This product is only for indoor use and should not be exposed to rain, but should be stored indoor;
- It is not allowed to use in the pool, low-lying water and other similar places, and the product shall not be immersed in any liquid;
- Do not wet the fuselage, otherwise fire and electric shock may occur due to electrical short circuit;
- Do not touch the power cord plug or the product with wet hands, which may lead to leakage;
- Do not place the power cord in a crowded area to avoid tripping over people or objects ;
- The air inlet shall not be blocked;
- Do not use this product when the air inlet grid is removed, or the air inlet is blocked;
- hair, clothing, fingers and other parts of the body should avoid the open parts and moving parts of the product, so as to avoid electric shock or personal injury;



be careful!


- Do not move or lift the product during use:
- The machine should be placed on a stable place for use, so as not to hurt people or the machine itself;
- Children should not be allowed to play with the products as toys, and strict supervision must be carried out;
- The packaging and plastic bags of this product may cause suffocation. Children should not play;

- The corners, ties, scarves, threads, etc. may be pulled into the product, causing danger;
- Do not use in any dust environment (flour, wood powder, carbon powder or metal dust), or there may be explosion danger;
- Only the original accessories and accessories specified in the manual are allowed to be used, and other non specified or non original accessories are not allowed, otherwise it may cause danger and the warranty will be invalid;
- Users are not allowed to disassemble or repair this product. The manufacturer and distributor are not responsible for any accidental property loss or personal injury.


2. Grounding requirements

This product must be grounded. When the product fails, the risk of electric shock can be reduced. This product must be used at rated voltage and powered by a grounded socket. If the socket is not grounded, this product cannot be inserted into use. Do not extend the power cord or use the trailing board.

3. Product introduction

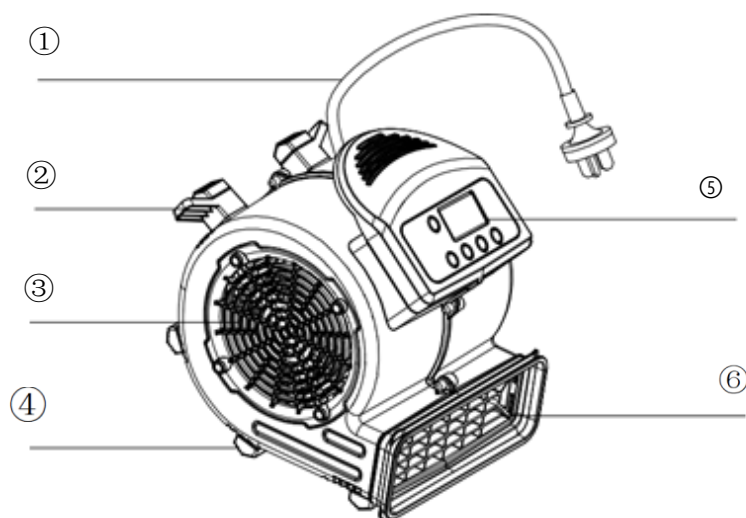

1. power cord
2. Hanging hook
3. Left cover plate
4. Anti skid pad
5. LCD panel
6. Air outlet
7. Right cover plate

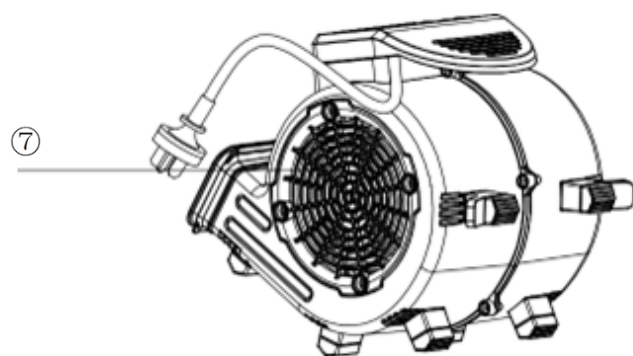

4. Product technical parameters

Product Name: Air dryer

Rated voltage: 220-240V rated frequency: 50/60Hz


Power: 100W

Wind speed: 10.5m/s, 11.5m/s, 13.0m/s


The technical parameters are subject to the standard test environment.

5. Product operating instructions


1. Check whether the display screen is in good condition before and after use to ensure that the power supply is cut off.
2. The air dryer should be placed in a dry and ventilated place or a stable plane. Make sure there is one foot distance between adjacent machines. Avoid placing in the place where there are cloths, paper and other inhalable dryers that cause air inlet blockage.
3. When the air dryer works in the designated target area, it should be placed in the working position correctly.
4. The air dryer must be powered on a grounded socket. For details, please refer to grounding instruction requirements or page 3. Do not extend the power cord by yourself.
5. After using, press the power button to turn off the machine. The display screen is black and the motor stops running. See page 9 for storage instructions.

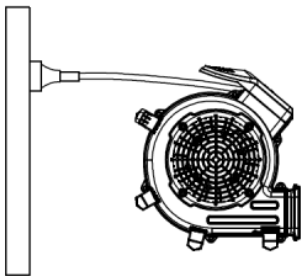


Carpet, floor

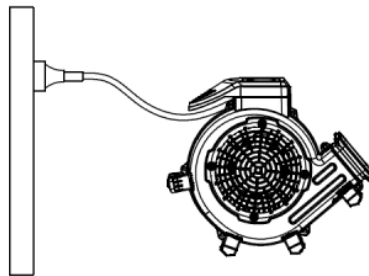

Steps and walls

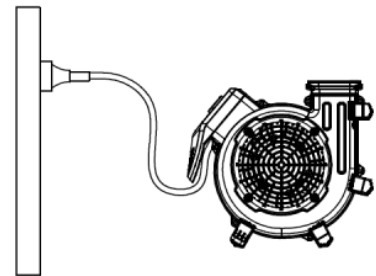


Ceiling

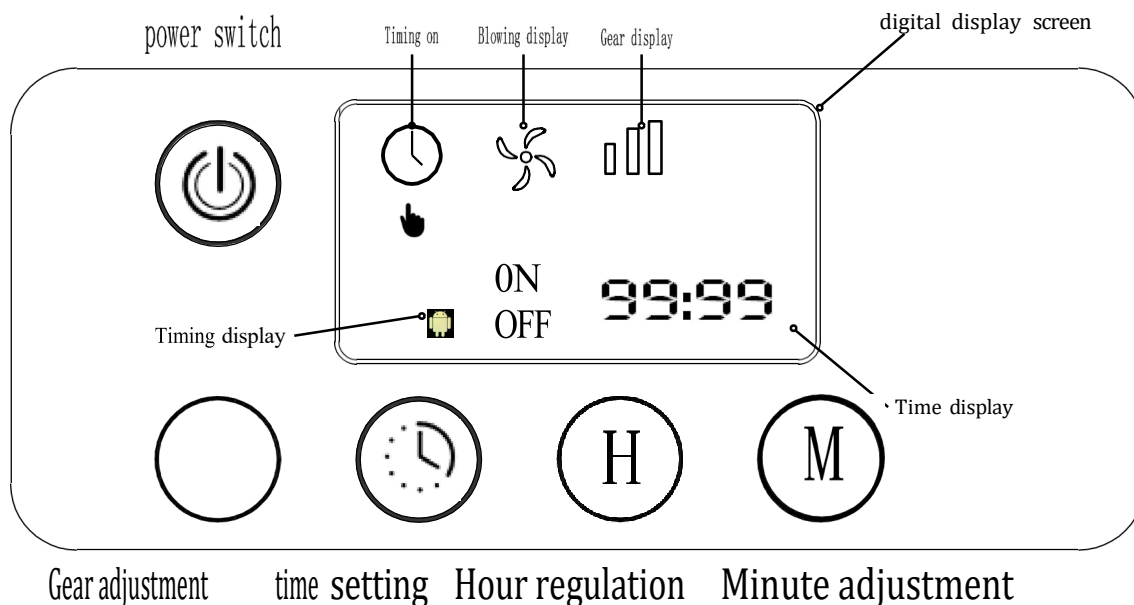 


1. keys and functions

Five touch buttons: power switch, gear adjustment, time setting, hour adjustment and minute adjustment;


Three function settings: gear adjustment, timing setting, timing / manual mode;

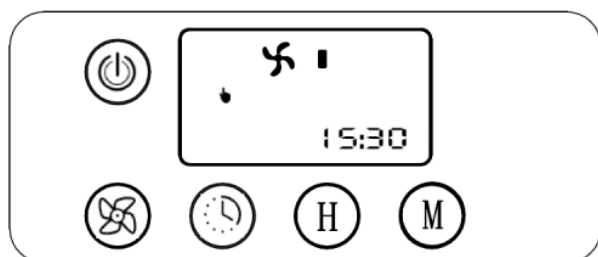


Press "power switch" to turn on the power and the screen will display time

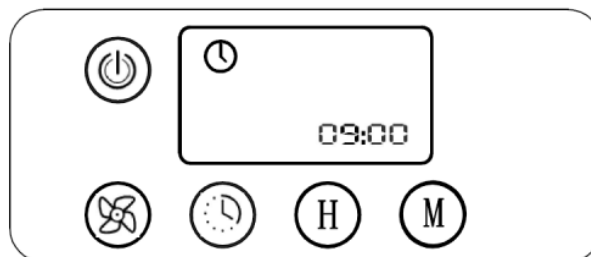

Press "time setting" to enter the timing interface
Press "H", "M" to set hours / minutes

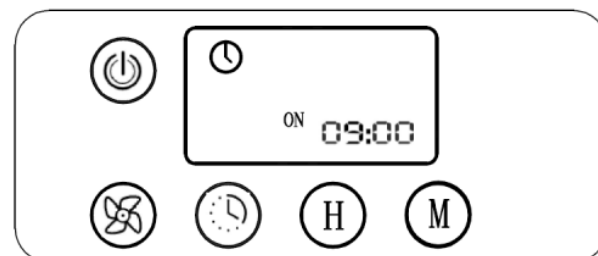

Press "opening time setting" to enter the opening time setting
Press "H", "M" to open at 9:00 through

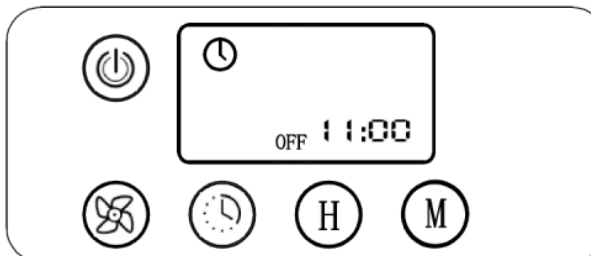

Press "closing time setting" to enter the closing time setting
Press "H", "M" to close at 11:00 by setting

PS: when setting the timing, the interval time of each press should not exceed 3 seconds, otherwise, it will automatically return to the initial interface.

2. Interface switching

- 2.1 press the "power switch", the LCD will light up and enter the initial interface (Fig.1); Then press the "power switch" to turn off the LCD;
- 2.2 in the initial interface, gently press "gear adjustment" to start the motor manually; then gently press "gear adjustment" to switch the motor gear; press "gear adjustment" for a long time to turn off the motor manually;
- 2.3 in the initial interface, lightly press "time setting" to enter the clock calibration of interface (Fig. 2). The system clock can be calibrated by pressing the "hour adjustment" and "minute adjustment" buttons ; press the "gear adjustment" or button for 3 seconds to return to the initial interface automatically;
- 2.4 in the clock calibration interface, lightly press "time setting" to enter the timing of time setting interface (Fig. 3), and the timing of time can be set through the "hour adjustment" and "minute adjustment" buttons (00:00 is the invalid time setting); lightly press "gear adjustment" or press the button for 3 seconds to automatically return to the initial interface ;
- 2.5 in the timing opening time setting interface, press "time setting" lightly to enter the timing closing time setting interface (Fig. 4) . The timing closing time can be set through the "hour adjustment" and "minute adjustment" buttons (00:00 is the invalid time setting); lightly press "gear adjustment" or press the button for 3 seconds to automatically return to the initial interface ;
- 2.6 in the initial interface, if "on" is displayed, it means that the setting of timing of time is effective; if "off" is displayed, it means that the setting of timing off time is effective ;
- 2.7 In the initial interface, if the robot pattern is displayed, it means that the timing function is enabled; if the palm pattern is displayed, it means that the timing function is not enabled;
- 2.8 in the initial interface, lightly press "hour adjustment" to view the time set for timing on; lightly press "gear adjustment" or press the button for 3 seconds to return to the initial interface automatically;
- 2.9 in the initial interface, lightly press "minute adjustment" to view the timing off setting time; lightly press "gear adjustment" or press the button for 3 seconds to automatically return to the initial interface;
- 2.10 in the initial interface, pressing "time setting" for a long time will automatically clear the timing on time and timing off time, and automatically return to the initial interface (Fig. 5).



Figure 1 initial interface (timing function on)

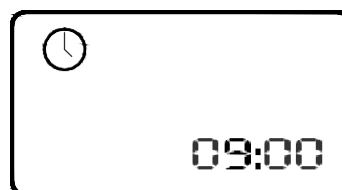


Figure 2 clock calibration interface



Figure 3 timing start time setting interface



Figure 4 timing off time setting interface

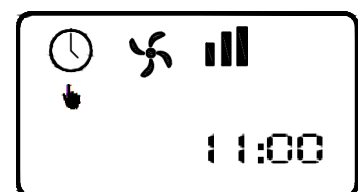


Figure 5 initial interface (timing function off)

3. Motor startup and shutdown

- 3.1 when the timing function is off, press "gear adjustment" to start the motor and gear adjustment;
- 3.2 when the timing function is off, turn off the motor by pressing "gear adjustment" for a long time ;
- 3.3 when the timing opening function is effective, when the system time is equal to the set timing opening time, the motor will start automatically;
- 3.4 When the timed shutdown function is effective, if the system time is equal to the set shutdown time, the motor automatically shuts down;
- 3.5 when the timing function is effective, the user can also manually turn on and off the motor through the "gear adjustment" button;

4. Motor status display

- 4.1 on the initial interface, the current motor gear setting (high / medium / low) is displayed in real time.
- 4.2 in the initial interface, the upper left wind blade pattern displays the motor status in real time. The rotation of the wind blade indicates that the motor is running, and that the fan blade does not rotate indicates that the motor stops ;


5. Power-off preservation function

- 5.1 when the system is powered down, the motor gear, system clock and timing parameters will be automatically saved;
- 5.2 when the system is powered or again, the last set motor gear, system clock and timing parameters will be automatically called.

6. Precautions for clock parameters

- 6.1 "00:00" is invalid timing parameter ;
- 6.2 if the opening time and closing time are set at the same time, the timing setting is invalid;
- 6.3 when users use the system for the first time, it is recommended to calibrate the system clock through the above 2.3 ;

6 Storage

 
 Warning: do not place the dryer outdoors. Please store the machine in a ventilated and dry place, away from dangerous goods, such as toxic substances, carcinogens, inflammables, explosives, etc.

 Note: in order to avoid damage to the dryer, do not stack the dryer on more than three, please store the machine on a stable level.

6.1 power cord storage


Before storing the dryer, make sure that the power switch is off and cut off the power. Wind the power cord around the winder.

6.2 air dryer storage

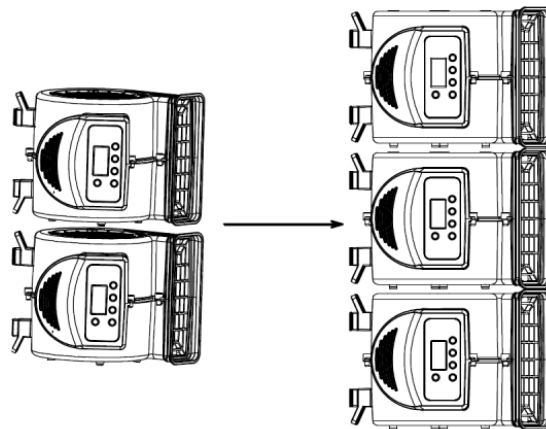

To save space, the dryer can be stacked and stored, as shown in the figure above. When stacking, make sure that the convex part of the left side of the air outlet grille plate for stacking is correctly embedded into the corresponding stacking groove on the right side of the other dryer for fixing.

7 Maintenance

 Warning: after each overhaul or cleaning, make sure that the inlet grid plate, outlet grid plate and fan blade of the whole machine are installed in good condition.

Before and after each use of the product, please carefully check the plug and power cord for damage. If the plug or power cord is damaged, please stop using the product and send it to a professional service center for replacement of corresponding parts. Check that there is no foreign matter blocking and blocking around the inlet and outlet grid plates of the product.

8 Excaption handling



Please refer to the table below if you find any abnormality when using this product

| fault | Possible causes | processing method |
|--|--|---|
| Dryer not running | <ol style="list-style-type: none"> 1. Check whether the power cord plug is inserted properly 2. whether the battery power cord socket has power 3. Check whether the power switch of the dryer is turned of 4. Foreign body inhalation and insertion 5. Pover line failure 6. The switch is burnt out or fails | <ol style="list-style-type: none"> 1. Plug in the power cord 2. Check the power supply and power like 3. Restart the machine after removing foreign matters 4. whether the LCD panel and buttons are normal 5. Pull out the plug and check the power cord. If it is damaged, please ask a professional to repair it 6. maintenance and replacement by professiohals |
| The air dryer makes a harsh sound during operation | <ol style="list-style-type: none"> 1. Foreign body inhalation and insertion 2. Failure caused by plastic deformation or blade displacement caused by abnormal damage of the whole machine | <ol style="list-style-type: none"> 1. Restart the machine after removing foreign matters 2. Pull off the plug of the dryer and contact the company's customer service |
| vibrates greatly during operation | <ol style="list-style-type: none"> 1. There is a large amount of dust accumulation on the fan blade. 2. The fan blade or motor is damaged | <ol style="list-style-type: none"> 1. The fan blades of the air dryer are cleared by professionals 2. Contact the company's customer service |

Please contact the local after-sales service network for other faults that cannot be handled

Disposal



This symbol must appear on any electrical and electronic equipment placed on the EU market. This symbol indicates that this device should not be disposed of as unsorted municipal waste at the end of its service life.

Owners of WEEE (Waste from Electrical and Electronic Equipment) shall dispose of it separately from unsorted municipal waste. Spent batteries and accumulators, which are not enclosed by the WEEE, as well as lamps that can be removed from the WEEE in a non-destructive manner, must be removed by end users from the WEEE in a non-destructive manner before it is handed over to a collection point.

Distributors of electrical and electronic equipment are legally obliged to provide free take-back of waste. Conrad provides the following return options free of charge (more details on our website):

- in our Conrad offices
- at the Conrad collection points
- at the collection points of public waste management authorities or the collection points set up by manufacturers or distributors within the meaning of the ElektroG

End users are responsible for deleting personal data from the WEEE to be disposed of.


It should be noted that different obligations about the return or recycling of WEEE may apply in countries outside of Germany.

This is a publication by Conrad Electronic SE, Klaus-Conrad-Str. 1, D-92240 Hirschau (www.conrad.com). All rights including translation reserved. Reproduction by any method, e.g. photocopy, microfilming, or the capture in electronic data processing systems require the prior written approval by the editor. Reprinting, also in part, is prohibited. This publication represents the technical status at the time of printing.

Copyright 2023 by Conrad Electronic SE.

V1

Floor dryer with LED display

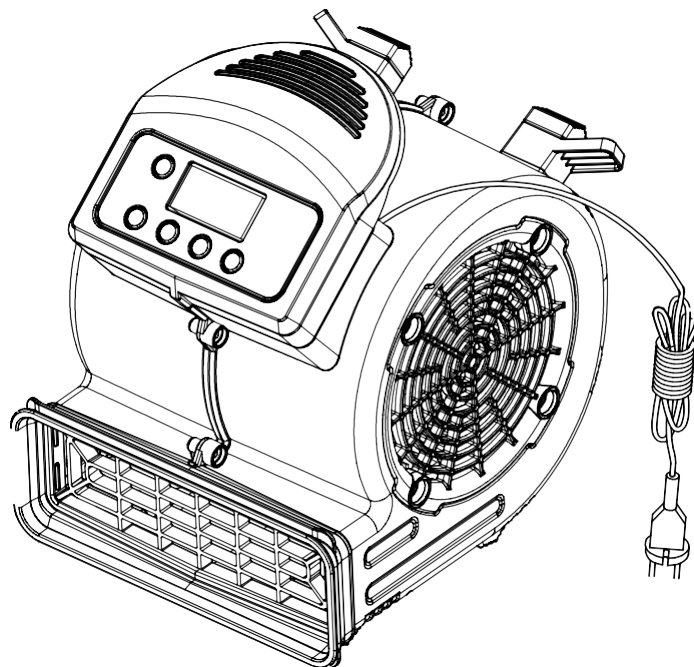

25 years of technology and quality
