



NT292723/01

④



Change switching days

⑦



4

DEL C1/2 -> Delete the programs for a channel



⑤

SERIAL -> Switching commands in chronological order



⑥

MEN



note!



A reset clears the entire memory, which means that all previously set data will be lost. Press and hold all four keys together for about 2 seconds, then release them.

The time, date, summertime/wintertime and switching times will have to be re-entered.

Always use a Li cell type battery (Li) CR2032, 3V. High temperature type min +70°C.

