

LED recessed light, 5.5 W, CCT, 3 pcs

Item no: 3208793


1 Dismantling recommendations

- Disconnect from power supply.
- Ask help from a professional if needed.

2 Dismantling instructions


Step 1

Adjust the swivel angle to show the lens edge and prize it up.

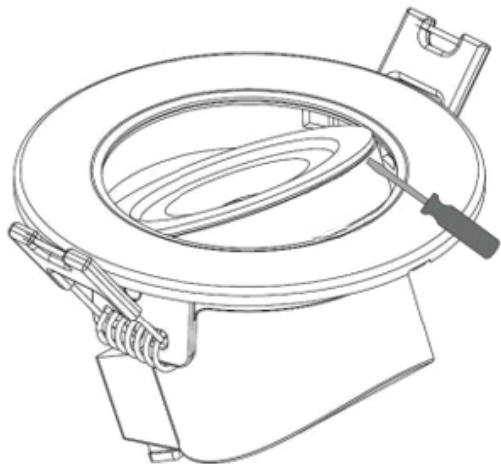


Step 2

Take out the lens.

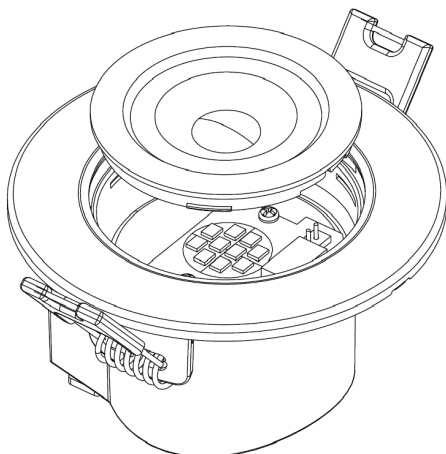


Step 3

Use a screwdriver to loosen the 2x screws.

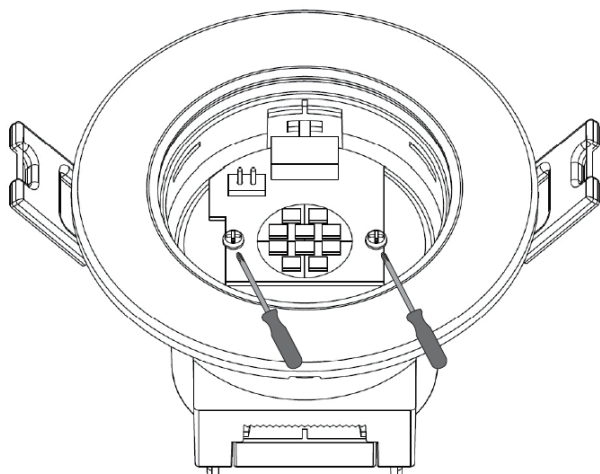

Step 4

Take out the LED PCB.

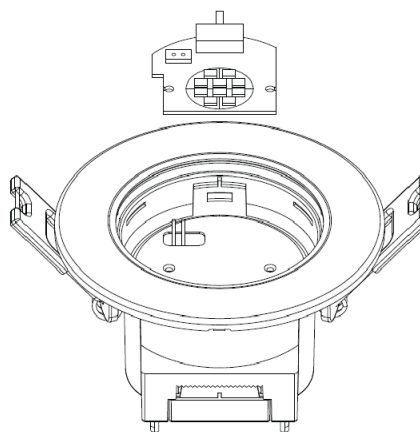

This is a publication by Conrad Electronic SE, Klaus-Conrad-Str. 1, D-92240 Hirschau (www.conrad.com).

All rights including translation reserved. Reproduction by any method (e.g. photocopying, microfilming or the capture in electronic data processing systems) requires prior written approval from the editor. Reprinting, also in part, is prohibited. This publication reflects the technical status at the time of printing.

Copyright by Conrad Electronic SE.

*3208793_V1_1224_hs_en 1807368075 I1/O1 en