

12 V Hybrid LED Spike

Item no: 3306467

1 Dismantling recommendations

- Disconnect from power supply.
- Ask help from a professional if needed.

2 Dismantling instructions

Step 1

Use a screwdriver to remove the screws around the light.



Step 2

Take out the top cover.



Step 3

Use a screwdriver to remove the screws.



Step 4

Take out the light source for the ErP testing.



This is a publication by Conrad Electronic SE, Klaus-Conrad-Str. 1, D-92240 Hirschau (www.conrad.com).

All rights including translation reserved. Reproduction by any method (e.g. photocopying, microfilming or the capture in electronic data processing systems) requires prior written approval from the editor. Reprinting, also in part, is prohibited. This publication reflects the technical status at the time of printing.

Copyright by Conrad Electronic SE.

*3306467_V1_0725_hs_en 2235027467 I1/O1 en