

说明书制作要求

材质:封面封底:125g铜版纸/哑胶

内页:80g哑粉

成品尺寸140x100mm,共136P

印刷:CMYK

装订方式:胶装,


按照语种顺序装订(英、德、法、西、意、日)



3K Ultra HD Security Floodlight Camera

Floodlight Cam Pro

Quick Start Guide

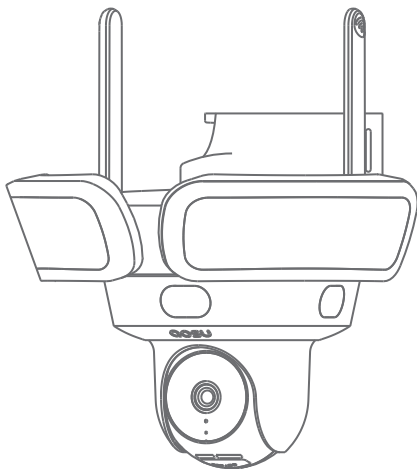

☎ United States: +1-866-905-9950 Mon-Fri 9AM-5PM(PST)
United Kingdom: +44-20-3885-0830 Mon-Fri 9AM-5PM(GMT)
Germany: +49-32-221094692 Mon-Fri 9AM-5PM(CET)
Japan: +81-50-5840-2601 Mon-Fri 9AM-5PM (JST)

✉ support@aosulife.com 🌐 www.aosulife.com 📺 @aosulife

TABLE OF CONTENTS

English	-----	P01
Deutsch	-----	P23
Français	-----	P45
Español	-----	P67
Italiano	-----	P89
にほんご	-----	P111

AOSUCare

Hi Customer

Thank you for choosing AOSU security products. We have always put our customers first and foremost.

There are 3 things you should know before using this product:

1. Micro SD Card

If you don't have a Micro SD Card available at home now and don't want to spend extra time choosing one, please contact us directly.

TIP: the Micro SD Card gotta be formatted after inserting it up.

2. Select 2.4G Wi-Fi

The product only supports 2.4G Wi-Fi, please select 2.4G Wi-Fi when setting up the app.

3. Select installation location.

Please use your mobile phone to test the coverage of the home Wi-Fi signal at the planned installation position before installation, so that the product can receive a better signal.

Get all the tutorial videos of using product including but no limit to set up the app, installation and format micro sd card, **visit:**

aosulife.com

Join "AOSUCare" today as three ways below to get all of your problems solved by one-on-one live chat and phone service tech support.



United States: +1-866-905-9950 Mon-Fri 9AM-5PM (PST)

United Kingdom: +44-20-3885-0830 Mon-Fri 9AM-5PM (GMT)

Germany: +49-32-221094692 Mon-Fri 9AM-5PM (CET)

Japan: +81-50-5840-2601 Mon-Fri 9AM-5PM (JST)



support@aosulife.com



www.aosulife.com



@aosulife

TABLE OF CONTENTS

01	Safety Instructions	P03
02	What's Included	P04
03	Product Overview	P05
04	Setting Up the Floodlight Cam Pro	P06
05	Preparing Floodlight Cam Pro for Installation	P07-P08
06	Installing the Junction Box	P09-P11
07	Mounting Your Floodlight Cam Pro	P12-P19
08	Adjusting the Lighting Angle	P20
09	Notice	P21
10	Customer Service	P22

 
Safety Instructions

- Disconnect power at the fuse or circuit breaker before installing.
- Do not install the product near flammable surfaces.
- To avoid risk of shock, injury or death, always be cautious when working with electricity.
- Consult a licensed electrician if you are uncomfortable working with electrical wiring.
- Make sure the Floodlight Camera is properly grounded.
- Floodlight Camera must be installed on a wall and on a UL-listed junction box.


What's Included



aosu Floodlight Cam Pro (L5P2CA11) x 1



Type-C Power Card x 1

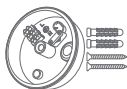

Junction Box Kits x 1



Mounting Base x 1



Installation Hook & String x 1



Base Screws x 4



Central Screw x 1



Central Screw Cap x 1



User Manual x 1



Security Sticker x 1

Required (not included)



Crosshead Screwdriver




USB Power Adapter(5V/1A)



Power Drill(15/64 mm)

Product overview

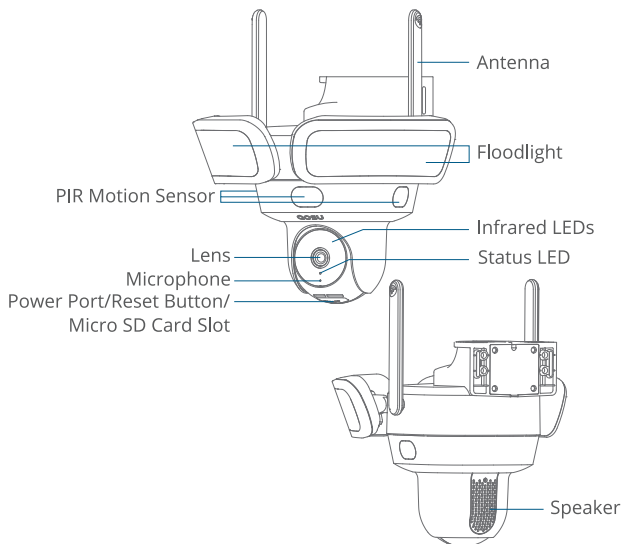

CAUTION: Please insert the Micro SD Card according to the direction shown in the diagram. Micro SD Card might JAM if inserted incorrectly and device could be damaged.

Micro SD Card Port: Support Micro SD Card for local storage (Max 128GB).

Reset button: Press and hold the button for 3 seconds, and then the device will be ready to be connected.


Card capacity requirements: 8-128GB.

Read and write speed requirements: class10 level.

File format: FAT32.

Setting Up the Floodlight Cam Pro


1. Put your Floodlight Camera Pro in the direction as illustrated on a table, and open the type-c port cover. Connect the device to a power source inside your home using the type-c power card and a power adapter (5V/1A, not provided). Wait 1 minute or until the status LED blinks green.

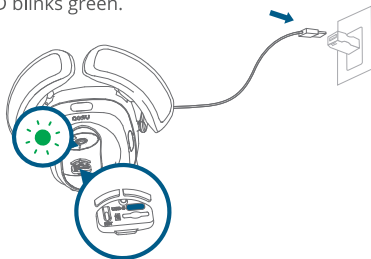

2. Download the Aosu App from the App Store (iOS devices) or Google Play (Android devices).




3. Sign up for an Aosu App account, then follow the onscreen instructions to complete the setup.

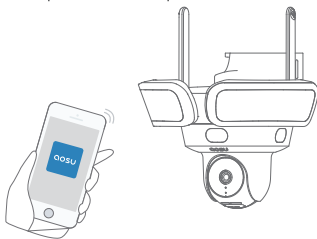

Preparing Floodlight Cam Pro for Installation


Turn Off Power to Home and Floodlight Camera Pro together;

1. Unplug the power adapter. Close the mounting base and USB port cover.

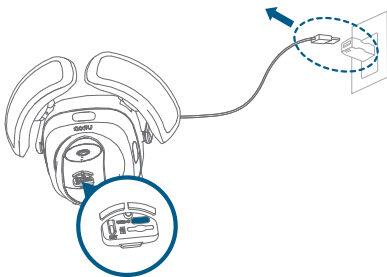

EN


2. Shut down the circuit breaker in your house. Switch on/off the lights to make sure the electricity in your house is properly shut off.

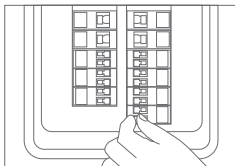

❗ To avoid risk of shock, injury or death, always be cautious when working with electricity.


Select Height and location

Hang Camera 7-10ft (2-3 m) above the ground. This height maximizes the detection range of the motion sensor of Camera. Avoid placing Camera under direct sunlight.

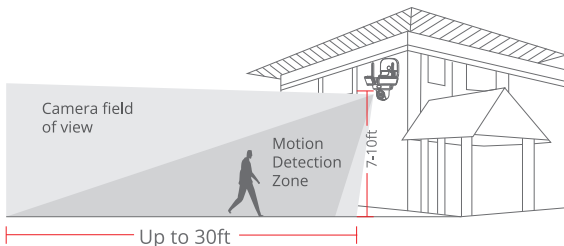


Installing the Junction Box

1. Remove the rubber plugs indicated in the illustration below.

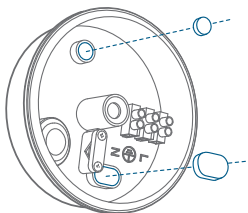


2. Run the existing wire through the hole.

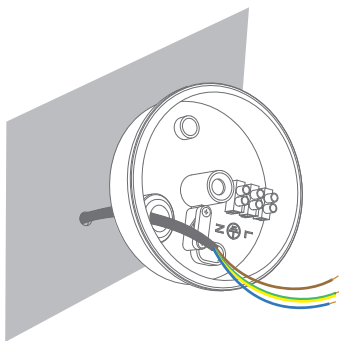


i If you don't have existing wires outdoors, contact a licensed electrician to run the wires.

3. Install the junction box:

- Orient the two mounting holes vertically to ensure stable mounting.
- On wooden walls, DO NOT pre-drill holes. Use the screws provided to fix the junction box onto the wall.

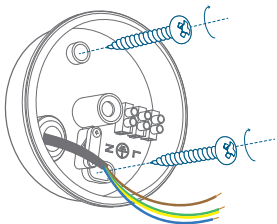


- On walls that are made out of hard materials, such as stucco, brick, or concrete, drill holes with a 15/64 inch (6 mm) drill bit, and then insert the anchors provided into the holes. Use the screws provided to fix the junction box on the wall.

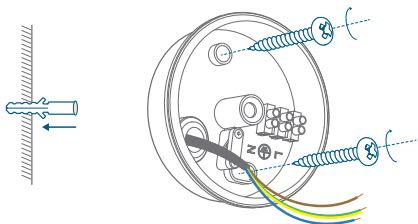

i If you don't have existing wires outdoors, contact a licensed electrician to run the wires.


4. Unscrew the bolt with a flat-head screwdriver. Connect the Neutral (blue) / Ground (green / green and yellow) / Live (brown) wire to the Neutral / Ground / Live wire connector in the junction box respectively. Secure the wires tightly to prevent wires from falling.

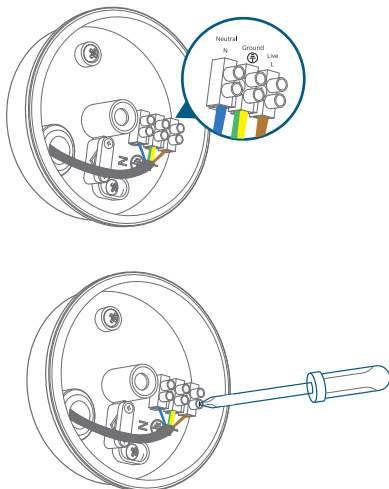

Mounting Your Floodlight Cam Pro

Choosing the Product's Installation Method

You can hang Floodlight Cam Pro or install it vertically on the wall. Select the installation method that best suits the position of your junction box.

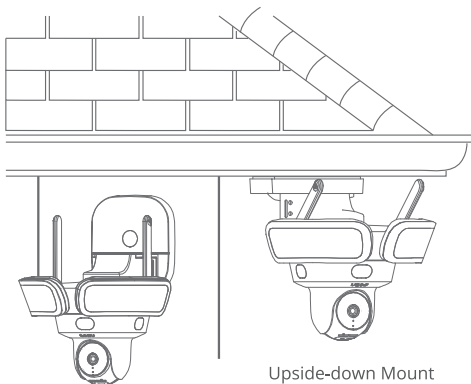


Wall Mount

Upside-down Mount

Instructions for Mounting Base Installation


1. Start by determining whether the Floodlight Cam Pro is suspended from the ceiling or mounted on the wall.
2. Thread the tail wire of the Floodlight Cam Pro through the three holes in the middle of the mounting base.
3. Use the base screws on the mounting base to securely fasten the Mounting base and the Floodlight Cam Pro together.


What is required:

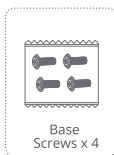



EN

Wall Mount

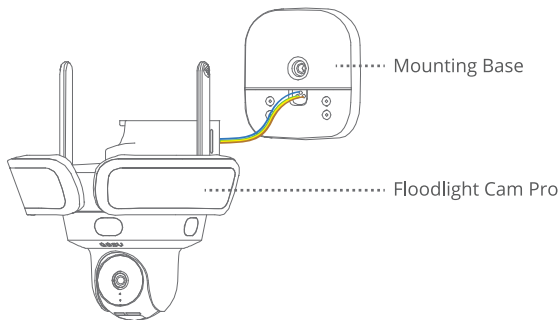

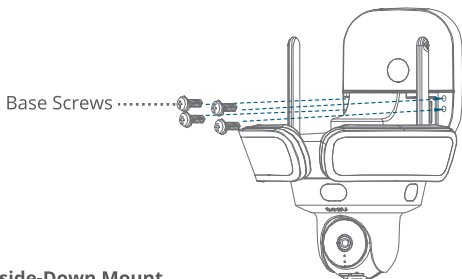



Upside-Down Mount

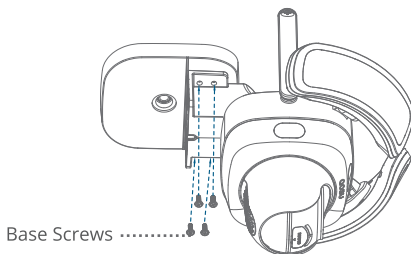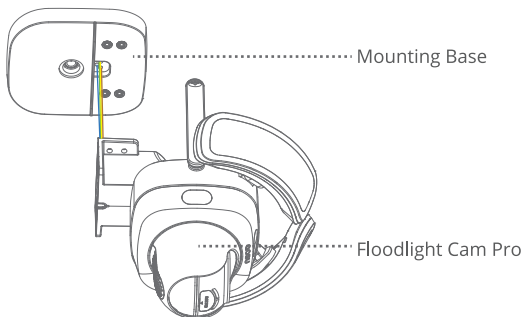


Mount Floodlight Cam Pro onto a Wall

STEP 1. Before Mounting


1. Pass the hook through the other end of the string as illustrated.

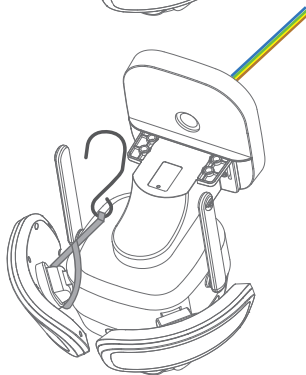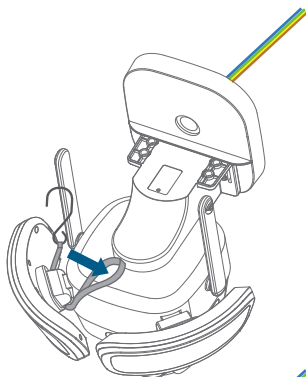

2. You need a ladder to mount your Floodlight Cam Pro on the wall. Make sure you do not place your ladder right under the Floodlight Cam Pro. Place it to the lower left or right of the Floodlight Cam Pro as illustrated below to avoid obstructing your view while mounting.

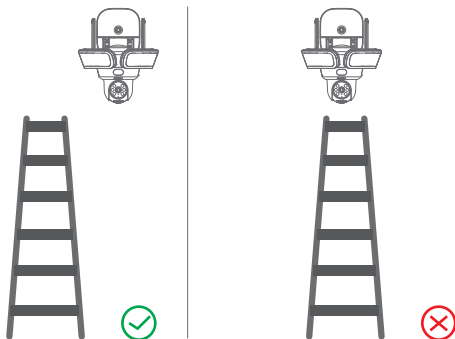


3. Screw part of the central screw through the center of the Junction box and leave the screw long enough to hang the Floodlight Camera Pro using the provided hook.

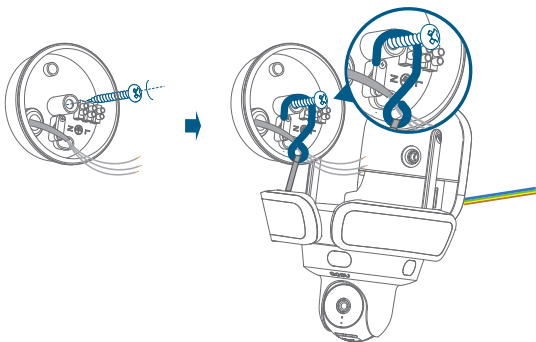

STEP 2. Connect Wires

1. Connect the ground wire from the Floodlight Camera Pro to the ground wire.
2. Connect the live / neutral wire from the Floodlight Camera Pro to the live / neutral wire from the wire connector in the junction box respectively.

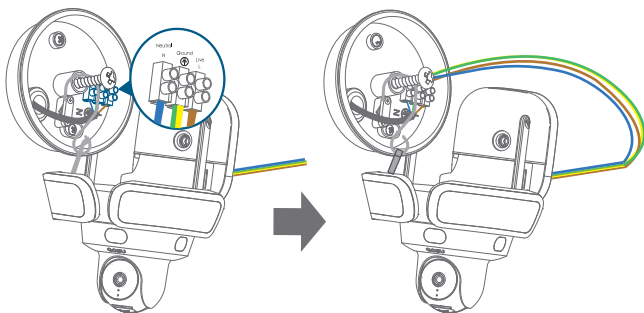


3. Secure the wires with a screwdriver.
4. Hold the Floodlight Camera Pro, and remove the hook, strings, and central screw from the junction box.

- ❗ If you have problems with the proper operation of Floodlight Camera, consult a licensed technician.
- ❗ Green / green and yellow, brown and blue wires must connect to the matching colors. Never cross connect.


STEP 3. Mount the Floodlight Cam Pro

1. Remove the hook.
2. Hold the mounting base, and insert the central screw through the center of the mounting base and screw it tightly.
3. Use the central screw cap to cover the central screw to prevent it from rusting.
4. Adjust the angle as mentioned in the section "Adjusting the Lighting Angle" to get the best view.
5. Remove the film on the Floodlight Cam Pro.
6. Switch on the main circuit breaker in the house.

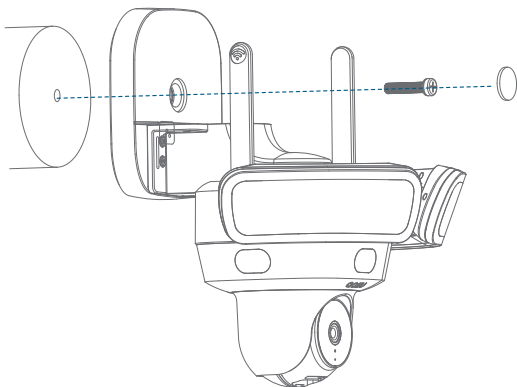

Mount Floodlight Cam Pro on the Ceiling


1. Follow steps mentioned in the section “Mount Floodlight Cam Pro onto a Wall” to choose the place for mounting and connect wires.
2. Insert the central screw through the center of the mounting base and screw it tightly.
3. Use the central screw cap to cover the central screw to prevent it from rusting.
4. Adjust the angle as mentioned in the section “Adjusting the Lighting Angle” to get the best view.
5. Remove the film on the Floodlight Cam Pro.
6. Switch on the main circuit breaker in the house.

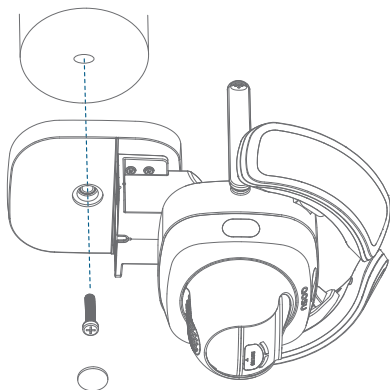

i In case Floodlight Camera is not powered on, switch off the circuit breaker before checking the wiring of Floodlight Camera. To avoid risk of shock, injury or death, always be cautious when working with electricity. Remember, do hire a professional electrician if you're uncomfortable working with electrical wiring.

Adjusting the Lighting Angle

1. Manually pull down the Floodlight on the side.

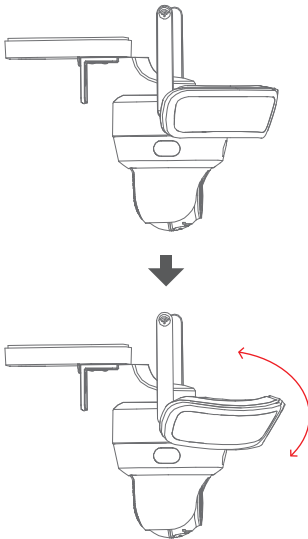

EN

i To check whether Floodlight Camera is operating, confirm the LED indicator has turned solid blue.

i If the Floodlight Cam Pro LED keeps blinking blue. Please make sure the Wi-Fi signal is strong at the desired location. You may consider moving the wireless router closer to Floodlight Camera or using a Wi-Fi range extender.

Notice



This product complies with the radio interference requirements of the European Community.

Declaration of Conformity

Hereby, Aosu declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

For the declaration of conformity, visit the Web site: <https://www.aosulife.com>.

This product can be used across EU member states.

Do not use the Device in the environment at too high or too low temperature, never expose the Device under strong sunshine or too wet environment.

The suitable temperature for Camera and accessories is -20°C—50°C.

RF exposure information: The Maximum Permissible Exposure (MPE) level has been calculated based on a distance of d=20 cm between the device and the human body. To maintain compliance with RF exposure requirement, use product that maintain a 20cm distance between the device and human body.

For Camera : Wi-Fi Operating Frequency Range: 2412~2472MHz ;
Wi-Fi Max Output Power: 17.13dBm(EIRP)



This product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.

Customer Service

Warranty

12-month limited warranty(The actual warranty period shall be implemented according to the requirements of local laws and regulations)

Email Us

Customer Support: support@aosulife.com

Call Us

United States: +1-866-905-9950 Mon-Fri 9AM-5PM(PST)

United Kingdom: +44-20-3885-0830 Mon-Fri 9AM-5PM(GMT)

Germany: +49-32-221094692 Mon-Fri 9AM-5PM(CET)

Japan: +81-50-5840-2601 Mon-Fri 9AM-5PM (JST)

 **Facebook: @aosulife**

 **Twitter: @aosulife**

 **YouTube: @aosulife**

EN