

Downlight, 15 W, 4000 K

Item no: 3335144

1 Dismantling recommendations

- Disconnect from power supply.
- Ask help from a professional if needed.

2 Dismantling instructions

Step 1

Remove the diffuser by a suction cup.



Step 2

Knead the wire card, press down and remove the wire card.



Step 3

Press the buckle outward with a flat-head screwdriver or crowbar to slide the LED board out of the buckle.




Step 4

Take out the LED board.



Step 5

Take out the light source and do the ErP test.

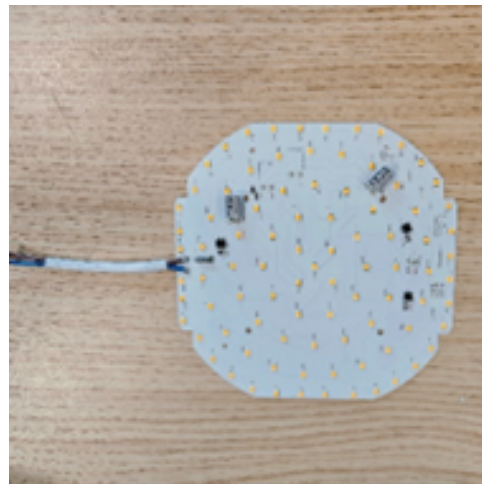

This is a publication by Conrad Electronic SE, Klaus-Conrad-Str. 1, D-92240 Hirschau (www.conrad.com).

All rights including translation reserved. Reproduction by any method (e.g. photocopying, microfilming or the capture in electronic data processing systems) requires prior written approval from the editor. Reprinting, also in part, is prohibited. This publication reflects the technical status at the time of printing.

Copyright by Conrad Electronic SE.

*3335144_V1_1224_hs_en 1812293643 I1/O1 en