


Network Setting

CAUTION

The network mode can only be switched when the charger is in standby or connected state.

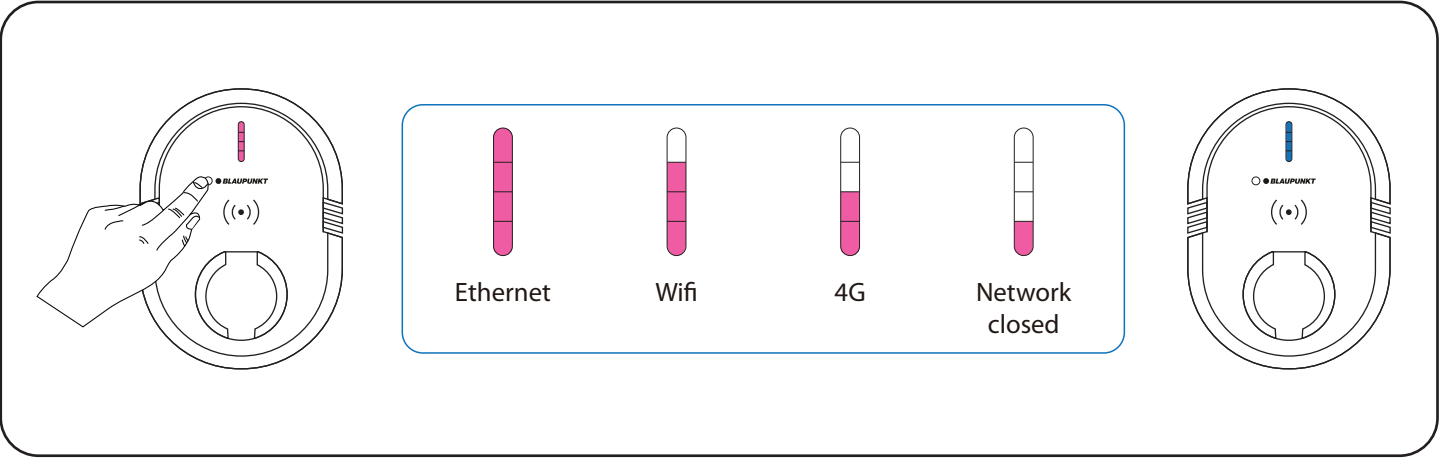

Press the setting button for 4 seconds, no more than 8 seconds. Then release it, to enter the network setting. The led will turn pink with quick flashing.


Each time you press the black button, a different network setting will be selected in turn. The default networking mode is ethernet

Waiting for 4 seconds, the Charger will exit and set the networking mode you selected.

User Card and Settings

CAUTION

For basic models: User Card (Offline) * 1pcs & Management Card (Offline) * 1pcs
For smart & full function models: User Card (Offline) * 1pcs & Management Card (Offline) * 1pcs & User Card (Online) * 2pcs

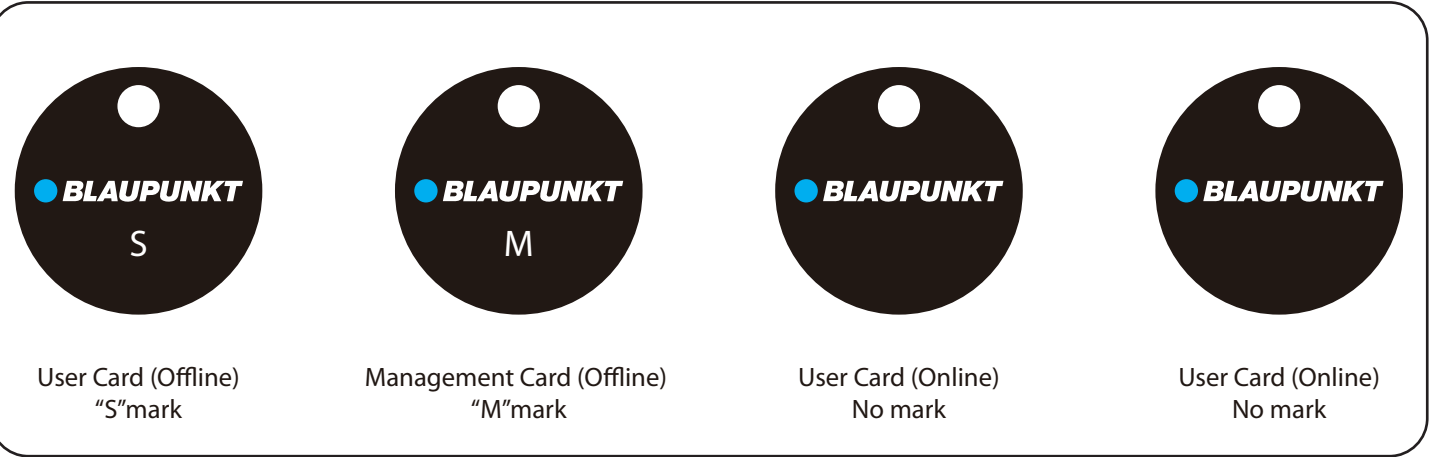

User Card (Offline) is the key to start charging whether the charger is successfully connected to the Internet or not. It can also be used to switch the power grid mode of the charger.

Management Card (Offline) is the key to switch the working mode of the charger, between normal mode and plug & play mode.

User Card (Online) is the key to start charging for smart & full function models.


Power Grid Mode Setting

⚠ CAUTION

The power grid mode can only be switched when the charger is in standby or connected state.

"TN" mode is the default power grid mode. It is strongly recommended that users charge under "TN" mode.

"IT" mode has certain security risks due to the absence of PE. So "IT" mode should only be used under the premise that users can ensure safety and in special circumstances where PE does not exist in the power system.

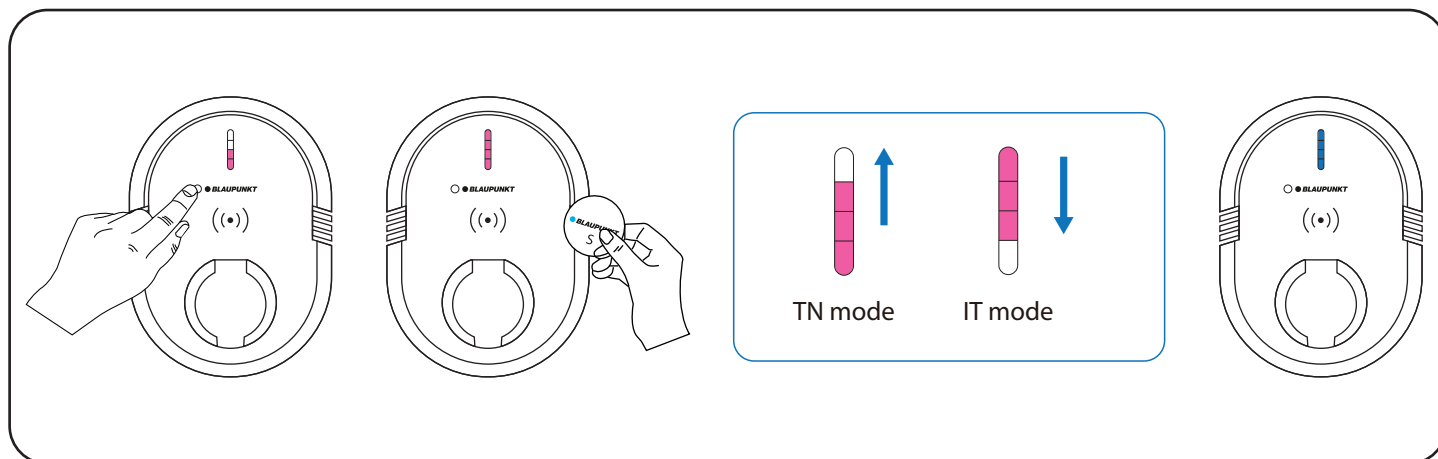

Press the setting button once to enter the setting mode.

Swipe the User Card (Offline) for the charger, the power grid mode will be switched between "TN" and "IT" mode.

TN mode: LED runs from bottom to top.

IT mode: LED runs from top to bottom.


The Charger will exit immediately if power grid mode is successfully switched or waiting for 4 seconds.

Working Mode Setting

⚠ CAUTION

The working mode can only be switched when the charger is in standby or connected state.

Normal mode is the default working mode. Plug & play means free charging.

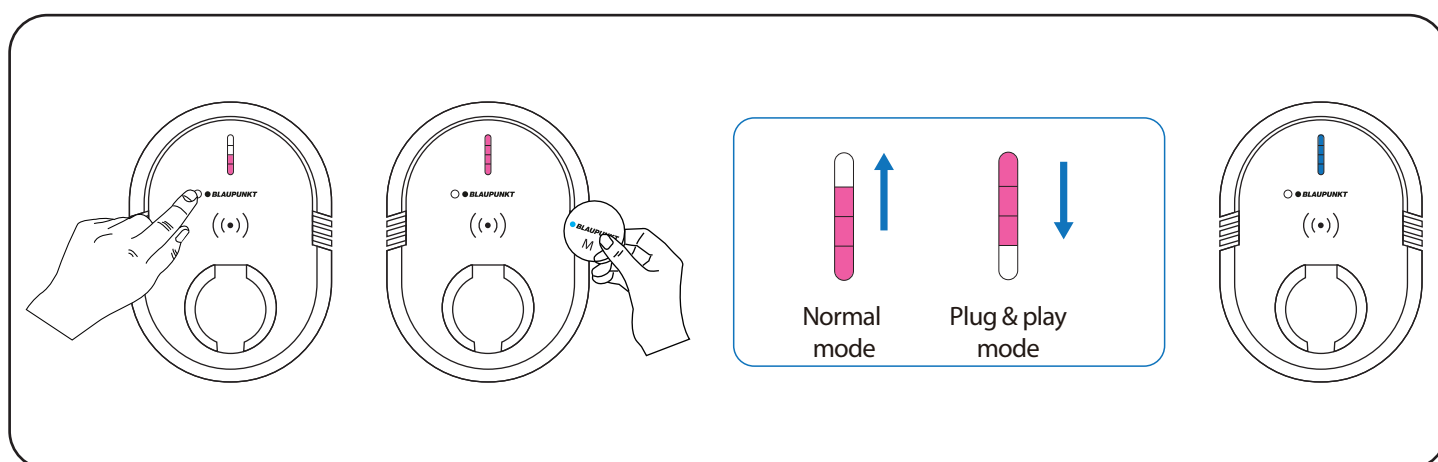

Press the setting button once to enter the setting mode.

Swipe the Management Card (Offline), the working mode will be switched between normal mode and plug & play mode.

Normal mode: LED runs from bottom to top.

Plug & play mode: LED runs from top to bottom.

The Charger will exit immediately if working mode is successfully switched or waiting for 4 seconds.


Charge Keys Pairing For User Card (Online)




1.Open the "Monta Charge" APP.




2.Power on the charger & configure the network correctly.

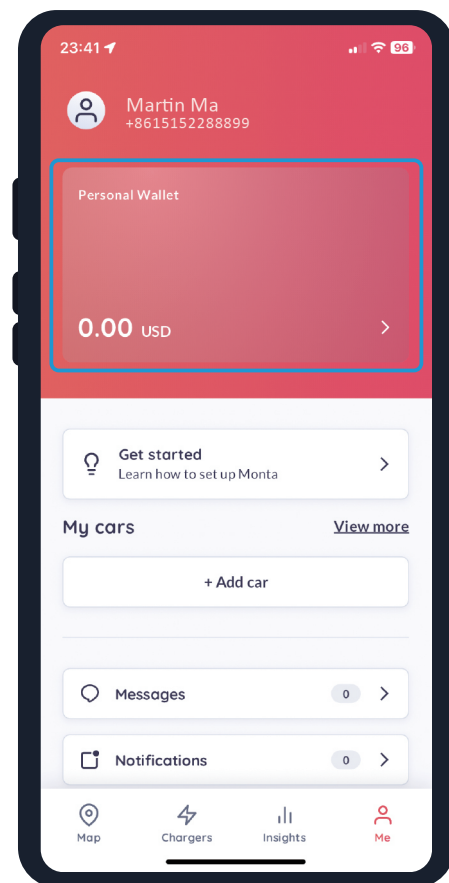


3.Select "Personal Wallet"

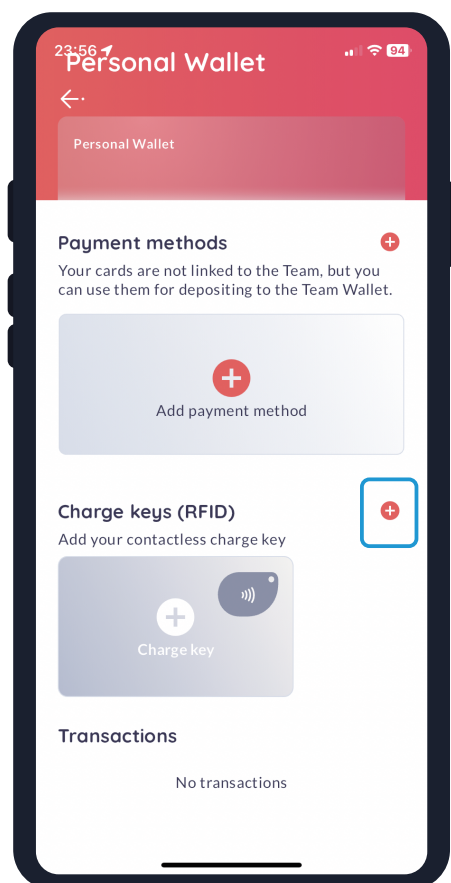

4.Add Charge keys (RFID)


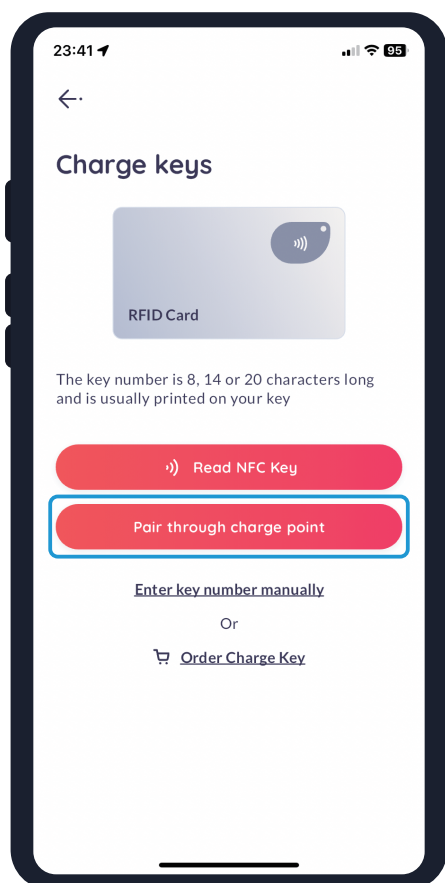


5.Pair through charge point.


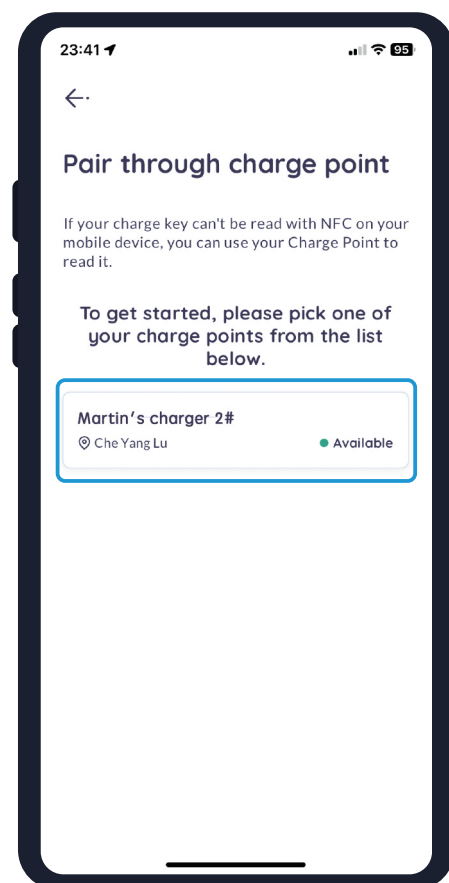


6.Pick the available charge point you are using now.


Charge Keys Pairing For User Card (Online)

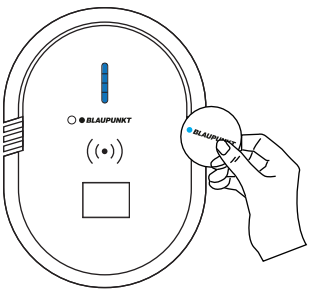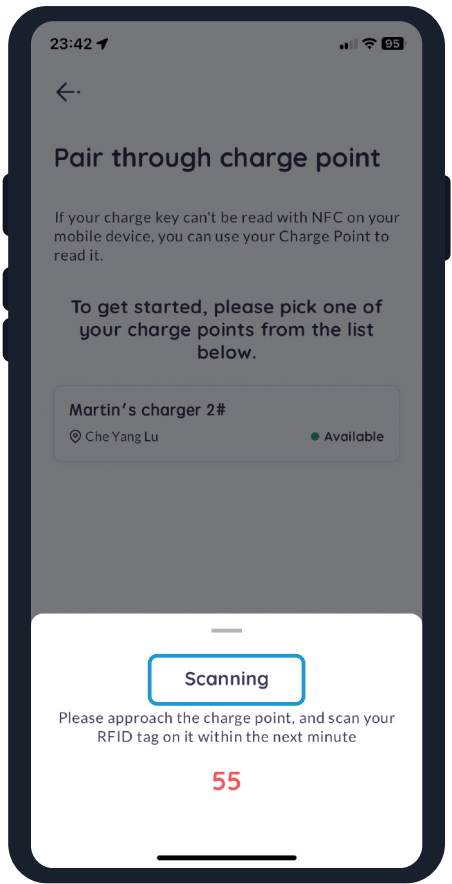

BW-C

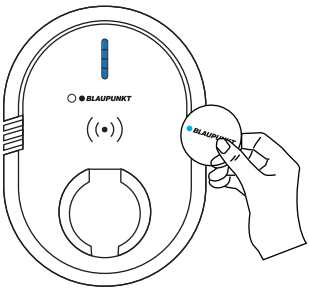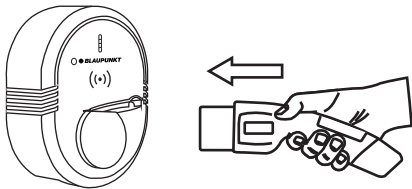



BW-S

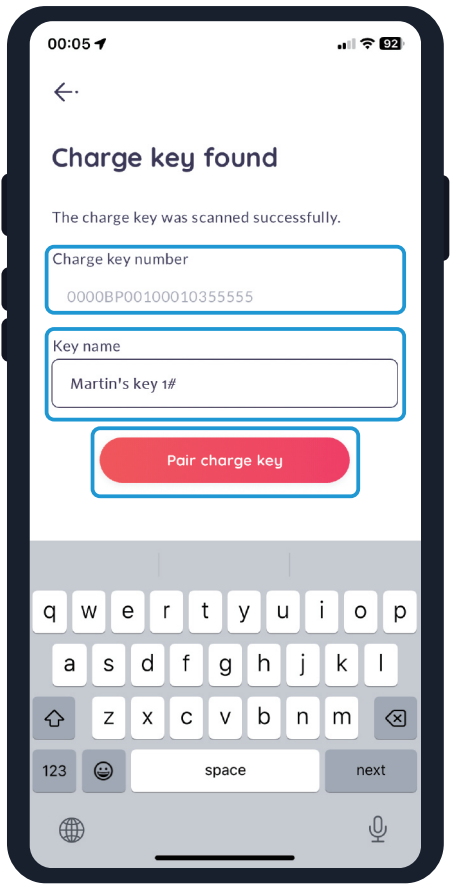

7.Swip the User Card (Online) on the selected charge point within 60 seconds.

8.For BW-S, you should make the socket connection first.Then swip the user card.

9.Find the user card (charge key) and name it as your will. Then pair it.

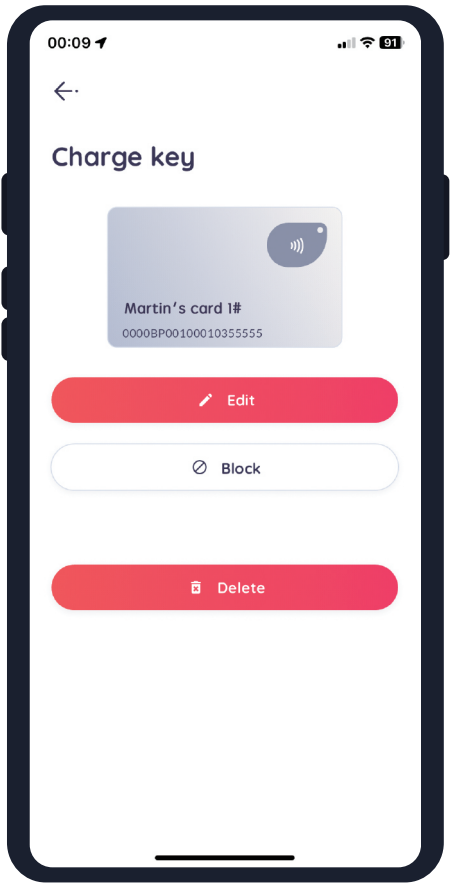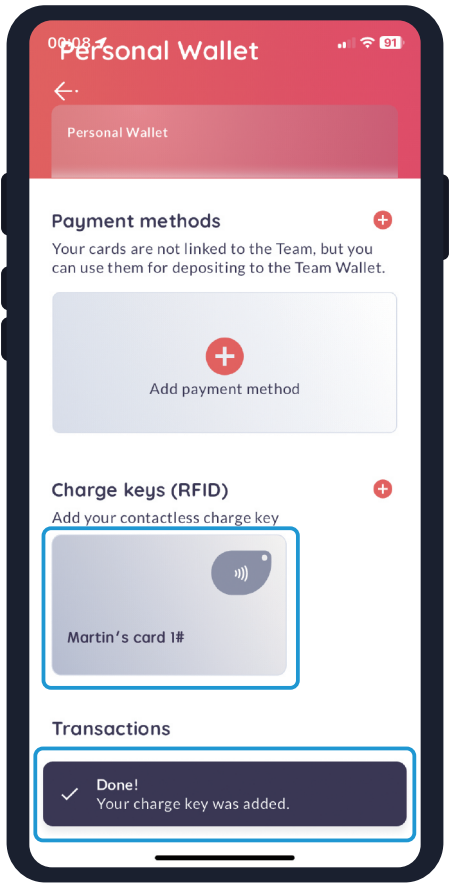

10.You may have to enter the passcode for your monta account.

11.User card (charge key) pairing done.

12.Now the User card (Online) can be used to start charging on your charge ponits.