

 
QUEST

deeper


Quest Guide




Online version



What's inside

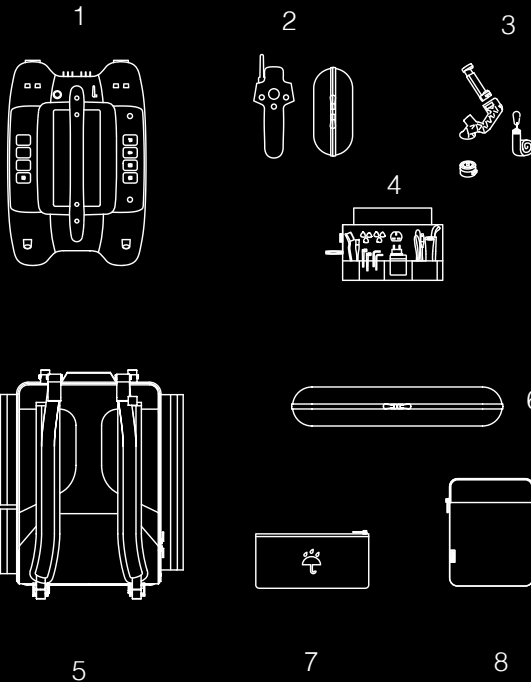


1. Quest, 2. controller & case, 3. controller phone mount, 4. maintenance kit,
5. Quest bag, 6. tool and accessory case , 7. Quest bag rain cover,
8. smartphone/tablet pouch.

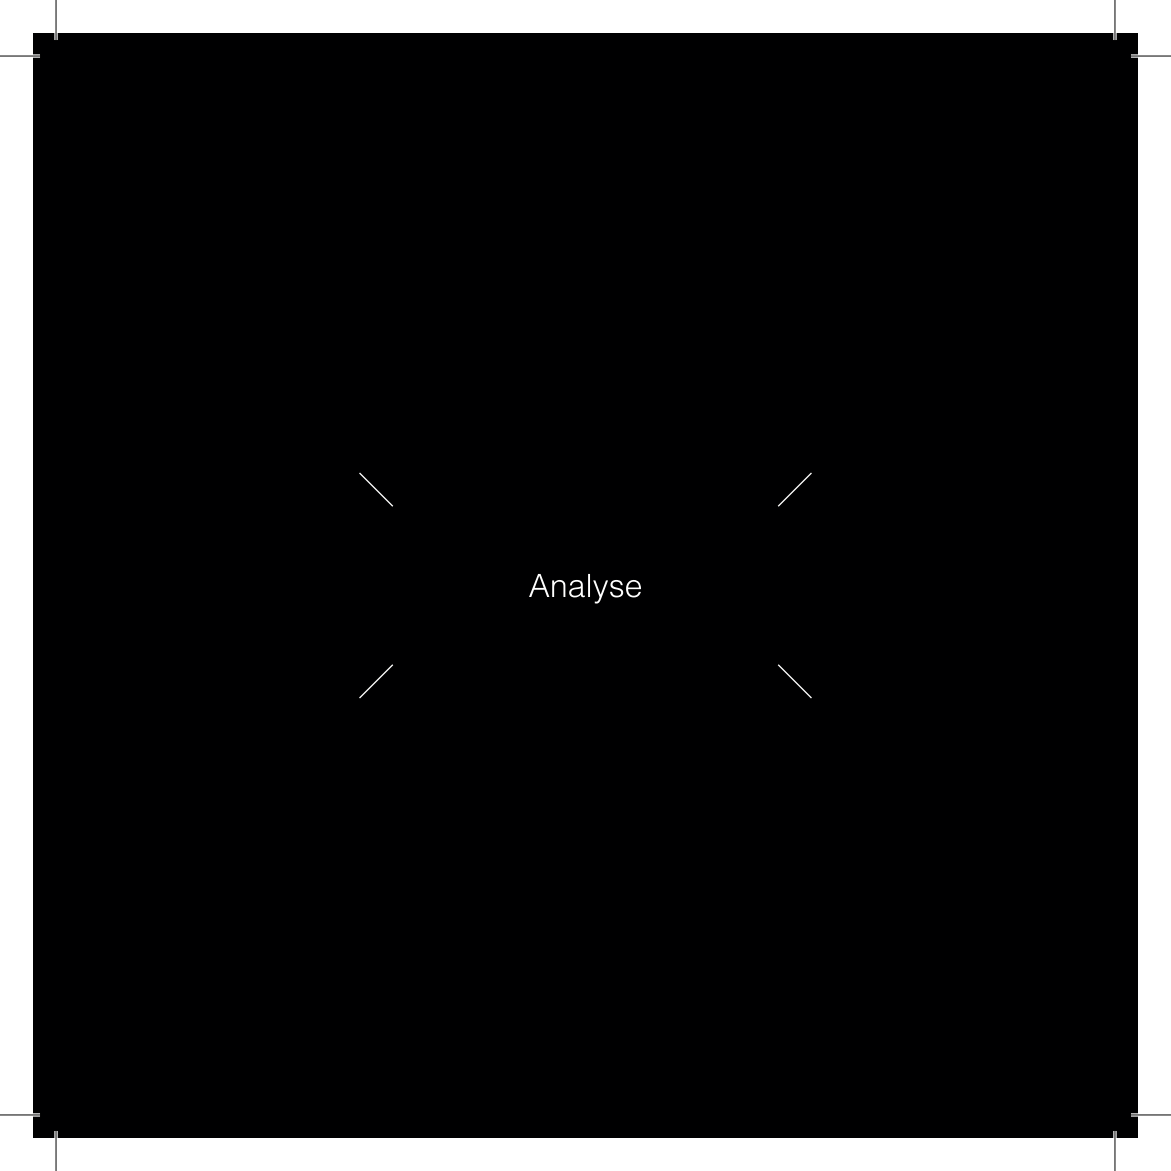


Analyze

Quest top view

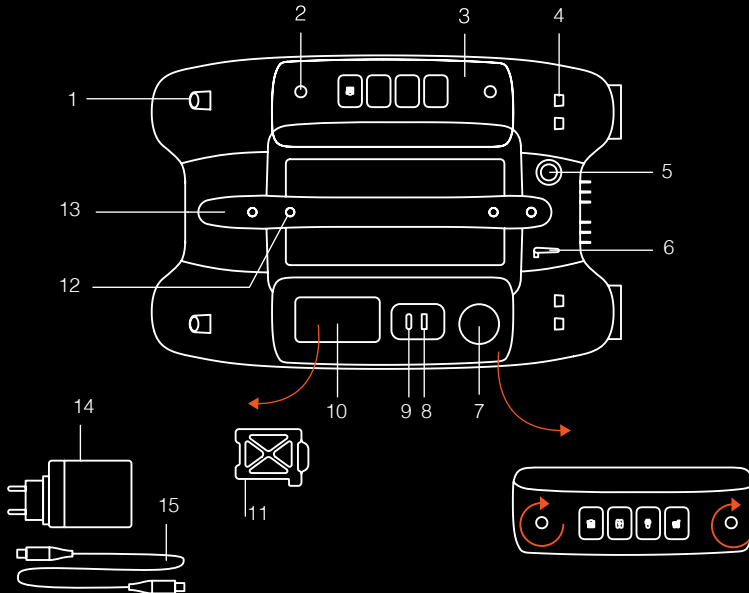


1. headlights, 2. lid open/close screws, 3. lid, 4. tail lights, 5. on/off button & indication lights, 6. antenna, 7. controller dock, 8. controller charging output, 9. Quest charging input, 10. battery compartment, 11. removable batteries, 12. screws for accessories, 13. handle, 14. Quest charger, 15. charging cable.

Quest bottom view

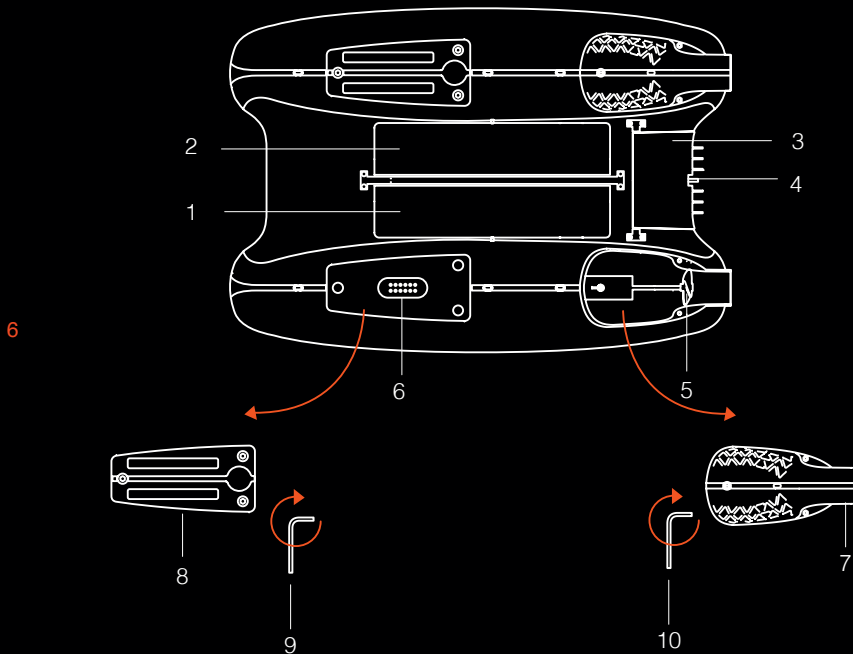


1. Left hopper, 2. Right hopper, 3. bottom hopper, 4. hook place, 5. propeller,
6. sonar module connector, 7. removable weed protector, 8. sonar module,
9. T20 torx key for sonar module, 10. M2.5 allen key for weed guard.

Controller

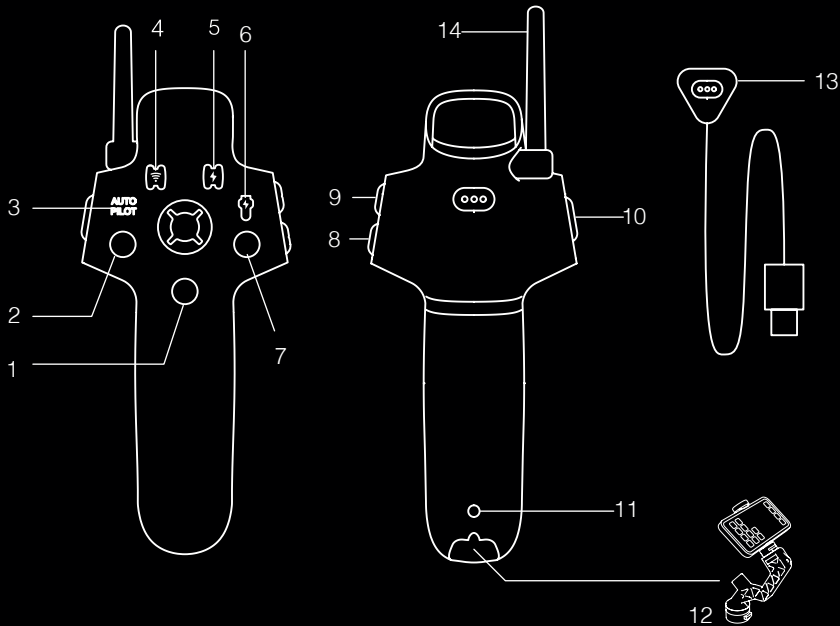


1. Back hopper, 2. Left hopper, 3. Autopilot status light,
4. Quest Boat connection status light, 5. Quest boat battery status light,
6. Controller battery status light, 7. Right hopper, 8. button B open all hoppers,
9. Customizeble button A, 10. On/ Off button, 11. belt attachment hole,
12. adapter fixing hole.

Maintenance kit

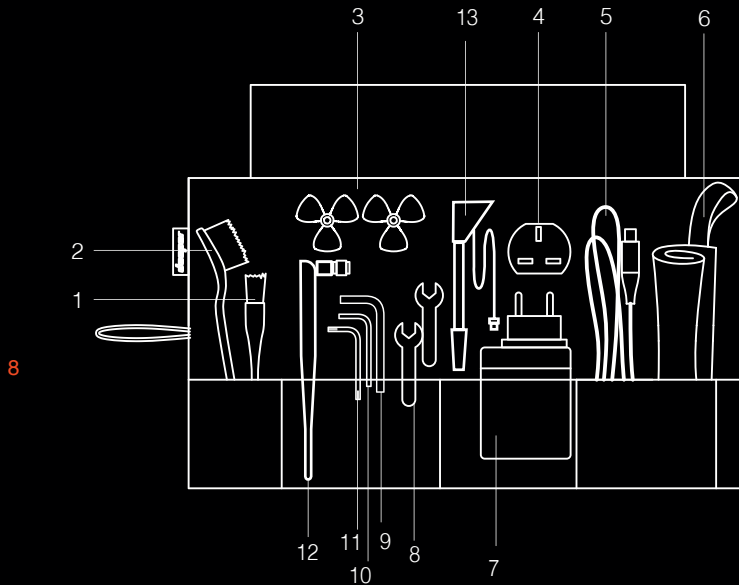


1. brush, 2. angle brush, 3. spare propellers, 4. U charging adapter,
 5. charging cable, 6. Fabric wipe, 7. charger, 8. M7 open wrench for
 propellers, 9. M5 allen key for handle, 10. M2.5 allen key for weed guard,
 11. T20 torx key for sonar module, 12. spare antenna,
 13. antenna extension module.

Phone mount

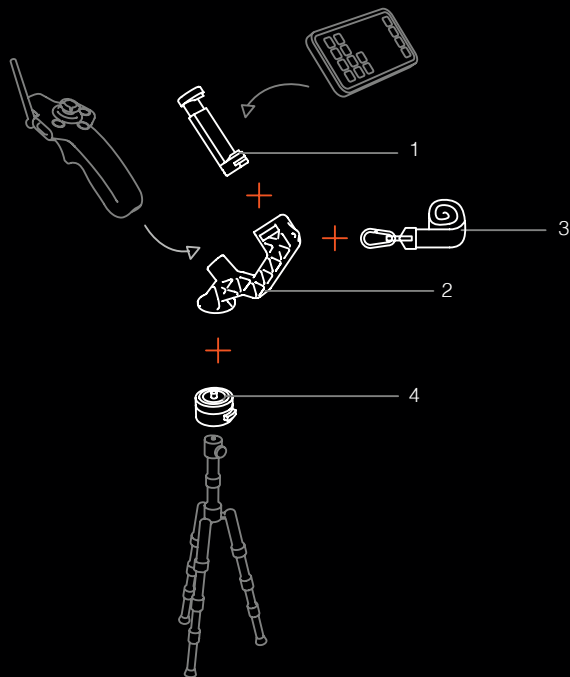


1. phone mount, 2. controller adapter, 3. lanyard, 4. tripod adapter.

 Note: .phone and tripod not included.



Preparation

Charge

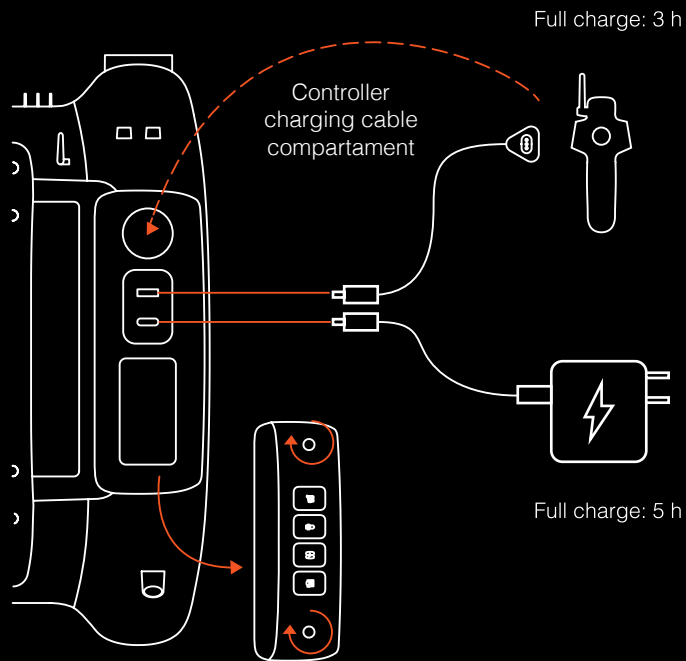

Prepare App




1. Download
Fish Deeper app

2. Register
an account

3. Download
an offline
map of your
location


Unfold antennas

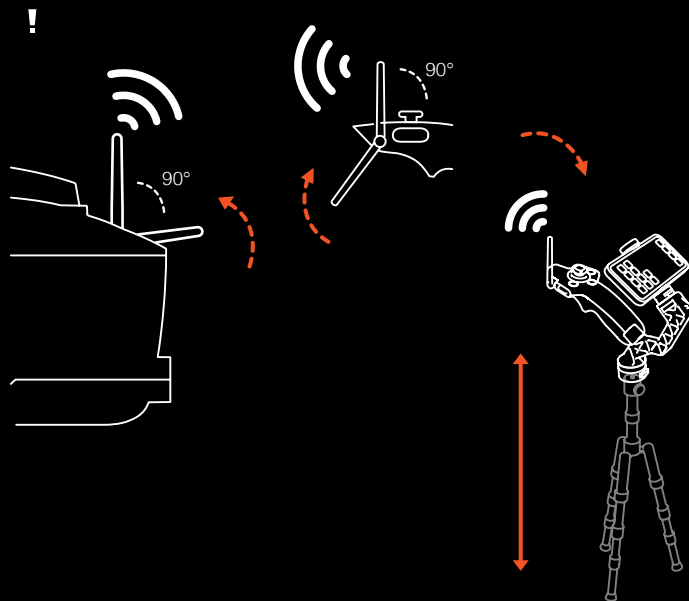


13

Unfold antennas straight
and hold controller at waist level or higher.
Use tripod for reliable connection.

Extend connection

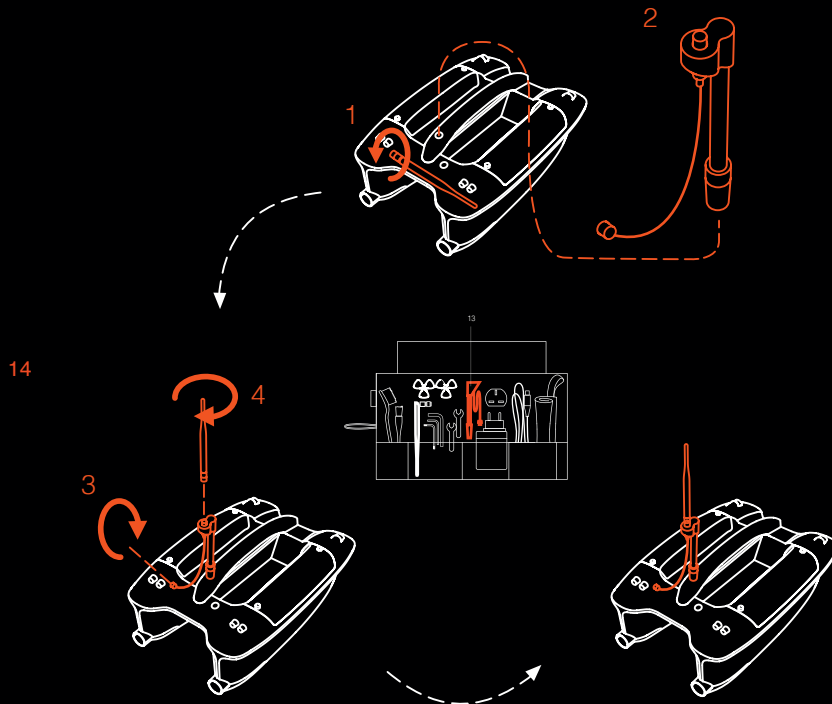


 For optimal performance and stable connection, use the antenna extension module when operating your Deeper Quest beyond 350 meters /1150 ft or in rough conditions




Usage


Switching on & Wi-Fi connection

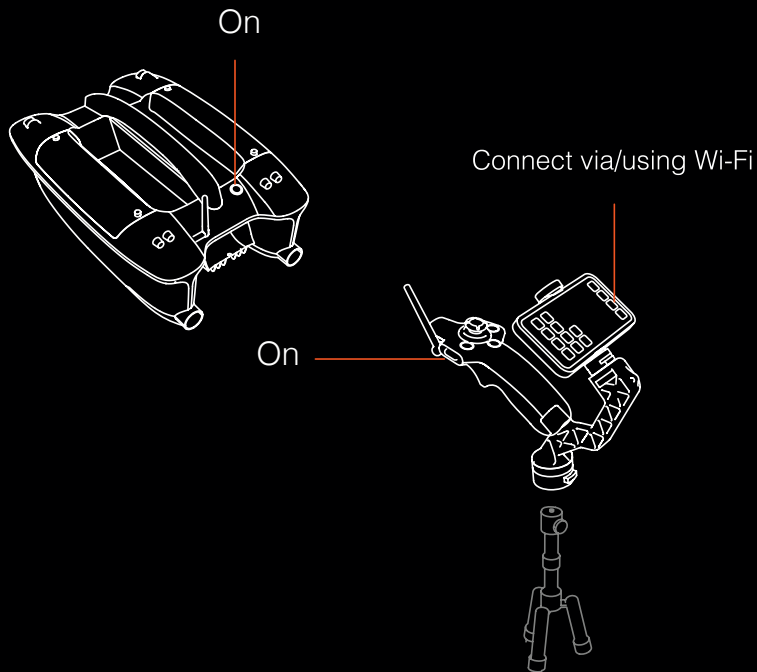

Phone mount assembly

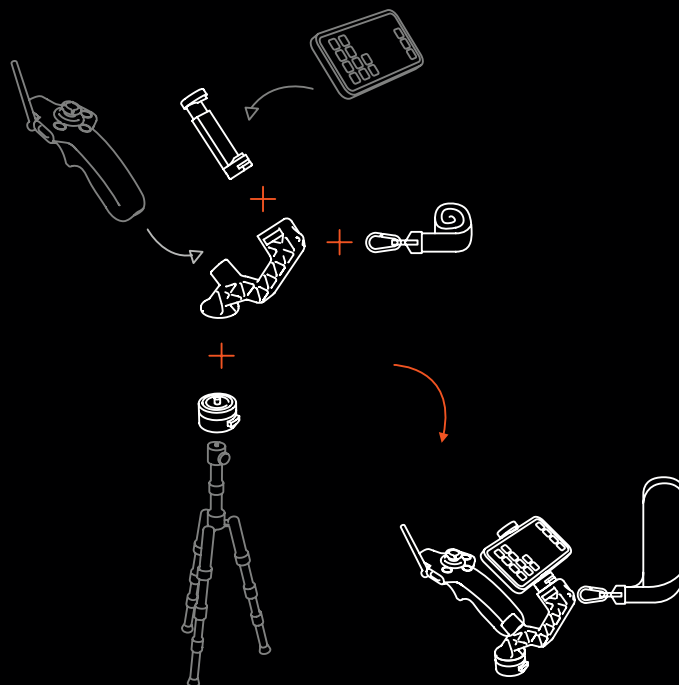

Connect Wifi

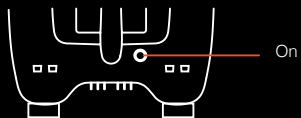


Controller
connects to
Quest boat

On






Phone connects
to controller

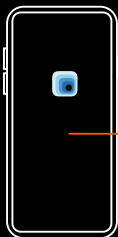

Connect via wifi
to controller

 
Connect to Quest Controller Wifi

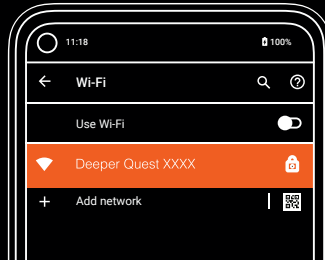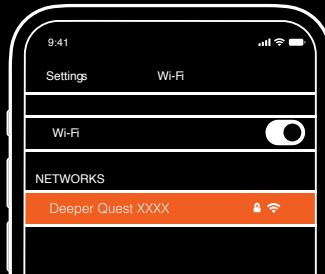




Safety Features

 
Out of range & Low Battery

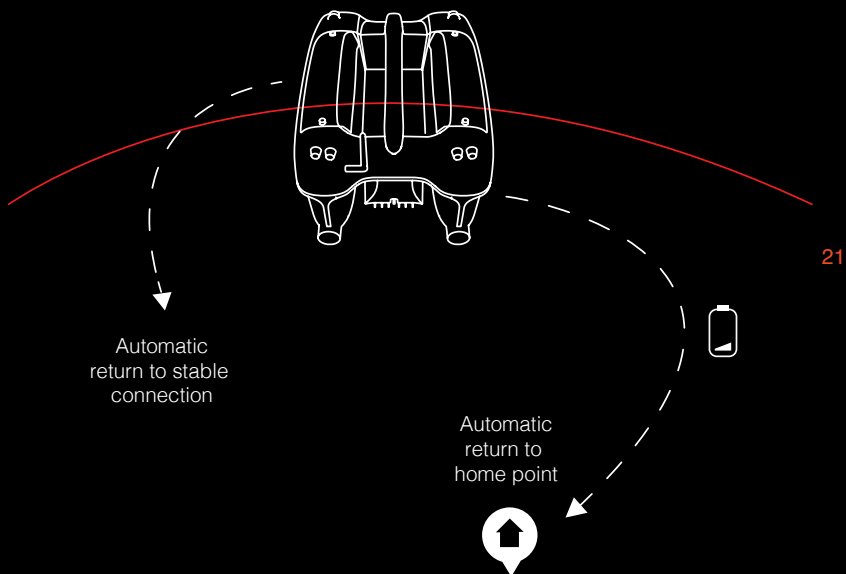



Indication Lights

Battery charging lights & status

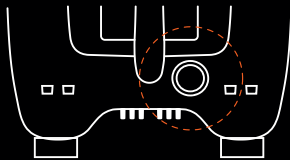


	Charging blinking	Battery state
100% - 10%		
10% - 0%		



	Charging blinking	Battery state
100%-25%		
25%-10%		
10% - 0%		

 Connecting Quest boat & Controller

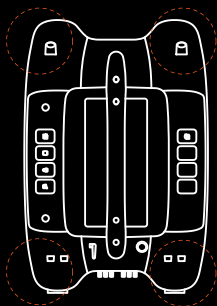


White headlights



Red tail lights

24

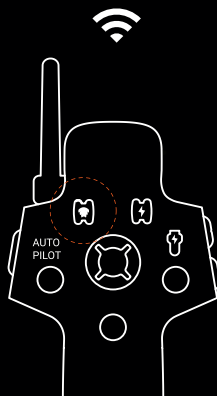

Connecting
or disconnected
(Blinking)



Connected
(always on)




Emergency
bad connection



Weak
Connection
(always on)


Battery light status

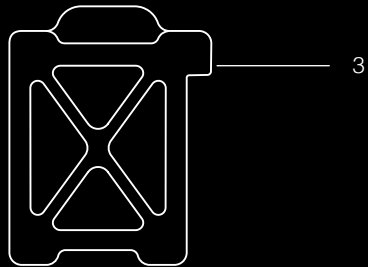

25

1 battery indication lights, 2 battery indication button, 3 power input contacts


Left, right, rig hopper opens

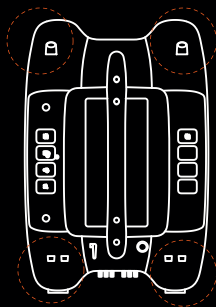

Blinks 2 times




26

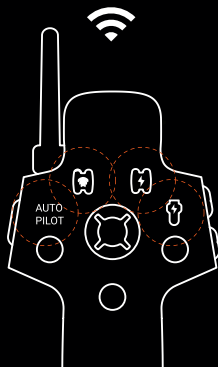


Blinks 2 times



Auto Pilot

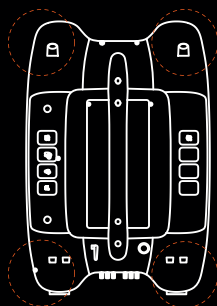

Recovering

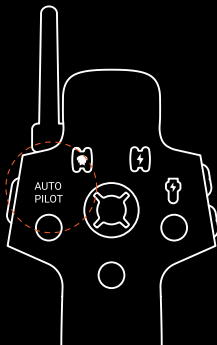

Auto pilot ready



No GPS



Autopilot active




Recovery
mode active




Maintenance and
warnings

Charge at least every 6 months

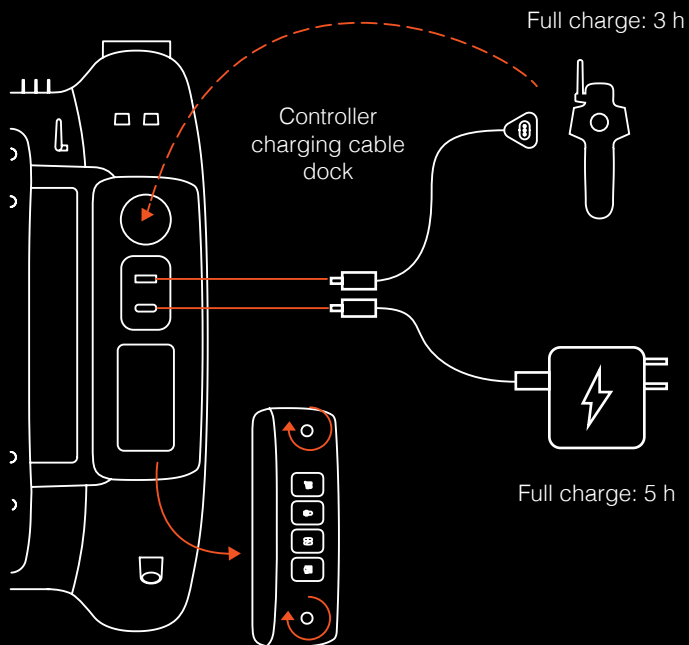

Release condensation or moisture

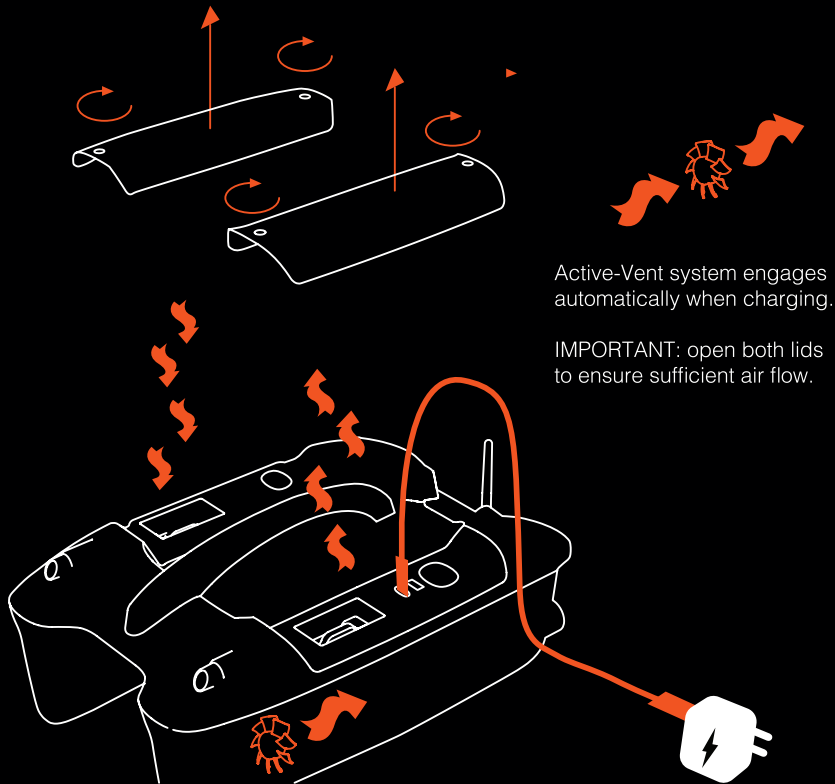


Active-Vent system engages automatically when charging.

IMPORTANT: open both lids to ensure sufficient air flow.

Moisture Removal, Active-Vent.

Bad weather conditions

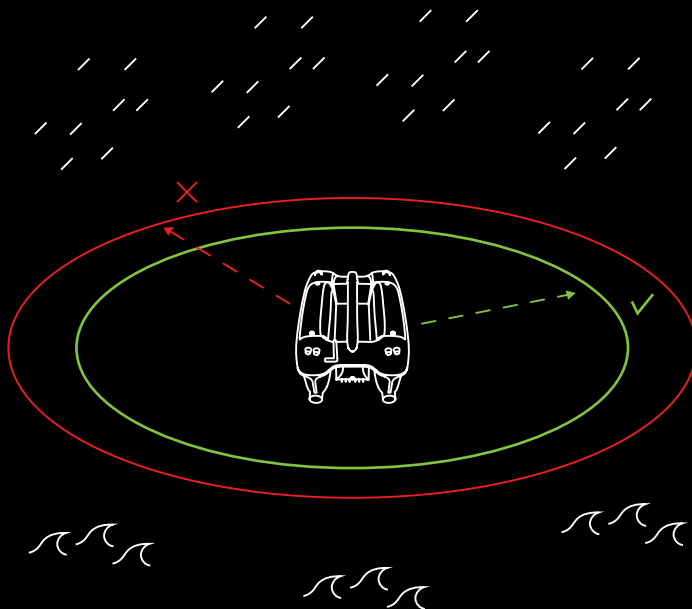


31

Bad weather might affect Quest range and connection.
Note: range capacity will differ depending on conditions.

Controller joystick calibration

32

 1. Joystick may become
IMBALANCED
affecting precision
of control.

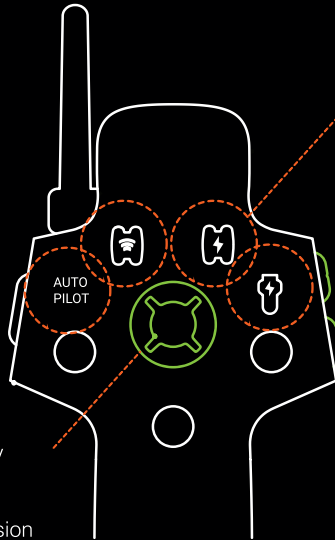


3. Blinks one time
in purple.




2. Hold two side
buttons for 3 sec.
until purple light
blinks one time
indicating joystick
is calibrated as will
function as normal.

Avoid collisions

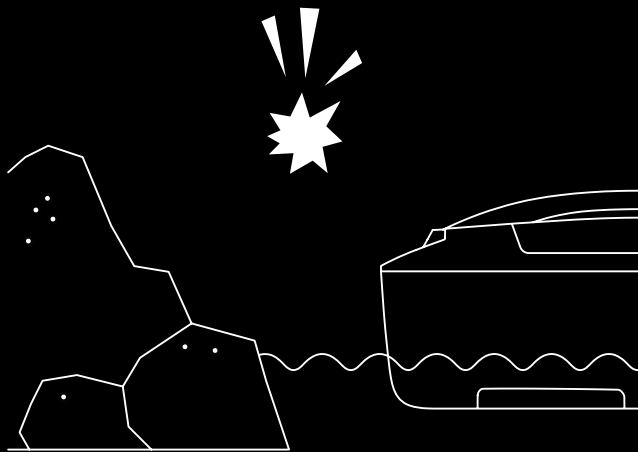


Remove & clean

34

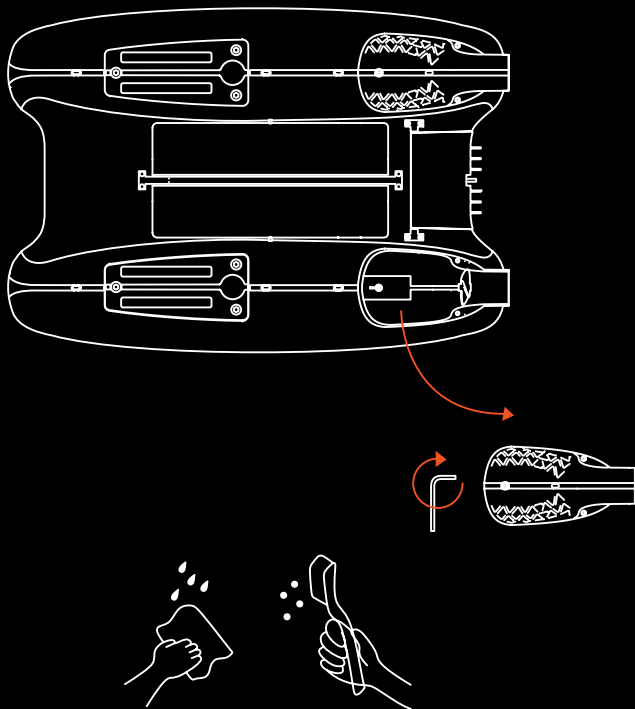

Keep clean and dry after usage

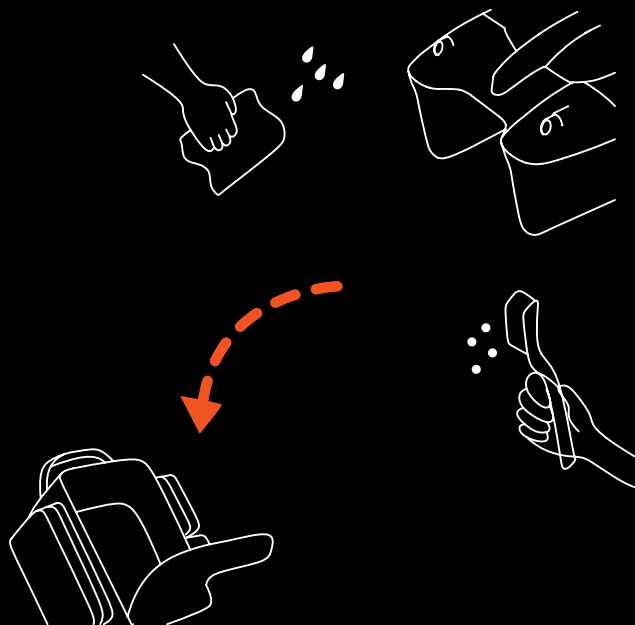

deepersonar.com

support@deeper.eu

www.youtube.com/@Buydeeper

deeper