



KMP-284

05/25



FR

Cet appareil et  
ses accessoires  
sont recyclables

À DÉPOSER  
EN MAGASIN



À DÉPOSER  
EN DÉCHÈTERIE

OU




Points de collecte sur [www.quefairedemesdechets.fr](http://www.quefairedemesdechets.fr)  
Privilégiez la réparation ou le don de votre appareil !

## **Safety information**

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. Warning: This product includes a lithium polymer battery.
2. WARNING: CHOKING HAZARD – Children under 3 yrs. can choke or suffocate on the kids media player because of its small size. Adult supervision required. Keep camera away from toddlers and pets to avoid chewing and swallowing. Discard broken buttons or parts at once.
3. Product operating and storage temperature is from 0 degree Celsius to 40 degree Celsius. Under and over this temperature might affect the function.
4. Never open the product. Touching the inside electrics can cause electric shock. Repairs or service should only be performed by qualified personnel.
5. Do not expose to heat, water or moisture as this can effect the product functionality and be dangerous for the built in battery!
6. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
7. Only charge with supplied USB cable.
8. Do not use non-original accessories together with the product as this can make the product functionality abnormal.

## Parts Description

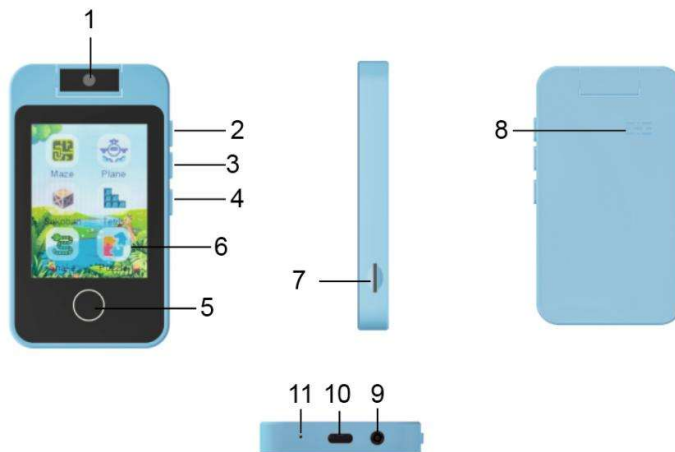

- 1.Lens    2.Up button    3.Down button    4.Power button  
5.Home button    6.Display    7.MicroSD Card Slot    8.Speaker  
9.Headphone slot    10.USB slot    11.Reset hole

### 1.Lens

Rotatable lens for taking pictures and video

### 2.Up button

In setting mode, select the previous option;  
In music mode,press to increase volume;

### 3.Down button

In setting mode, selects the next option;  
In music mode, press to decreases the volume

### 4.Power button

Press and hold this button to turn the device on/off;  
Short press to turn on/off the display

### 5.Home button

Short press to exit the mode and return to the main interface.

### 6.Display

2.8-inch touch screen;

### 7.SD Card Slot

Supports up to 128GB FAT32 MicroSD card

**\*Note:** To reinstall or replace the card, insert the card (or any new MicroSD card) into the MicroSD card Slot with the contact lines facing the display side.

How to format micro SD cards over 32 GB on the camera:

- Place the MicroSD card into the Kids media player.
- Tap the settings icon on the media player to enter settings mode.
- Press the up and down buttons or slide the screen to select “Format” .
- Tap "OK" to confirm
- When the “Please Waiting...”“Formatting success” prompt disappears from the screen, the SD card has been formatted successfully.

## 8.Speaker

Speaker: 8Ω 1W

## 9.Headphone slot

3.5mm headphone jack for listening to music, stories and games;

## 10.USB slot

For connecting to PC/other device for data transferring files, and for connecting to an external power supply to charge the product.

## 11.Reset hole

If the product is functioning abnormally, insert a sharp object into the small hole to reset the device. After the reset, the device enters the shutdown state from where you can turn on the product again via the power button.

**NOTE:** Adult operation is recommended.

# Basic operation instructions

## 1.Power On/off:

Press and hold the power button to turn the camera on/off.

## 2. Photo Mode



- 1.Memory card
- 2.Number of photos that can be taken
- 3.Photo size
- 4.Special effects/photo frame
- 5.Battery level
- 6.Playback
- 7.Year/month/day
- 8.Time
- 9.Zoom
- 10.Shooting

-Tap the Home button to enter the main interface, tap the icon  to enter the photo mode.

-Tap the icon  to take a photo.


-Tap the icon  to select different effects, filters and photo frames.

-Slide your finger up/down on the screen to zoom in/out.

-Tap the icon  to view the photos

-Tap the Home button to return to the main interface.

### 3. Video Mode

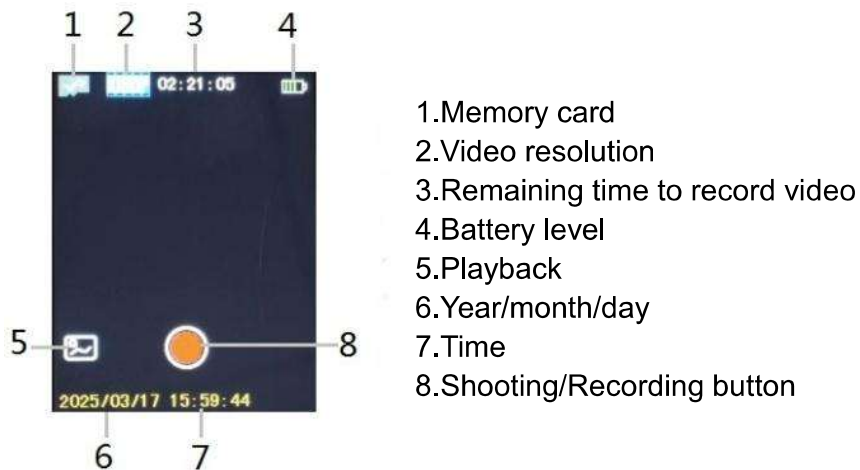

1. Tap the Home button to enter the main interface, tap the icon  to enter the video mode.

2.Tap the icon  to start/stop recording.

3.Tap the icon  to view the video.

4.Tap the Home button to return main interface.

### 4. Music Mode



- 1.Memory card
- 2.Battery level
- 3.Previous song
- 4.Next song
- 5.Music List
- 6.Play Time
- 7.Play/Pause
- 8.Number of songs/sound files

-Tap the Home button to enter the main interface, tap the icon  to enter the music mode.

-Tap the icon  to select the previous song.

-Tap the icon  to select the next song.

-Tap the icon  to play/pause.

-Press the up button to increase the volume.

-Press the down button to decrease the volume.

-Tap the Home button to return to the main interface.

#### **\*Note:**

Music files in MP3 format should be copied to the MicroSD memory card first.  
Adult operation is recommended.

### **5.Setting Mode**



-Tap the Home button to enter the main interface and tap the icon  to enter the settings menu.

-Short press up/down button or slide the screen up/down with your finger to select each setting, and then tap the screen to enter the sub-menu. In the Sub-menu you can tap the screen to select the setting that needs to be changed.

-Tap the Home button to return to the main interface.

## 6.Alarm Mode

- Tap the Home button to enter the main interface and tap the icon  to enter the alarm mode.
- Tap the icon  to adjust the alarm time.
- Tap the icon  to turn on/off the alarm.
- Tap the icon  to confirm the setting.
- You can set two different alarm times: “alarm00” “alarm01”
- Tap the Home button to return main interface.

## 7.Playback Mode

- Tap the Home button to enter the main interface and tap the icon  to enter the playback mode.
- Tap the icon  to preview photos and videos.
- Tap the icon  to delete single photo/video.
- Tap the icon  to delete all photos/videos.
- Tap the Home button to return to the main interface.

## 8.Audio Mode

- Tap the Home button to enter the main interface and tap the icon  to enter the Audio mode.
- Tap the icon  to start/stop recording.
- Tap the icon  to preview audio file.
- Tap the Home button to return to the main interface.

## 9.Calculator

- Tap the screen to select the calculator icon  to access the calculator

function.

- Tap the numbers etc. with your finger to use the calculator.
- Tap “clear” in the lower left corner to clear the interface.
- Tap the Home button to return to the main interface.

## 10.Date Setting

- Tap the Home button to enter the main interface, tap the icon  to enter the date setting.
- Tap the icon  to set the current date.
- Tap the icon  to set the current time.
- Tap the Home button to return to the main interface.

## 11.Stopwatch

- Tap the Home button to enter the main interface, tap the icon  to enter the stopwatch settings.
- Tap the icon  to begin the timer, and click the icon again for a tentative period.
- Tap the time reset icon  to clear the timer.
- Tap the Home button to return to the main interface.

## 12. Countdown

- Tap the Home button to enter the main interface, tap the icon  to enter the countdown settings.
- Tap the icon  to set countdown time.
- Tap the icon  to start the countdown, tap the icon again to pause.
- Tap the icon  to reset the time.
- Tap the Home button to return to the main interface.

## 13.Storytelling



-Tap the Home button to enter the main interface, tap the icon  to enter the storytelling mode.

-Tap the icon  to select the story, tap the icon  to play/pause the story.

-Tap the icon  to check a list of story files

-Tap the Home button to return to the main interface.

**\*Note:**

Story files should be copied to the MicroSD memory card first.  
Adult operation is recommended.

#### 14.Games

- There are 6 built-in games, tap the game icon to enter the game.
- Swipe the screen up, down, left and right to control the direction.
- Tap the Home button to return to the main interface.

#### 15.Wallpapers


-Tap the Home button to enter the main interface, tap the icon  to enter the wallpaper settings.

-Tap the icon  to select the wallpaper and tap the icon  to confirm

-Tap the Home button to return to the main interface.

#### 16.Drawing Mode

-Tap the Home button to enter the main interface and tap the icon  to enter the drawing mode.

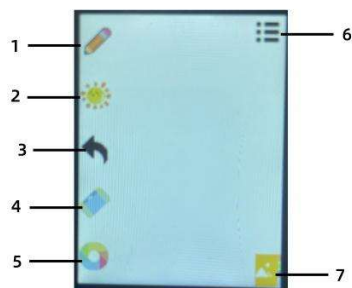

- 1.Drawing
- 2.Illustration
- 3.Withdrawal
- 4.Erase
- 5.Brush color
- 6.Save/Delete
- 7.Playback

-Tap the Home button to return to the main interface.

## 17. USB Mode

**NOTE:** Adult operation is recommended.

### 1. Battery charging

-Plug the supplied USB cable (small end) into the USB port on your device;  
-Plug the large end of the USB cable into your computer or a standard USB power outlet adapter. Please charge the battery before using the devices.

### 2. Connect to the computer

-Connect the USB cable with the computer, the devices will be automatically connected to the USB and from here you can transfer files to and from the product.

## Product Parameters

|                  |                                                                                                                                                                                                                                                                                                                                                                                                                          |
|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Display          | 2.8-inch touch screen                                                                                                                                                                                                                                                                                                                                                                                                    |
| Memory Card      | MicroSD Card, up to 128GB FAT32 (Not included)                                                                                                                                                                                                                                                                                                                                                                           |
| Photo Resolution | 1M,2M,3M,5M,8M,10M,12M,16M,18M,20M,24M,40M,48M                                                                                                                                                                                                                                                                                                                                                                           |
| Video Resolution | VGA,720P,1080P (interpolated)                                                                                                                                                                                                                                                                                                                                                                                            |
| Power Source     | Built-in 3.7V 500mAh Li-ion battery                                                                                                                                                                                                                                                                                                                                                                                      |
| Video Format     | AVI                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Photo Format     | JPG                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Built-in Memory  | <b>Note:</b> Built-in memory (can take and store 23 photos) but cannot record video. Pictures taken to the built-in memory can only be viewed on the media player itself. To be able to transfer photos and videos to a PC, please make sure to insert a FAT32 MicroSD card before use. (even with a FAT32 MicroSD card inserted, photos taken before that, onto the built-in memory, cannot be taken out of the camera) |
| USB Port         | Type-C                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Headphone Port   | 3.5mm                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Accessory        | USB Connection Cable, User Manual                                                                                                                                                                                                                                                                                                                                                                                        |
| Lens             | Rotatable lens                                                                                                                                                                                                                                                                                                                                                                                                           |

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



denver.eu



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

DENVER A/S  
Omega 5A, Soeften  
DK-8382 Hinnerup  
Denmark  
[www.facebook.com/denver.eu](http://www.facebook.com/denver.eu)

# Contact

**Main contact point: [contact.hq@denver.eu](mailto:contact.hq@denver.eu)**

## Nordics

### Headquarter

Denver A/S  
Omega 5A, Soeften  
DK-8382 Hinnerup  
Denmark

Phone: **+45 86 22 61 00**  
(Push "1" for support)

### E-Mail

For technical questions, please write to:  
**[support.hq@denver.eu](mailto:support.hq@denver.eu)**

For all other questions please write to:  
**[contact.hq@denver.eu](mailto:contact.hq@denver.eu)**

---

## Benelux

### DENVER BENELUX B.V.

Barwoutswaarder 13C+D  
3449 HE Woerden  
The Netherlands

Phone: **0900-3437623**  
E-Mail: **[support.nl@denver.eu](mailto:support.nl@denver.eu)**

---

## Spain/Portugal

### DENVER SPAIN S.A

Ronda Augustes y Louis Lumiere, n° 23 – nave 16  
Parque Tecnológico  
46980 PATERNA  
Valencia (Spain)

### Spain

Phone: **+34 960 046 883**  
Mail: **[support.es@denver.eu](mailto:support.es@denver.eu)**

### Portugal:

Phone: **+35 1255 240 294**  
E-Mail: **[denver.service@satfiel.com](mailto:denver.service@satfiel.com)**

---

## Germany

### Denver Germany GmbH Service

Service Center  
Max-Emanuel-Str. 4  
94036 Passau

Phone: **+49 851 379 369 40**

### E-Mail

**[support.de@denver.eu](mailto:support.de@denver.eu)**

Monday - Thursday 09:00 - 16:30  
Friday 09:00 - 14:00

---

## Austria

Lurf Premium Service GmbH  
Deutschstrasse 1  
1230 Wien

Phone: **+43 1 904 3085**  
E-Mail: **[denver@lurfservice.at](mailto:denver@lurfservice.at)**

---

## Poland

### LetMeRepair Poland sp. z o.o.

ul. Częstochowska 140  
62-800 Kalisz

Phone: **62 75 38 092**  
E-Mail: **[denver-service@letmerepair.pl](mailto:denver-service@letmerepair.pl)**

Godziny pracy: 8 – 18 (poniedziałek – piątek)

---

If your country is not listed above,  
please write an email to  
**[contact.hq@denver.eu](mailto:contact.hq@denver.eu)**



Denver A/S  
Omega 5A, Soeften  
DK-8382 Hinnerup  
Denmark

[denver.eu](http://denver.eu)  
[facebook.com/denver.eu](https://facebook.com/denver.eu)

