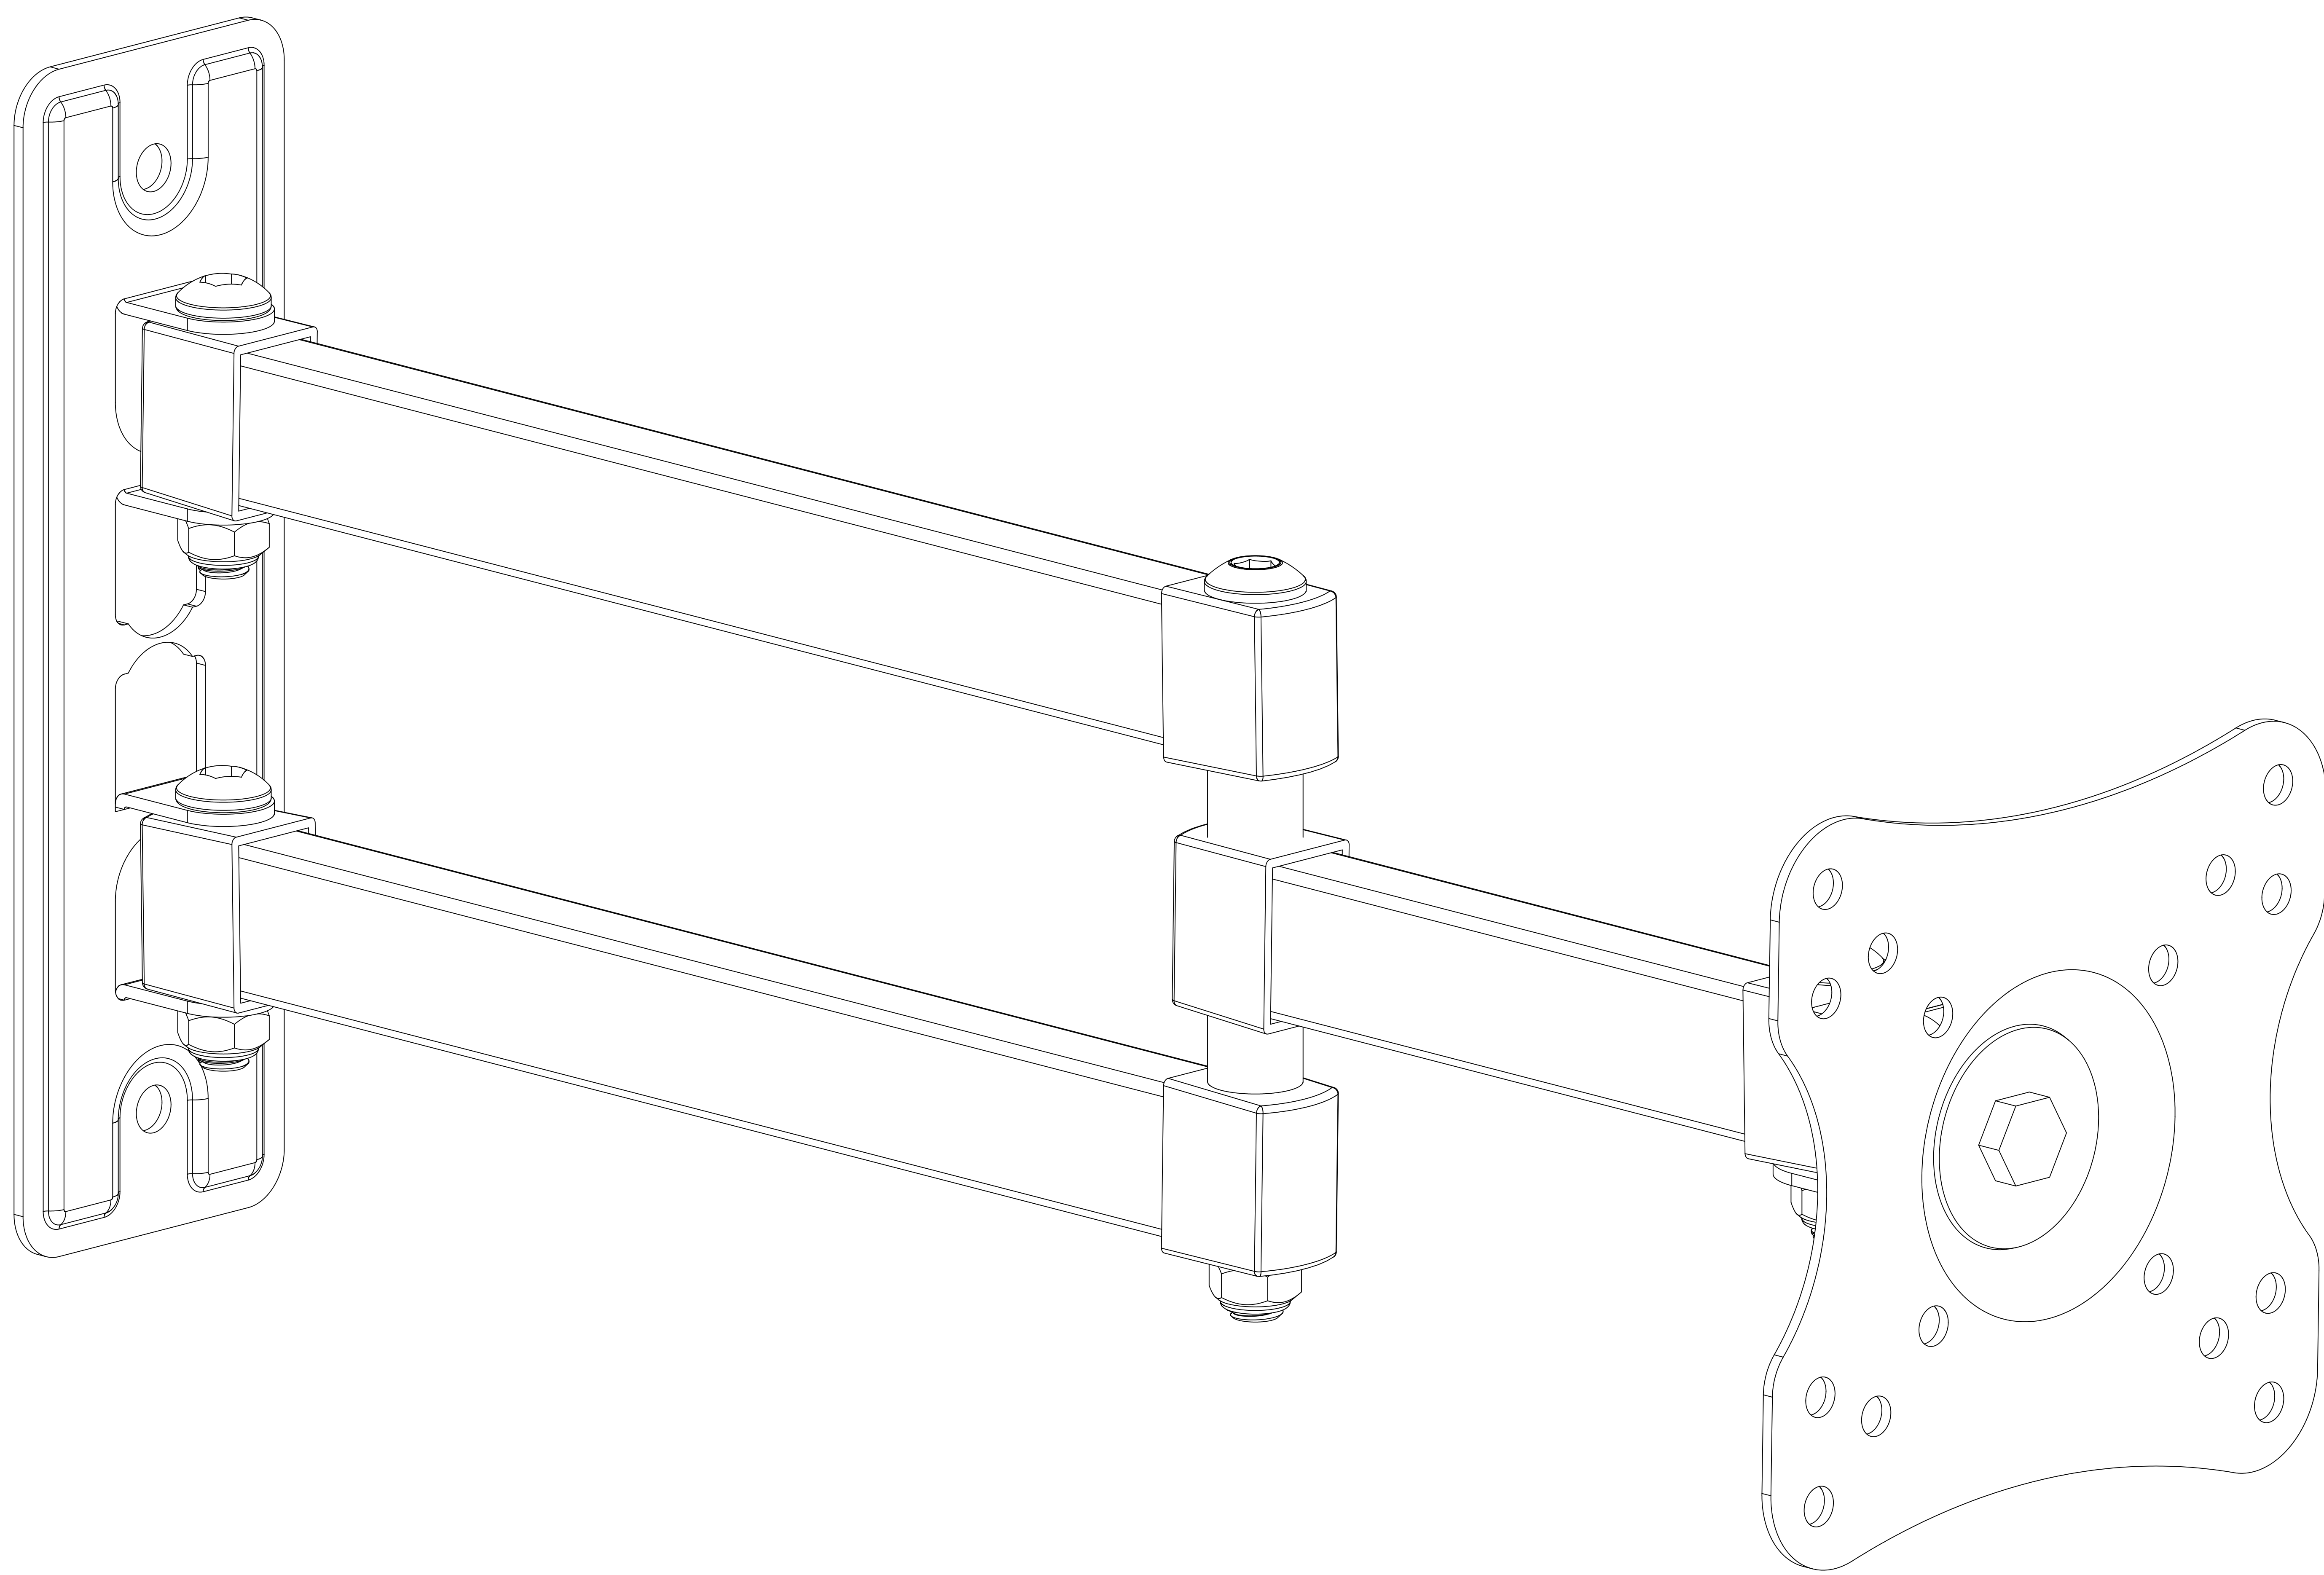


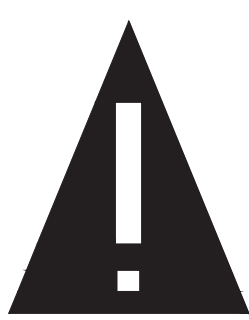
ASSEMBLY INSTRUCTION



Item No: 3456346 (SP-MM-1100)

⚠ CAUTION :

- Please read this instruction carefully before assembly.
- Fits for 25.4-81.28cm.
- Weight Capacity : 15KG.



Never let children climb on product or play with product.

Do not sit or stand on product.

Do not fasten a TV that is heavier than the recommended load rating to the mount.

Using suitable concrete wall or wood stud wall.

Improper installation may cause property damage and/or personal injury, so the installation must be done by two qualified contractors. The manufacture is not liable for damage or injury caused by incorrect mounting, assembly or use.

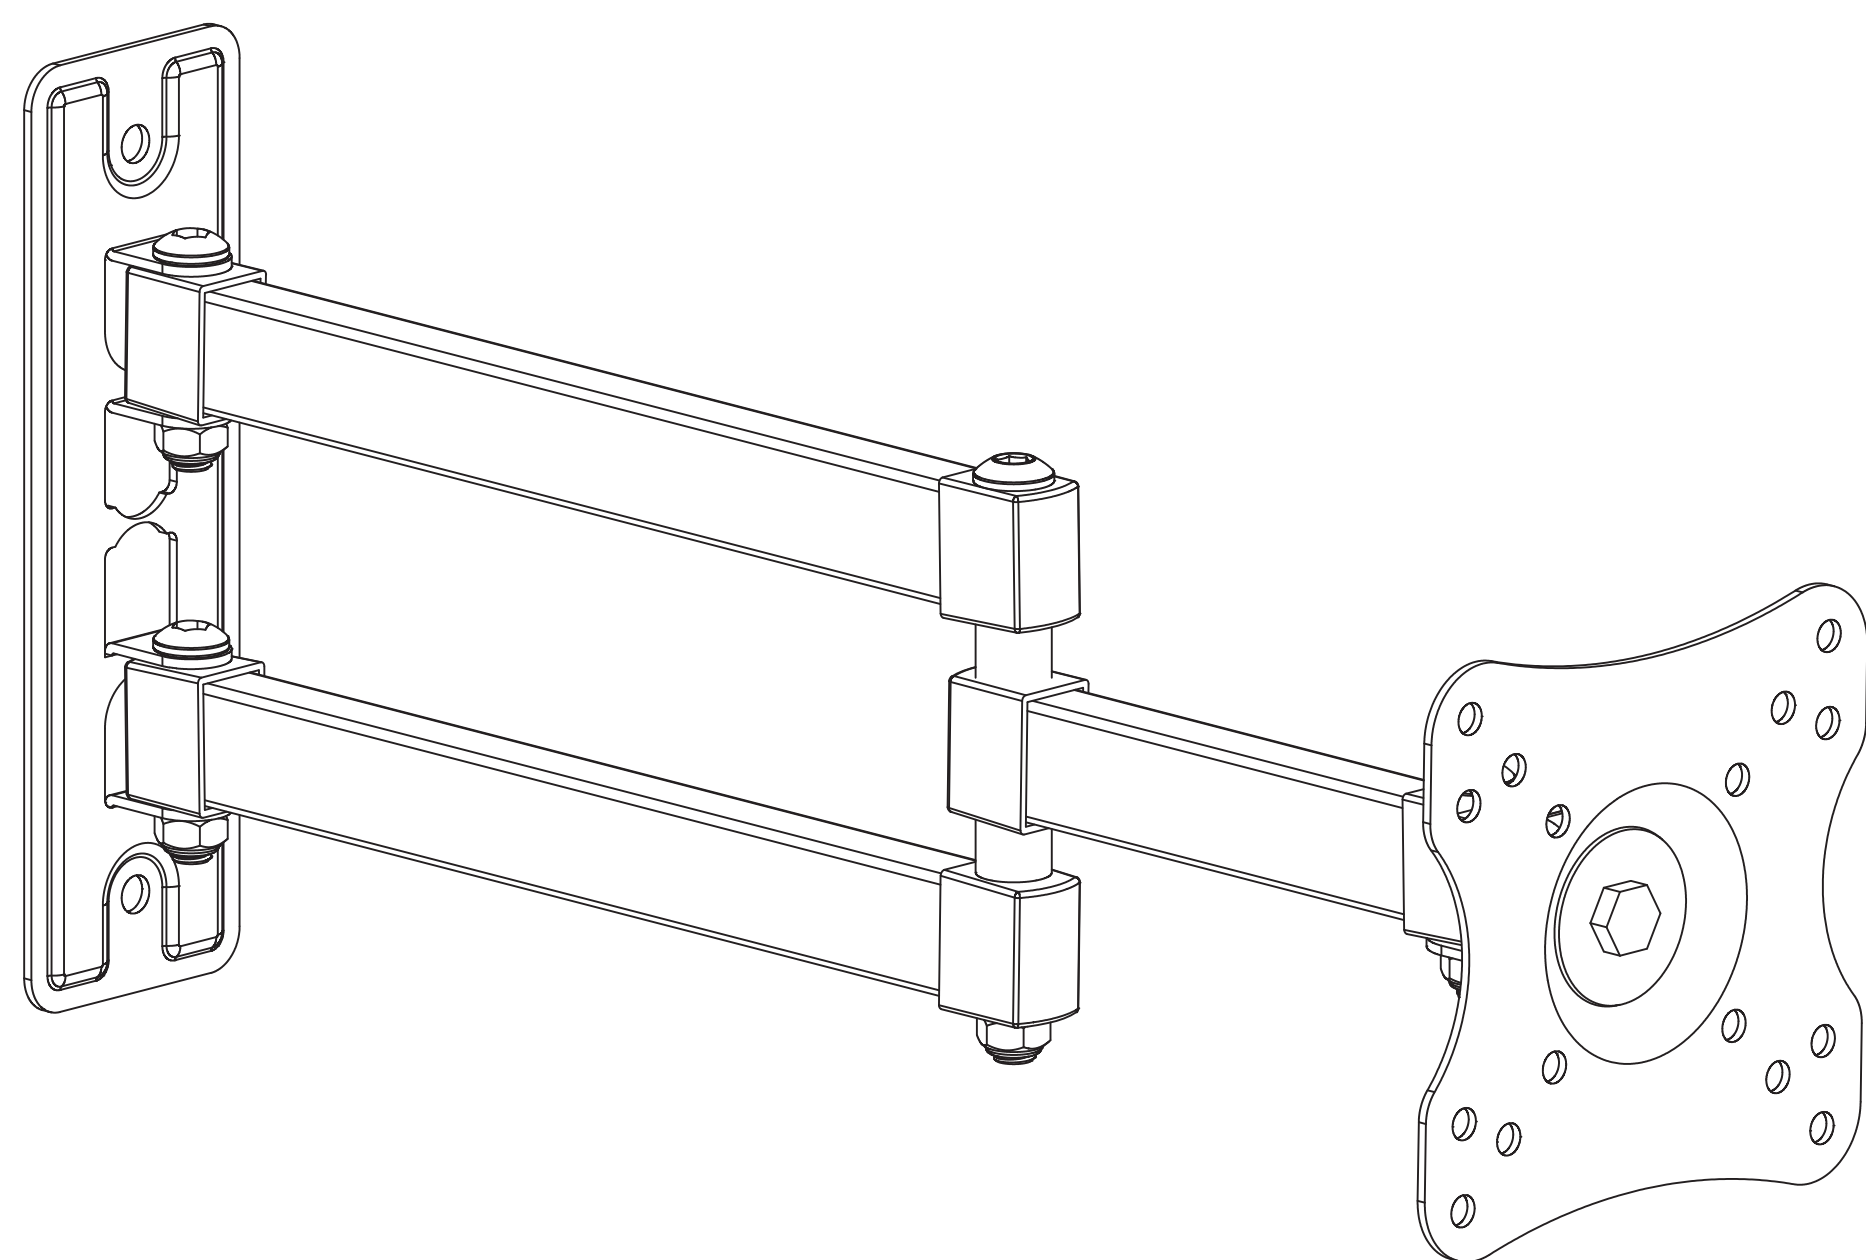
Improper handling can result in cuts and lacerations.

Pictures for reference only, subject to our available products.

Keep this instruction for future reference.

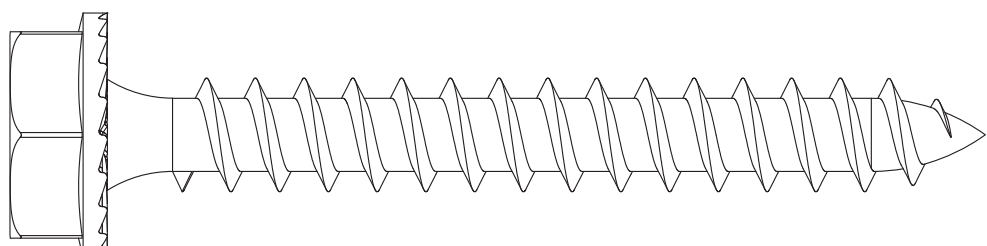
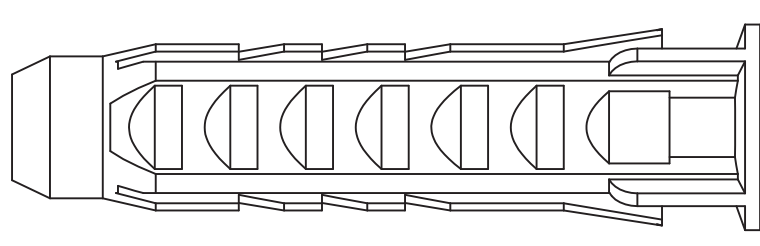
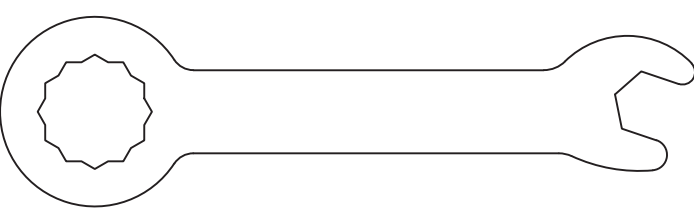


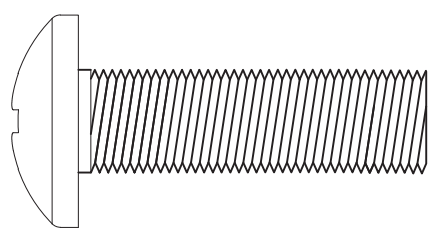
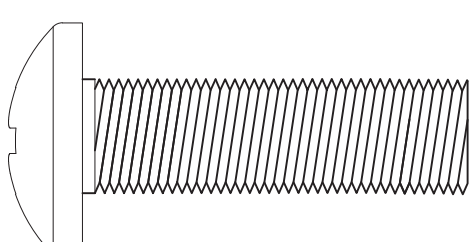
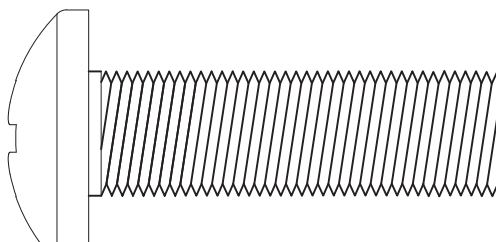
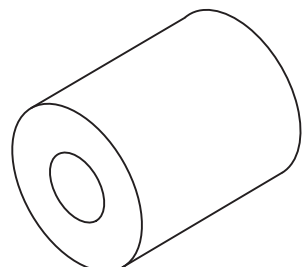
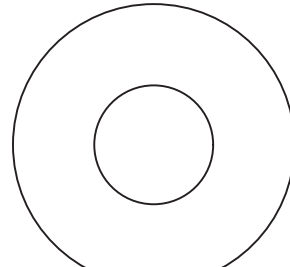
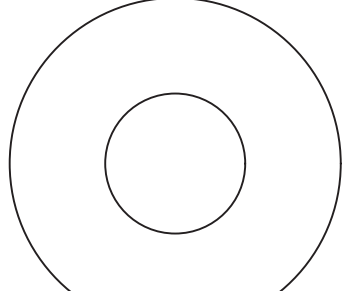
This mount is intended for use with weights not exceeding "maximum weight capacity 15KG." The wall itself has to be capable of supporting 4X maximum weight. Pls don't over tighten screws in order to avoid any injury. Use with products heavier than the maximum weights indicated may result in collapse of the mount and its accessories causing possible injury.

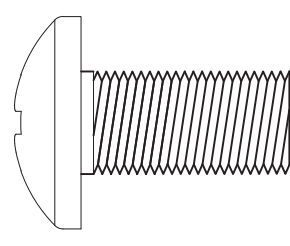
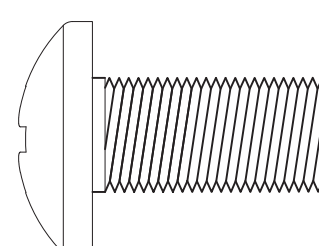
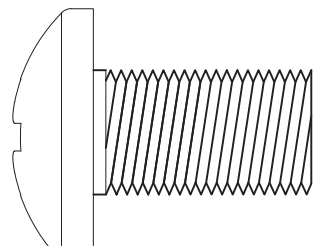
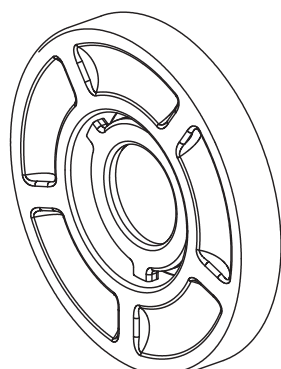


K-wall plate unit 1pc

● Hardware list:

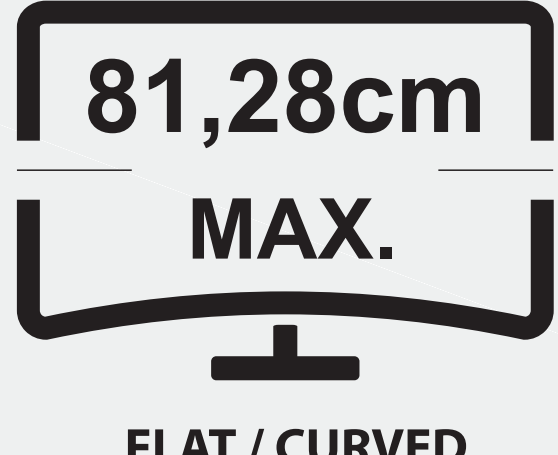
		
A--Lag bolt 2pcs	B--Anchor 2pcs	C--8mm Open-End Wrench 1pc

					
D--M4X30 bolt 4pcs	E--M5X30 bolt 4pcs	F--M6X30 bolt 4pcs	G-M4/M6 spacer 4pcs	H-M4/M5 washer 4pcs	I-M6 washer 4pcs

			
L--M4X12 bolt 4pcs	M--M5X12 bolt 4pcs	N--M6X12 bolt 4pcs	O-2.5mm spacer 4pcs

Support VESA mount

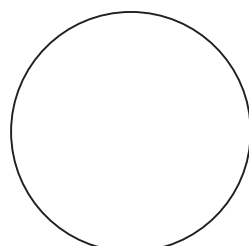
50 x 50 75 x 75 100 x 100



81,28cm
MAX.
FLAT / CURVED



1-15 kg
max.



Step 1: Disassemble Wall Plate Unit into Two Pieces. (Figure 1)

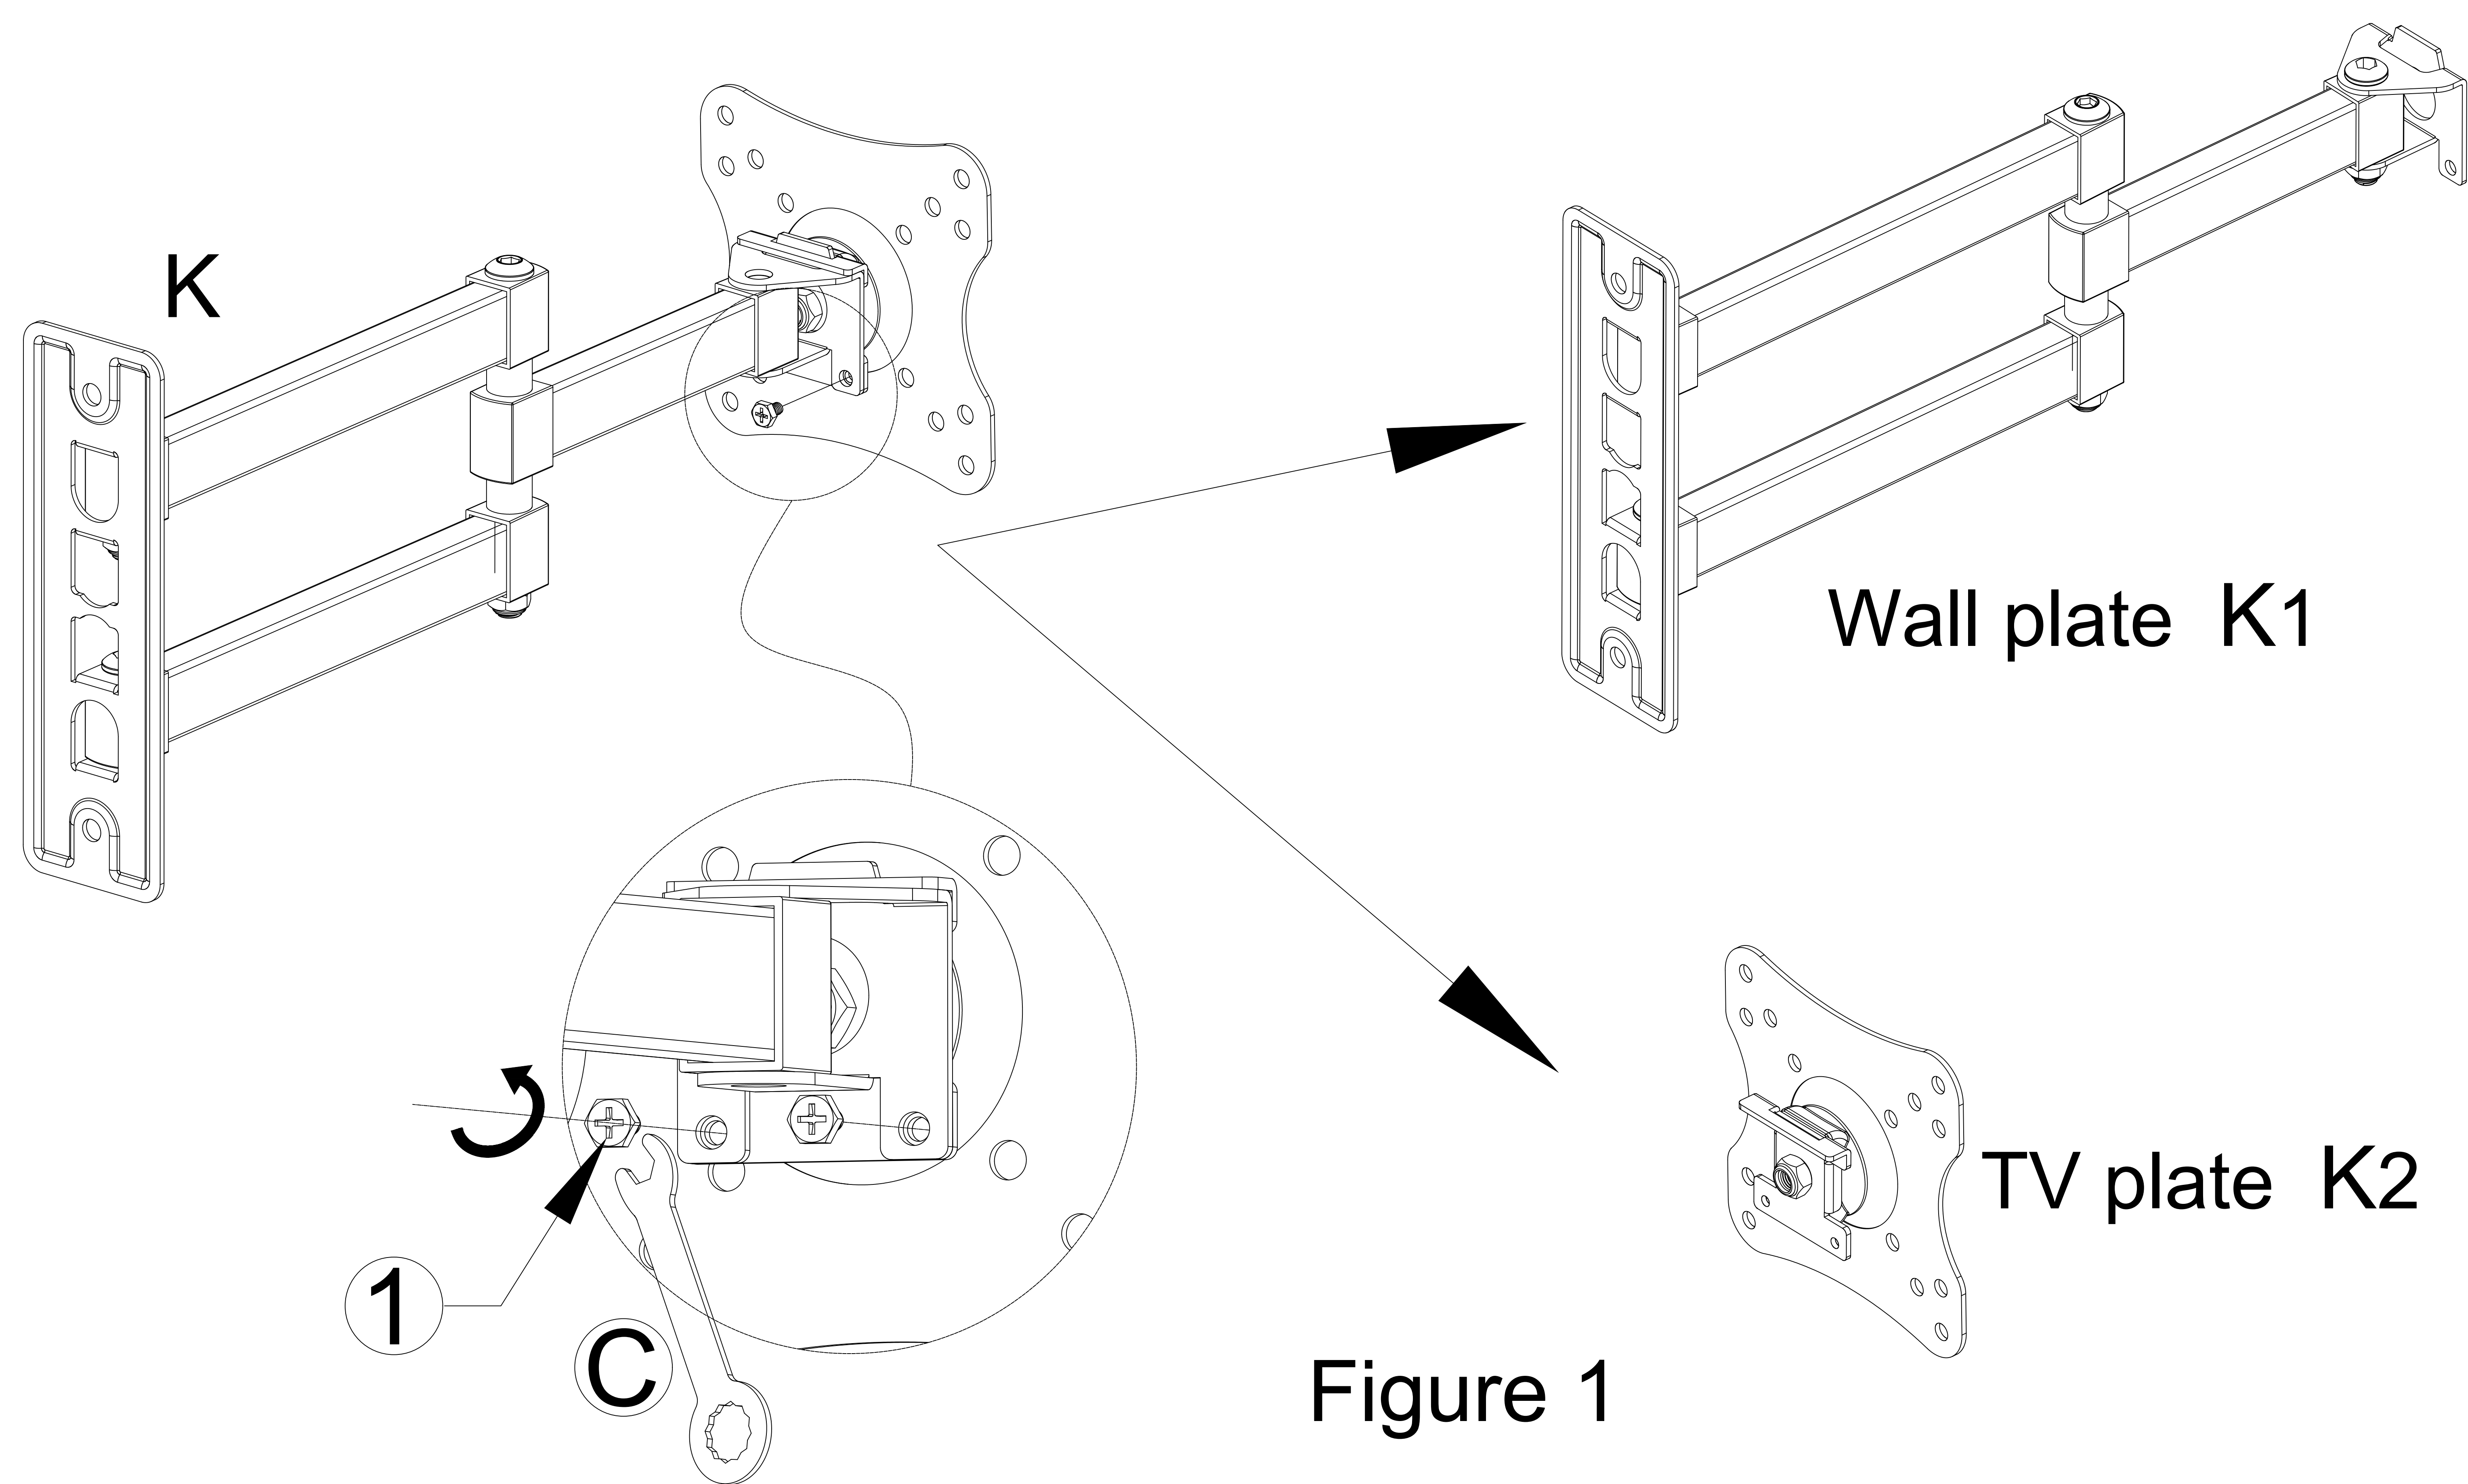


Figure 1

Step 2: Pls remove the plaster board on the surface of concrete wall when assembling mount on the concrete wall. Hold wall plate (K1) against wall at desired position on concrete wall, then using a pencil mark 2 hole locations . Then drill holes according pencil marks using 3/8" size drill bit to a depth of 2.36" . Then you will need to use wall anchors (B). Insert wall anchors (B) into holes, you may need to use hammer to lightly tap wall anchors into wall. Then fix wall plate (K1) to the wall with screws(A). (Figure 2)

⚠ CAUTION: The concrete wall minimum thickness no less than 5.5 inches, and surface covering can't more than 3/8 inches.

If you mount TV mount into wood studs ,pre-drill the mark 2 holes using 5/32" drill bit to a depth of 2.36", fix wall plate(K1) to the wall with screws (A). (Figure 3)

⚠ CAUTION: The wood stud min size is 2x4 inches, and surface covering can't more than 5/8 inches. Drill hole on the wooden pillars middle line.

⚠ CAUTION: Don't use it on the concrete block.

Concrete wall

Wood Single Stud

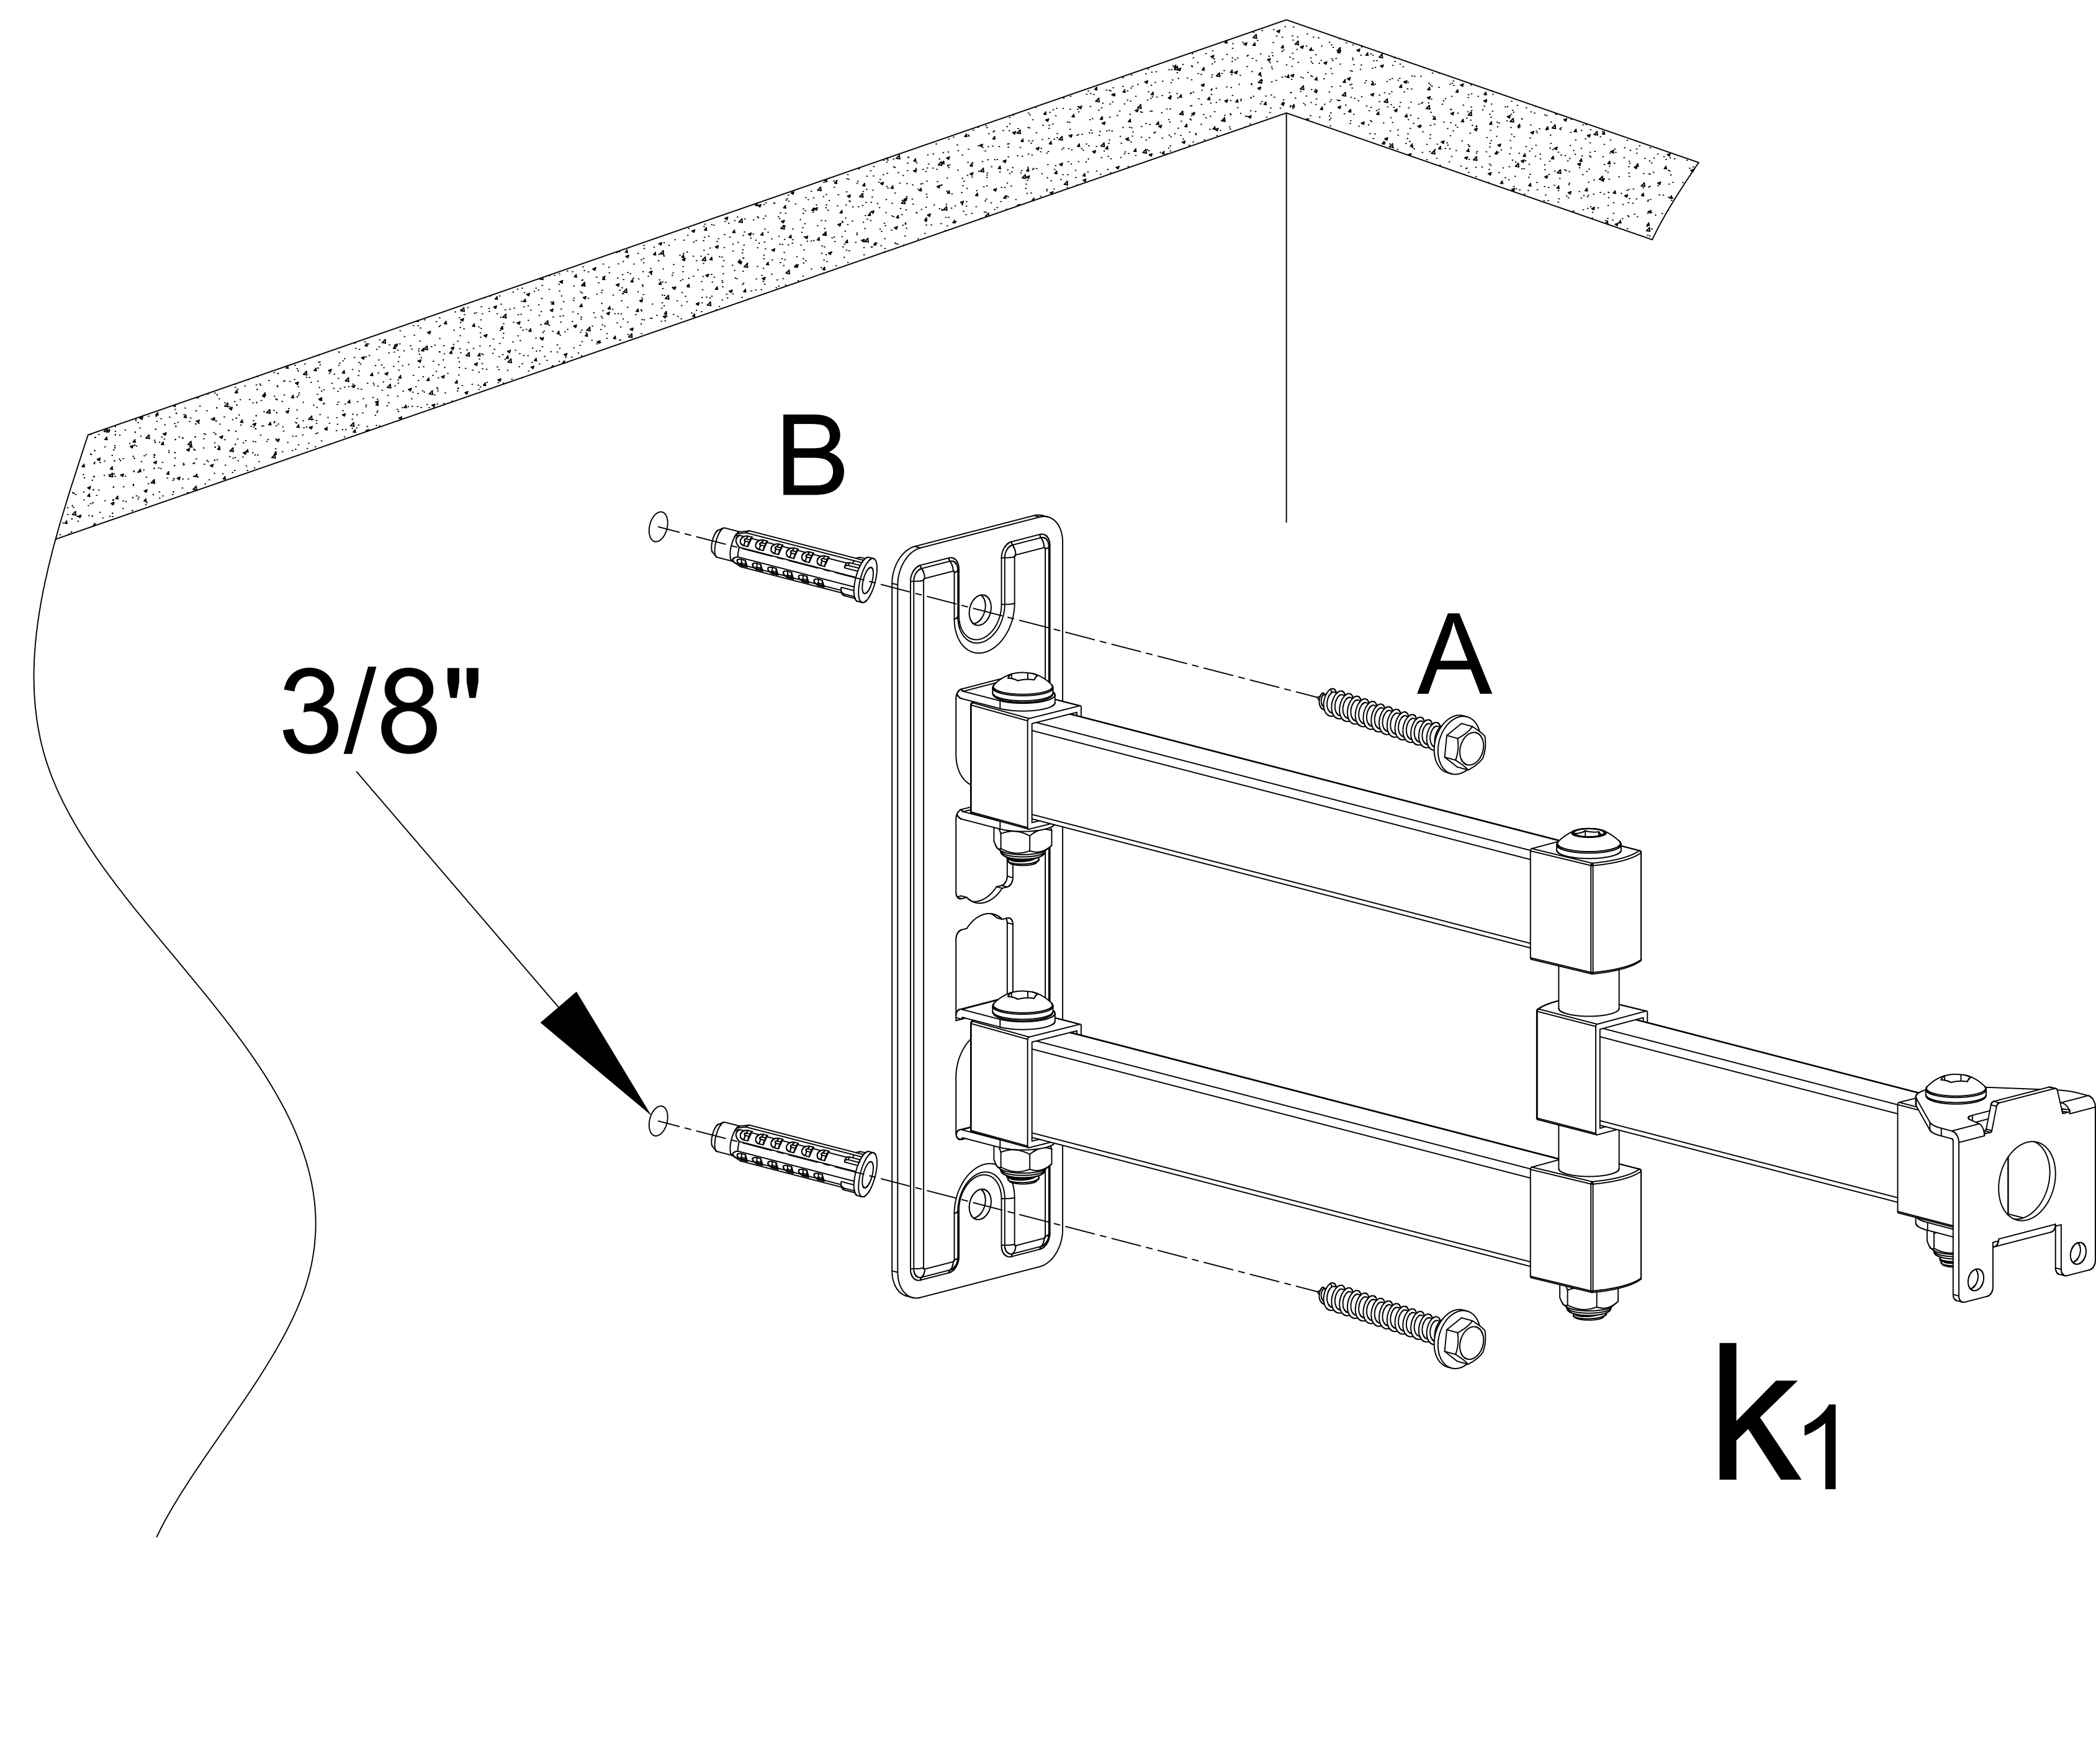


Figure 2 (keep the wall plate level)

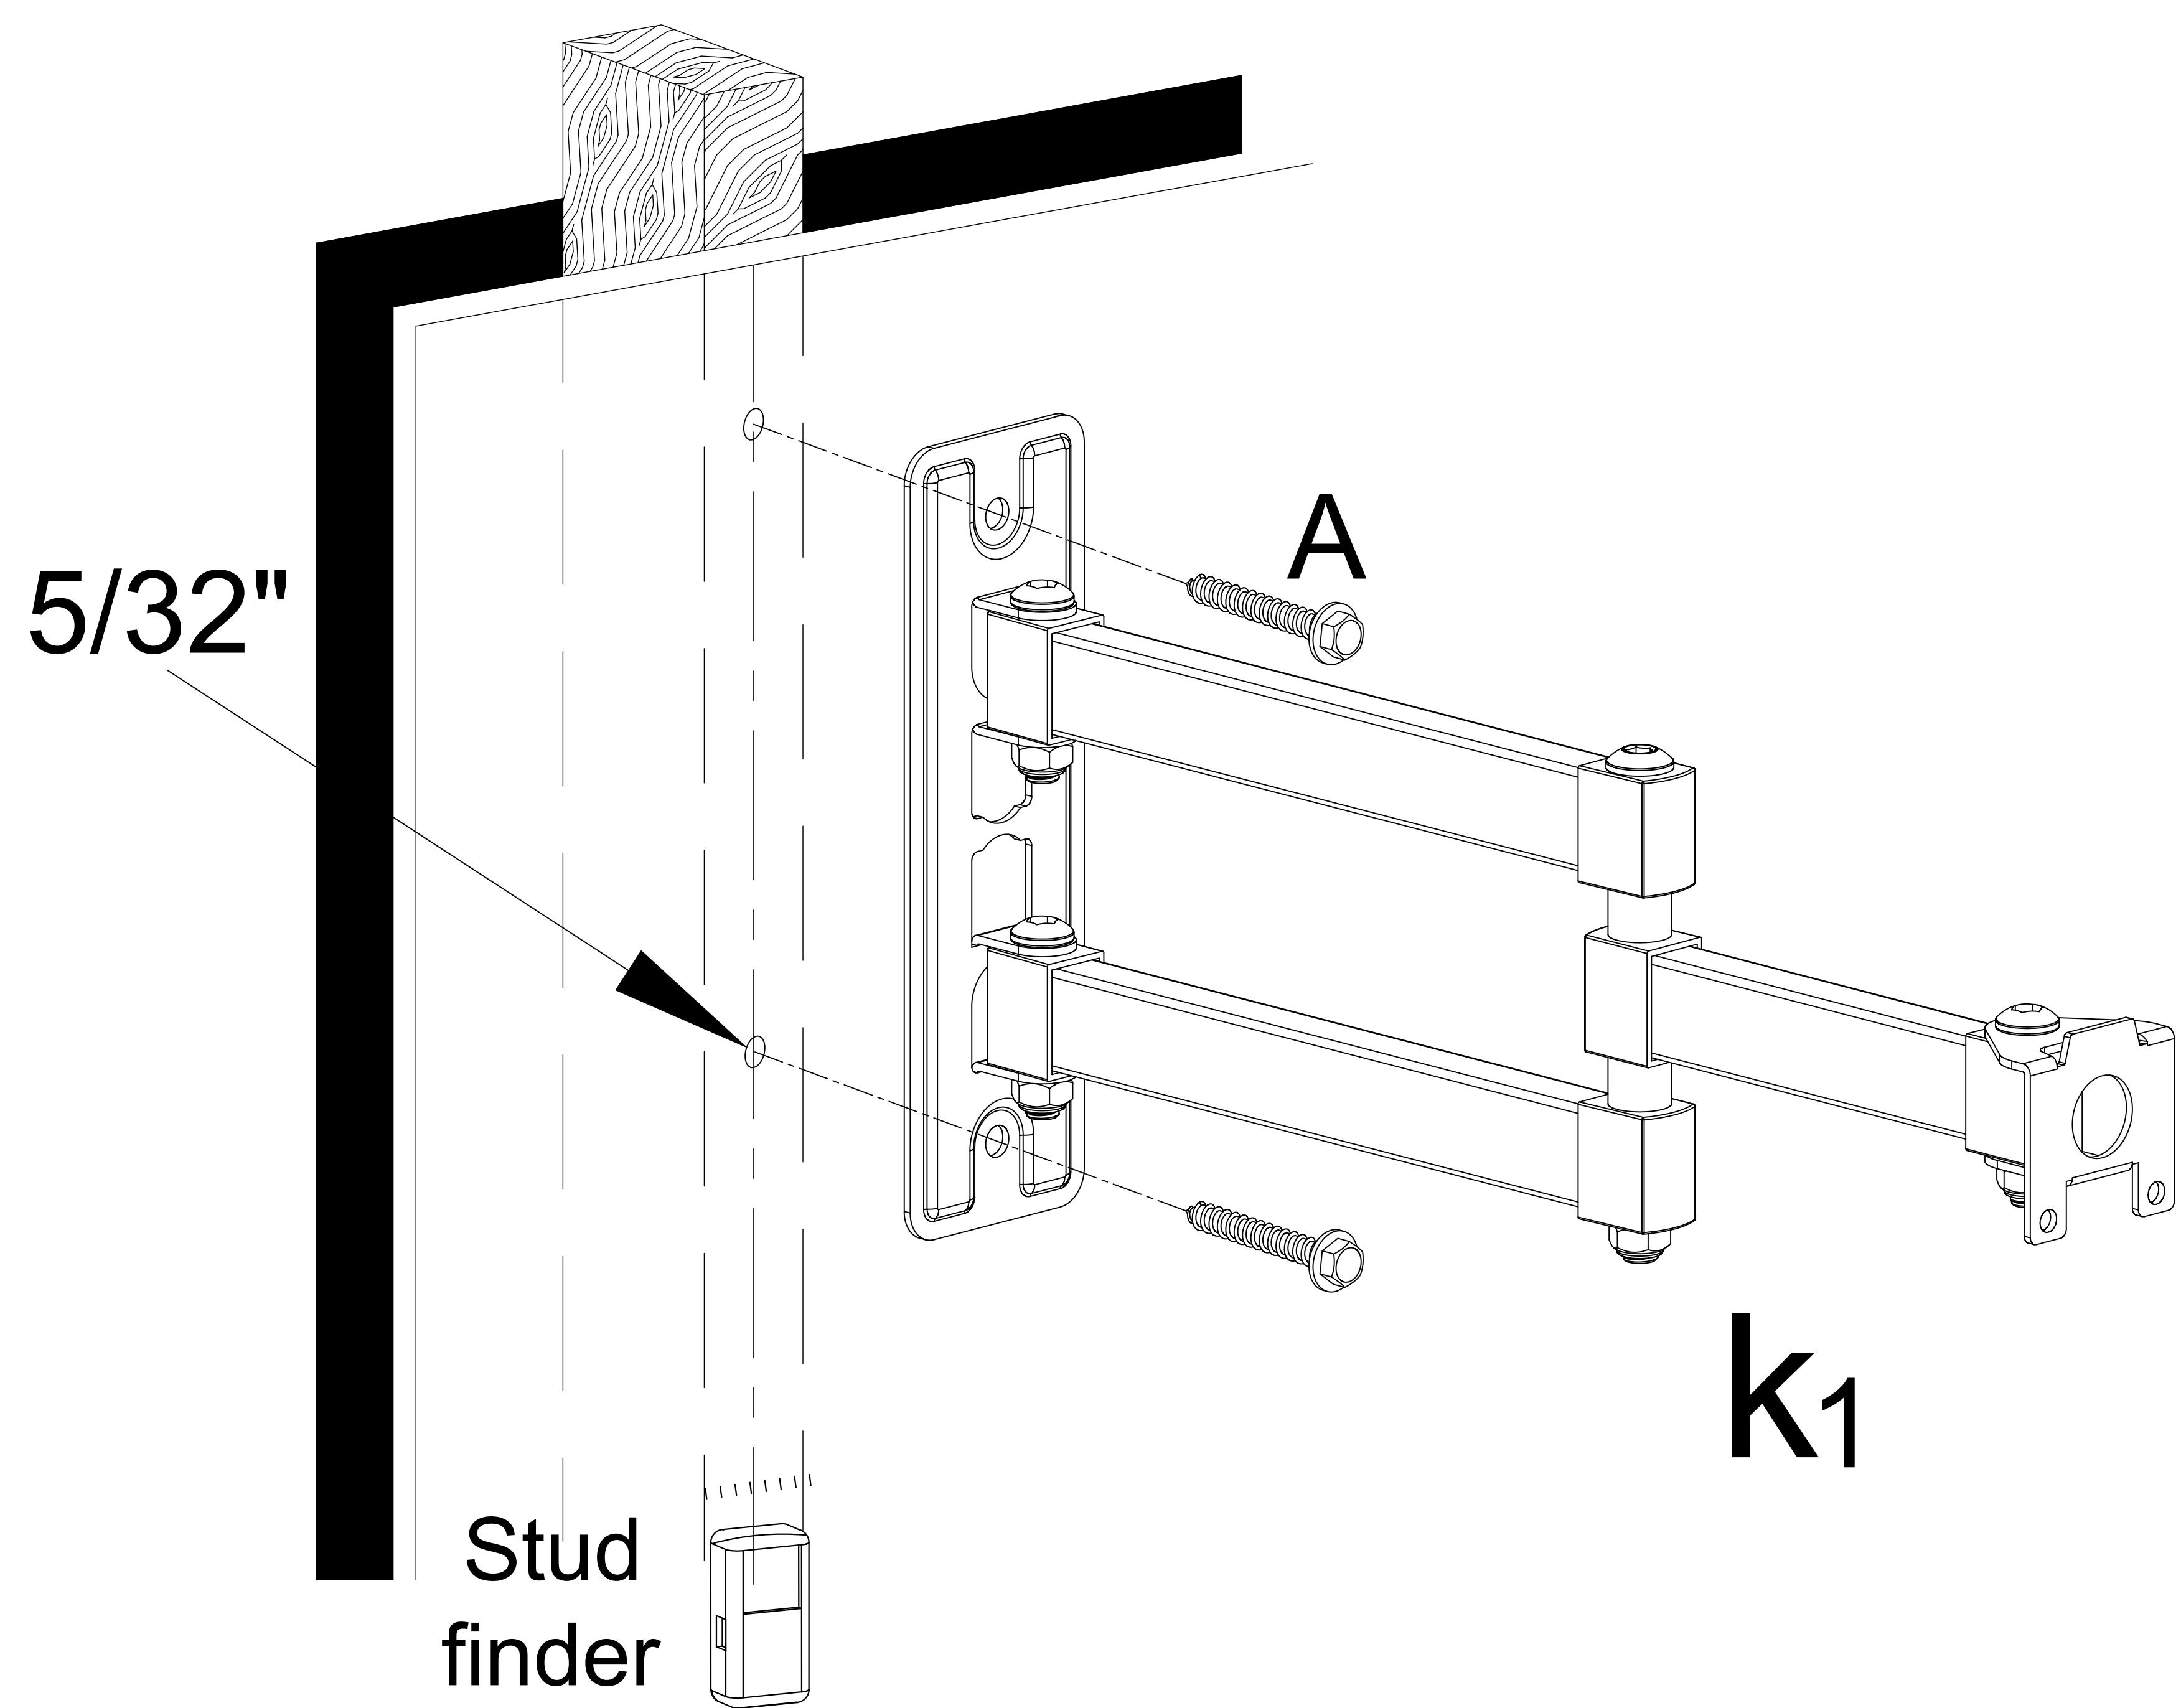


Figure 3 (keep the wall plate level)

Step 3: Attach TV plate (K2) to the back of TV, choose corresponding bolt,washer and spacer to fix the holes of TV rear.

If the back of TV is not flat, or the bolts used to assemble TV are too long, or there is interfere between TV bracket and cable inlets, we highly recommend you to use spacers .

⚠ CAUTION: Using incorrect bolts may damage your TV.

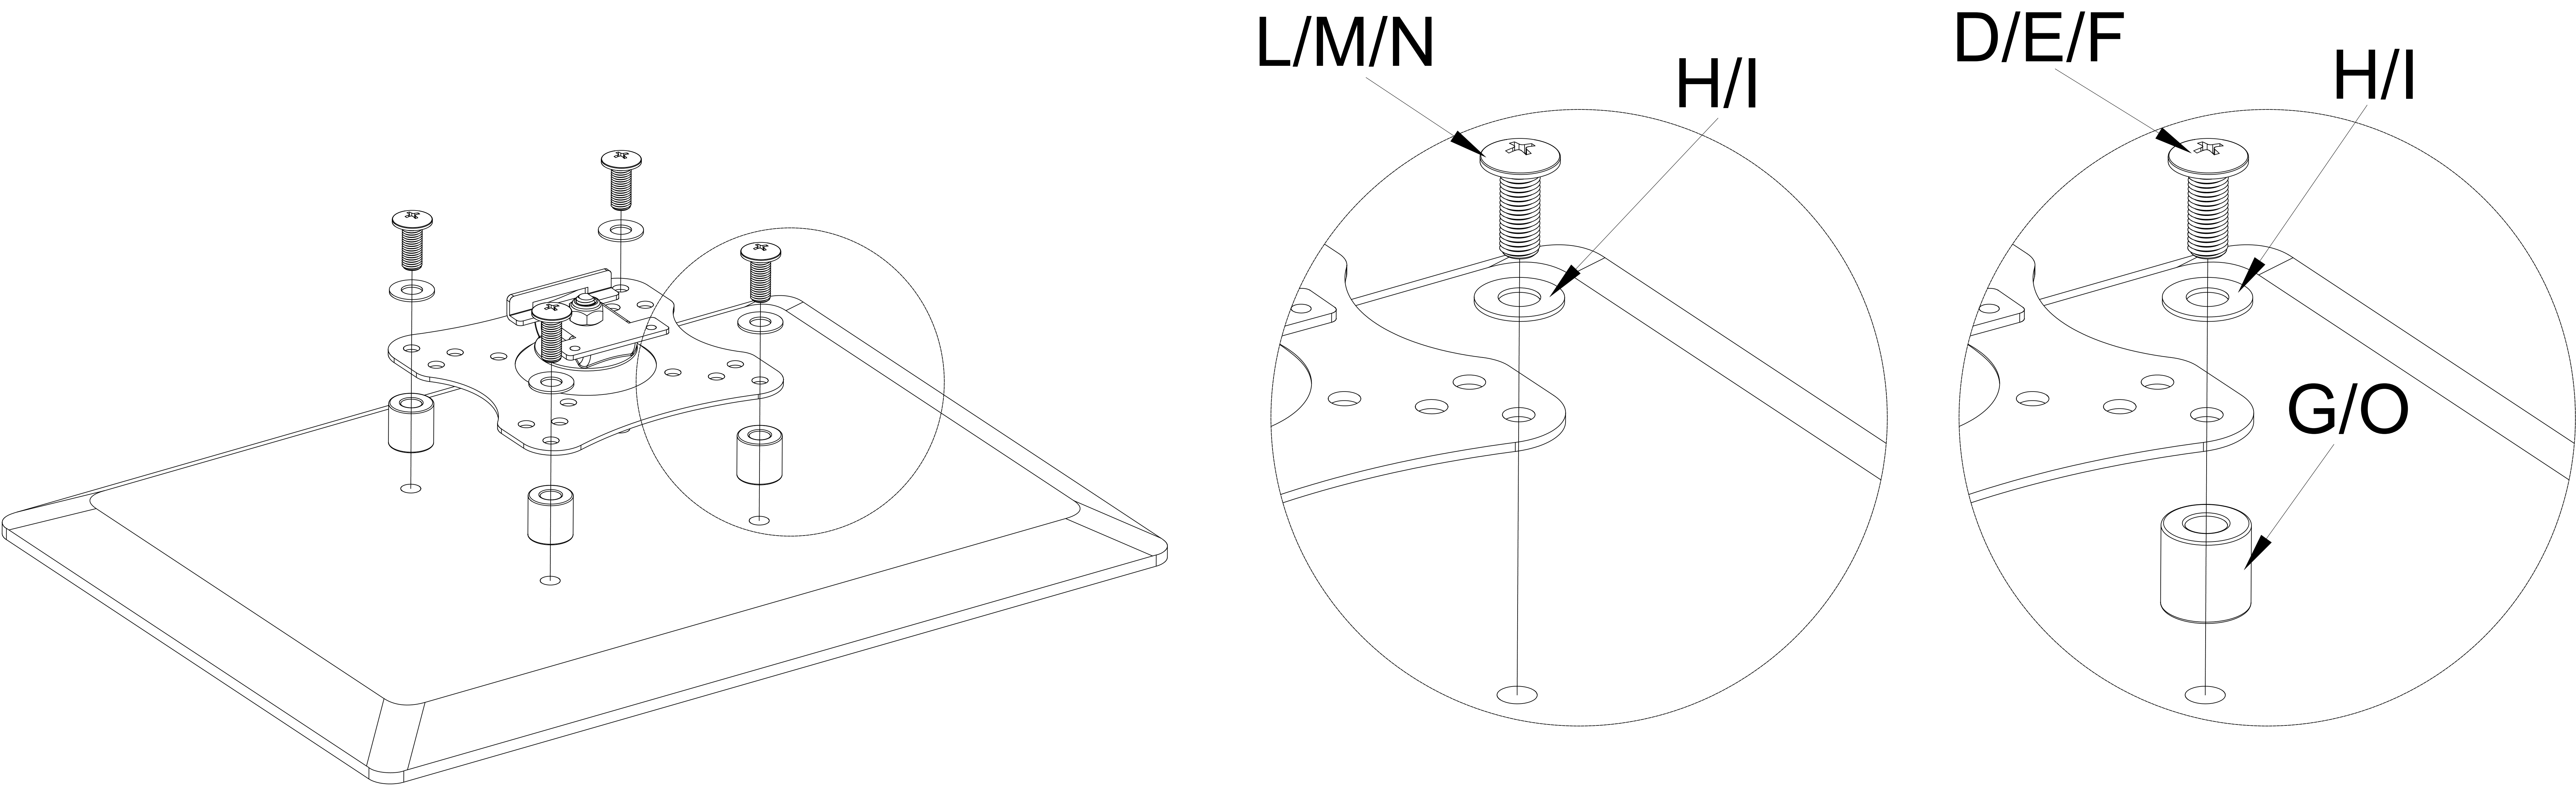


Figure 4

Step 4: Hang the pre-assembled TV unit on the wall plate. Fasten TV plate by bolts ① with a screwdriver.

⚠ CAUTION: This step must require 2 or more professional to finish.

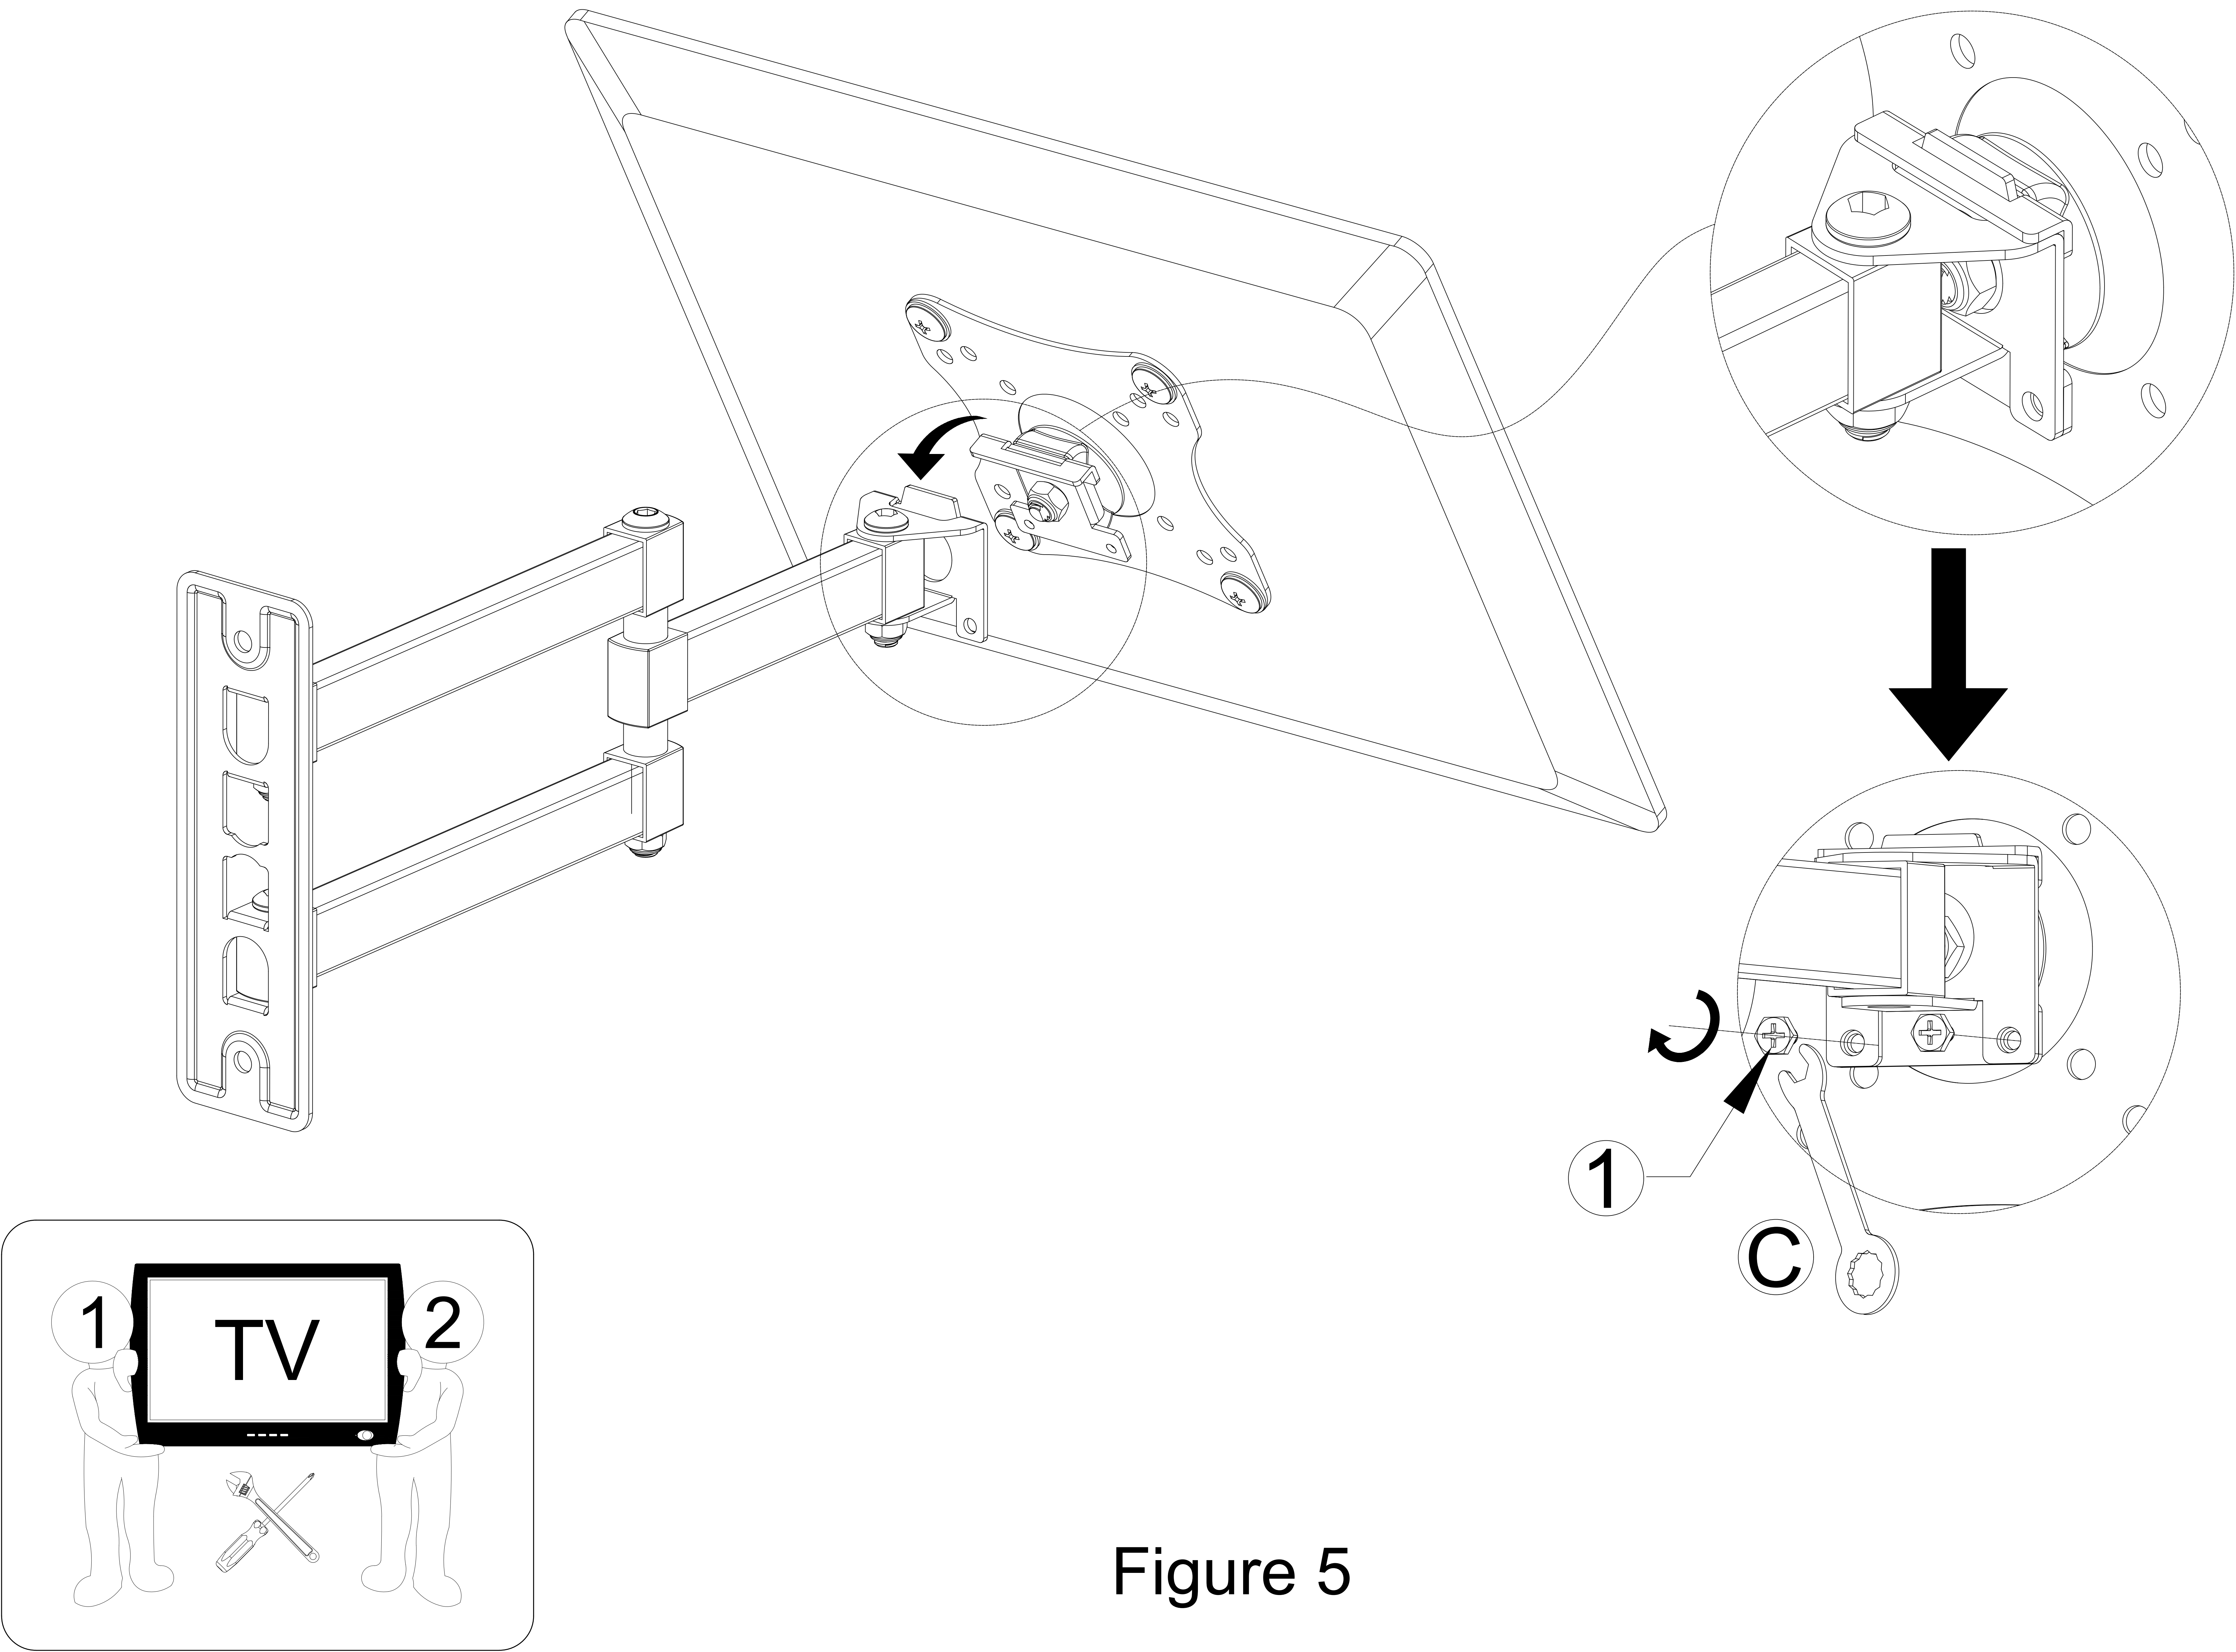


Figure 5

Step 5: Make sure the TV unit is horizontal, you can adjust the TV plate (360 degrees) to level the TV by loosening the nut with open-end wrench (C), and tighten the nut after adjustment. (Figure 6)

Adjust the tilting angle (from +15° to -15°) with open-end wrench (C): Hold the bottom of TV and adjust the TV to your desired position, tighten the nut with open-end wrench (C). (Figure 6)

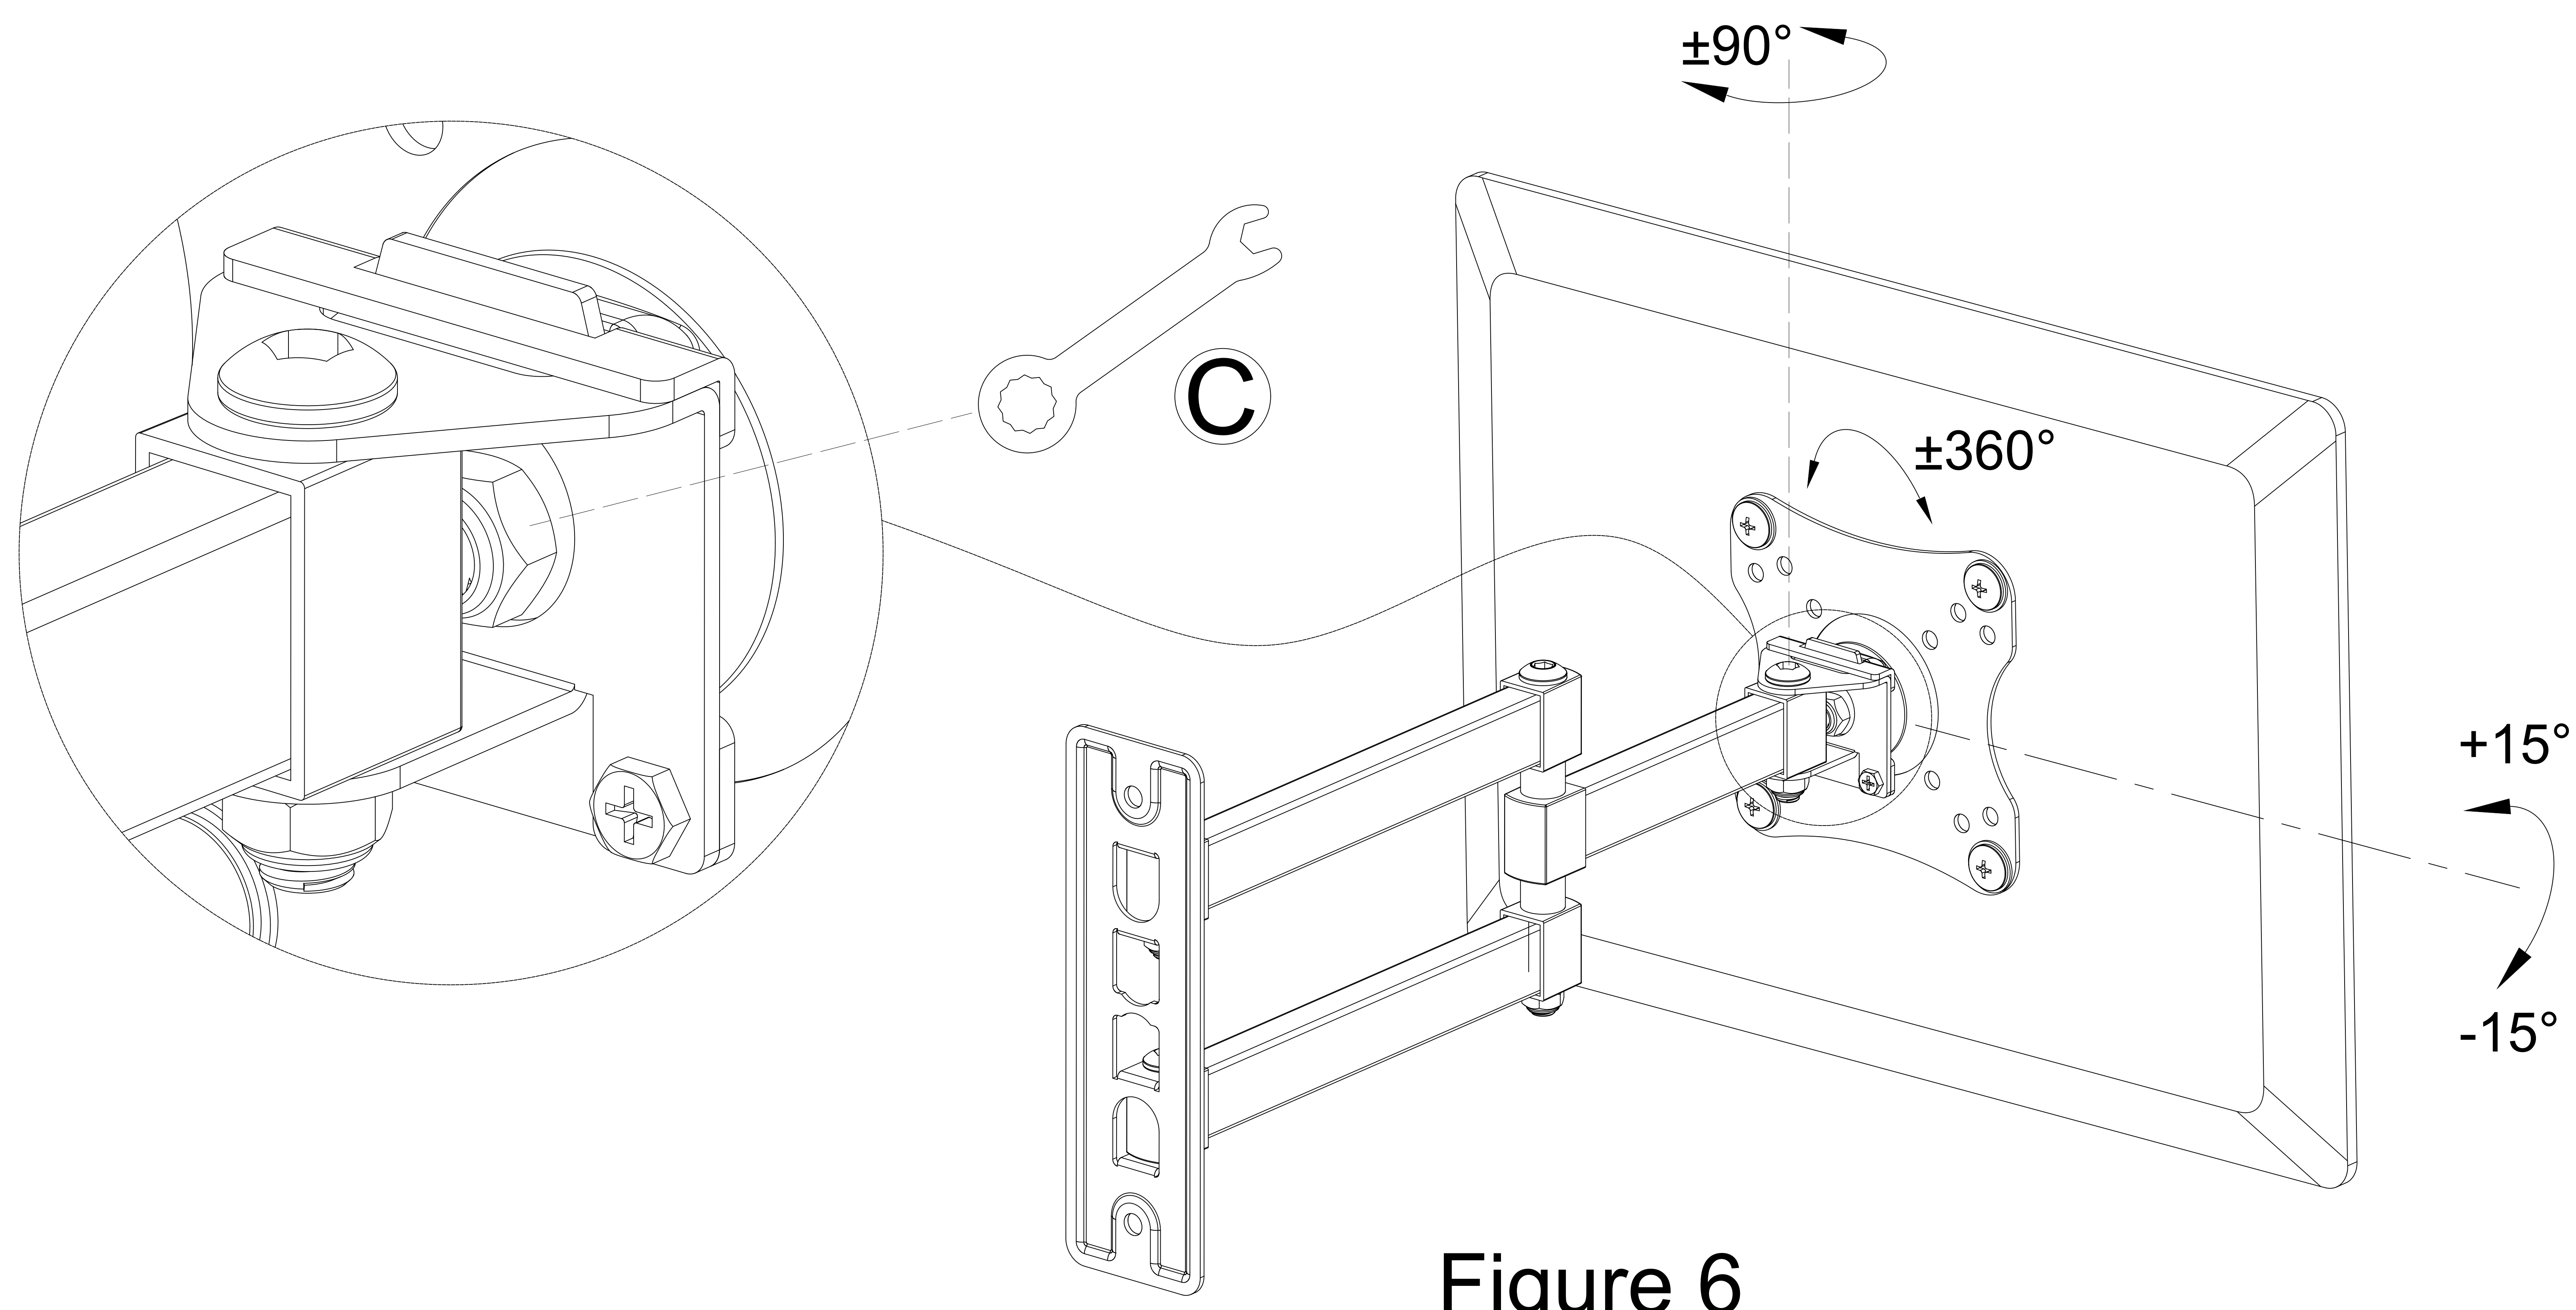
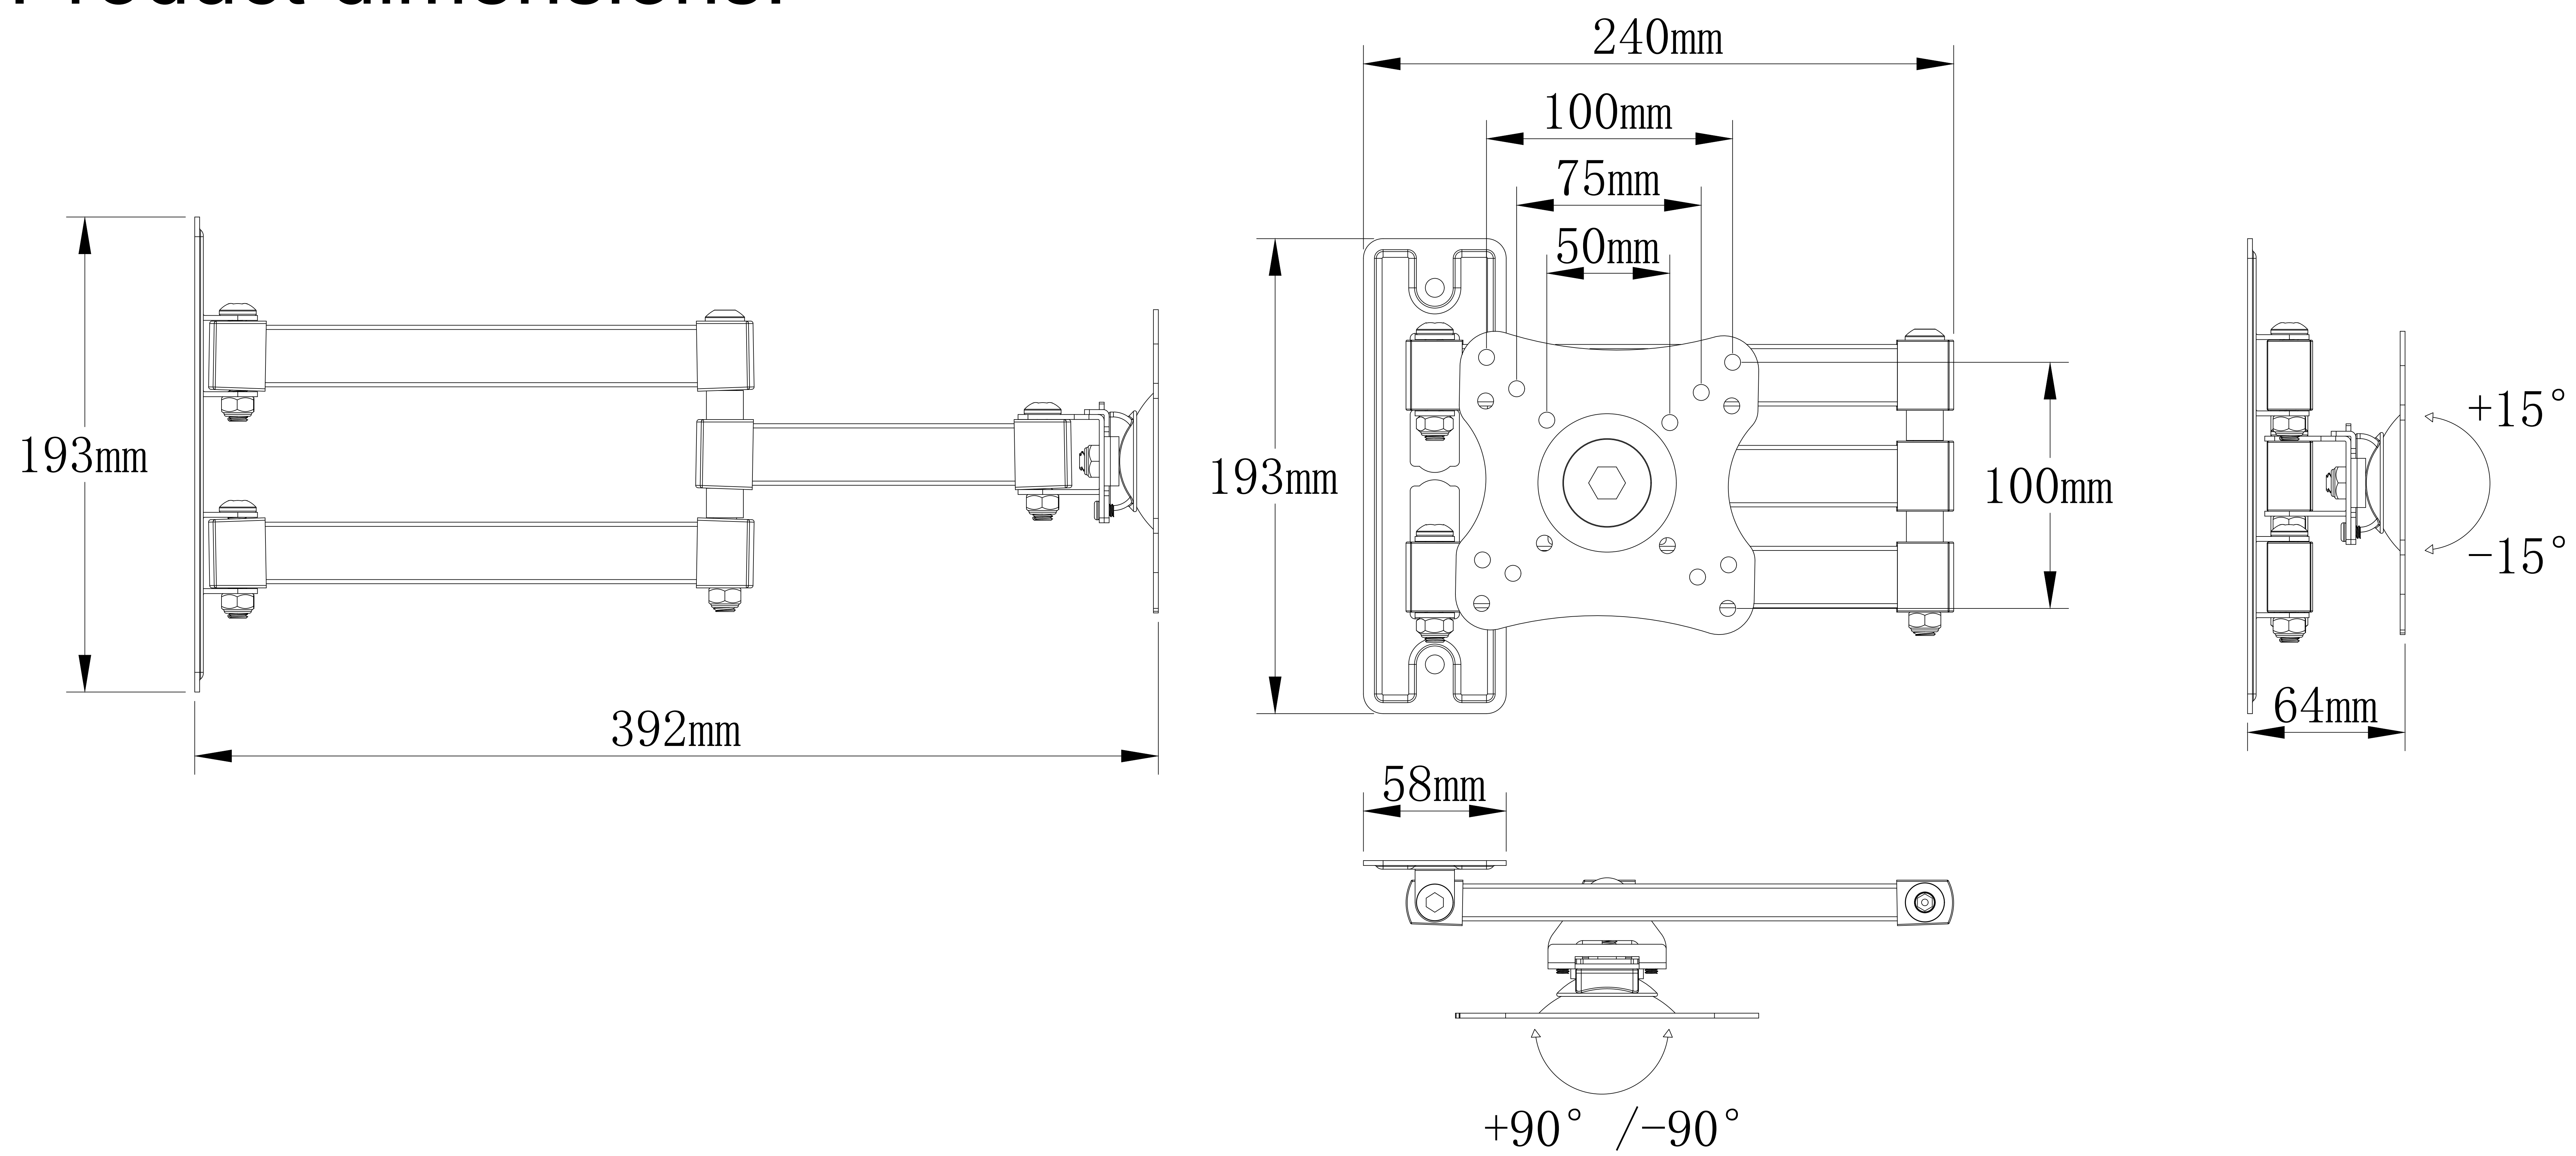


Figure 6

Product dimensions:



- PAY EXTRA CARE AND ATTENTION WHEN YOU FASTEN TWO TV MOUNTS TO THE BACK PANEL OF TV IN STEP3 . MAKE SURE THE APPROPRIATE MOUNT HARDWARE IS BEING USED PROPERLY .**
- 1. Select correct Mounting Hardware according to the screw hole size of your TV, discard any remaining screws or spacers.
 - 2. Carefully lay your TV on its face on a non-abrasive surface, making sure to lay padding underneath it so as not to damage the screen .
 - 3. Place left TV mount and right mount in the appropriate position, making sure **CENTERED** on the back of the TV and **LEVEL** with on another .
 - 4.This product only install on the perpendicular wall,not install on the ceiling.