


Projector Screen

Item No.: 3593945 (SP-PST-314)

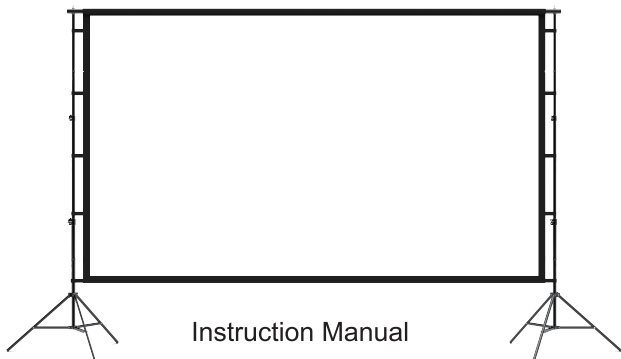


List of Accessories



- (1) Upper crossbar x5 (2) Tripod x2 (3) Ground Nails x6
(4) Storage bag x1 (5) Screen x1 (6) Windproof rope x6

Curtain Installation Procedures

1. Check to see the attached picture: the 5 crossbars are assembled into a whole, which is used to support the upper part of the screen.

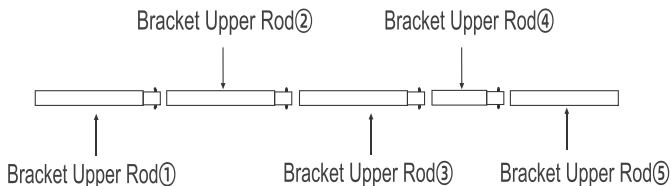

2. As shown in Figure 1 :
Thread the screen onto the crossbar.



Figure 1

3. As shown in Figure :

- ① Loosen the top screw of the Triangle bracket as Figure1.
- ② Unfold the Triangle bracket with as Figure2 and Figure3.
- ③ And then tighten the Triangle bracket top screw as Figure4.



3. As shown in Figure 1, Figure 2, Figure 3. :
The wrong way to open the Triangle bracket.



Figure 1

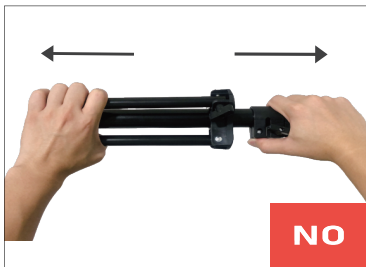


Figure 2

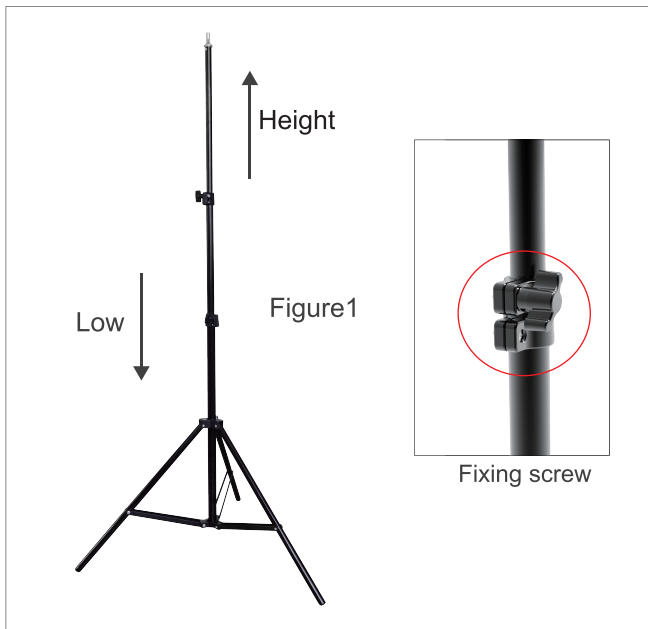


Figure 3

4. As shown in Figure1:

Loosen the Fixing screw of the triangle bracket.


Adjust the Height or Low degree of the triangle bracket.



5. As shown in Figure 1 and Figure 2:
Cross bar Connect the top screws of the Triangle bracket.
Then secure it with screws.



6. As shown in Figure1:
Use the black bandage on the curtain.
Fix the left and right sides of the triangle bracket.

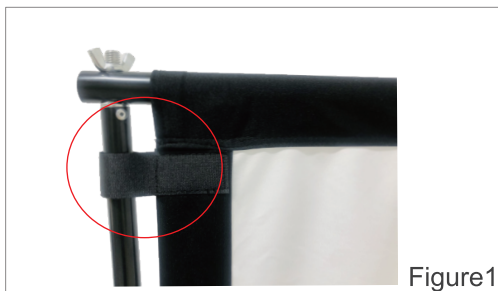

7. As shown in Figure 1:

Use a rope to fix it outdoors Triangle bracket at the top,
And then fasten it to the soil with nails.

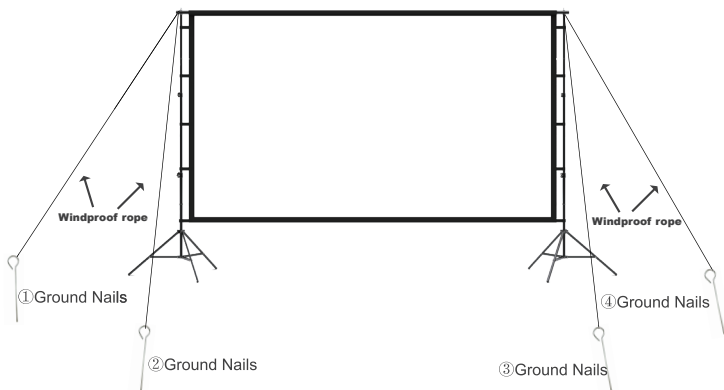


Figure 1