

USER MANUAL

INTERNAL RESISTANCE TESTER

PCE-IRM 10

ENGLISH



User manuals in various languages (français, italiano, español, português, nederlands, türk, polski) can be found via our product search on:
www.pce-instruments.com

NOTICE TO USERS

- » This manual provides detailed instructions on how to use the product, safety precautions, and relevant information. Before using the product, please read the manual carefully to ensure optimal performance of the product.
- » Do not use the instrument in flammable or explosive environments.
- » Disposed batteries and obsolete instruments should not be disposed of with household waste. Please follow the relevant national or local laws for disposal.
- » If there are any quality issues with the instrument or if you have any questions about using the instrument, please contact PCE Instruments online customer service. We will promptly assist you.

PRODUCT INTRODUCTION

The PCE-IRM 10 is our company's first handheld high-precision internal resistance meter. It is a true four-wire measurement internal resistance meter, designed with precision, convenient to carry. The device can automatically test internal resistance and voltage values simultaneously, with measurement results displayed on the screen.


Users can also manually adjust the voltage and resistance range. The product features a sorting mode, automatically filtering the good and bad batteries based on user-set thresholds. It also supports historical records and exporting data tables of historical measurements.

PANEL INTRODUCTION

- 1 - Test line interface
- 2 - Screen display
- 3 - Button area



- 4 - Charging / data transfer
- 5 - Charging indicator light
- 6 - Reset hole
- 7 - Device holder

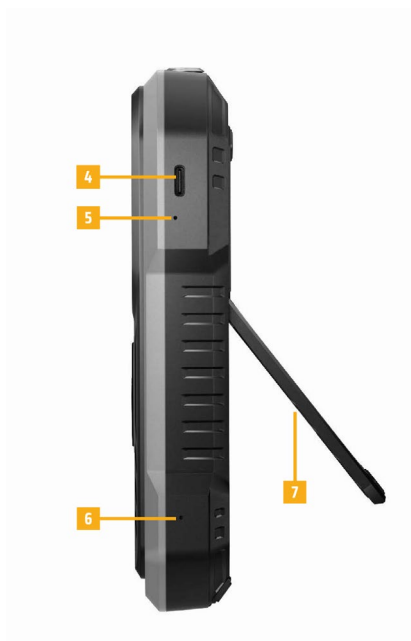

PARAMETER INTRODUCTION

	Voltage	Resistances
Measuring range	0 ... $\pm 100\text{V}$ (DC)	0 ... 200 Ω
Accuracy	$\pm 0.5\%$	$\pm 0.5\%$
Gear	Automatic, 1V, 10V, 100V	Automatic, 20m Ω , 200m Ω , 2 Ω , 20 Ω , 200 Ω
Instrument test signal frequency	AC 1Khz	
Rechargeable	TYPE-C interface (5V/1A)	
Built-in battery	1000mAh lithium battery	
User Calibration	Support	
Sorting Mode	Support	
History Record	Support	
Recorded Data Export	Support	
Working environment	-10°C ... +45°C, relative humidity <80%	
Storage environment	-20°C ... +80°C, relative humidity <80%	
Size	158.7 x 80.5 x 28.4mm	
Weight	225g	

OPERATING INSTRUCTIONS

- » **Power on:** Short press $\frac{OK}{\odot}$ to power on.
- » **Shut down:** Long press $\frac{OK}{\odot}$ to shut down.
- » **Adjust voltage:** Short press $V \mid \blacktriangle$ to select voltage, then short press $\frac{\leftarrow}{\blacktriangle} / \frac{\rightarrow}{\blacktriangle}$ to switch range.
- » **Adjust the resistance:** Short press $R \mid \blacktriangledown$ to select resistance, then short press $\frac{\leftarrow}{\blacktriangle} / \frac{\rightarrow}{\blacktriangle}$ to switch range.
- » **Sorting Mode:** Long press $\frac{\leftarrow}{\blacktriangle}$ to enter the menu, select **Sorting Mode** and click $\frac{OK}{\odot}$ to enter Sorting Mode. In sorting mode, there are 8 groups of customized threshold data groups, short press $V \mid \blacktriangle / R \mid \blacktriangledown$ to switch data groups, and $\frac{\leftarrow}{\blacktriangle} / \frac{\rightarrow}{\blacktriangle}$ to select the threshold value to be set. In the sorting mode, the test results will be automatically evaluated and compared with the set threshold interval to judge whether they pass or fail, so as to filter out the qualified devices, and the evaluation will also be automatically saved in the history record.
- » **Export data to the computer:** The device through the USB cable connected to the computer, it will pop up a U disk, at this time the U disk inside the table is the recorded data.
- » **Voltage and resistance calibration:** Long press $\frac{\leftarrow}{\blacktriangle}$ to enter the menu, choose whether to calibrate voltage or resistance, click $\frac{OK}{\odot}$ to enter, follow the instructions to select the gear calibration. Each range is calibrated manually separately and does not affect each other. Restoring the machine to factory settings will restore the factory calibration parameters.

FIRMWARE UPDATE

Connect the device to the computer via USB cable, long press the left button and the power on button to enter the upgrade page. At this time, a USB drive will pop up on the computer, pull the firmware into the USB flash drive will automatically upgrade.

PRECAUTIONS

- » The machine cannot input DC voltage greater than 100V. AC voltage cannot be input under any conditions.
- » Avoid high temperature and humid environment. Prevent the interface and circuitry from oxidizing by moisture.
- » If it is not used for a long time, please keep the battery with 50% power (or battery voltage between 3.7V ... 3.9V) to extend lifespan.
- » Use of Kelvin Plus Test Leads: When measuring the battery, the clips must be open. There should be no direct contact between the two metal pieces, and they must be in good contact with the battery electrodes, otherwise stable and accurate measurement will not be possible.

DISPOSAL

For the disposal of batteries in the EU, the (EU) 2023/1542 directive of the European Parliament applies. Due to the contained pollutants, batteries must not be disposed of as household waste. They must be given to collection points designed for that purpose. In order to comply with the EU directive 2012/19/EU we take our devices back. We either re-use them or give them to a recycling company which disposes of the devices in line with law. For countries outside the EU, batteries and devices should be disposed of in accordance with your local waste regulations. If you have any questions, please contact PCE Instruments.

PCE INSTRUMENTS CONTACT INFORMATION

Germany

PCE Deutschland GmbH
Im Langel 26
D-59872 Meschede
Deutschland
Tel.: +49 (0) 2903 976 99 0
Fax: +49 (0) 2903 976 99 29
info@pce-instruments.com
www.pce-instruments.com/deutsch

France

PCE Instruments France EURL
2, rue Georges Kuhnmmunch
67250 Soultz-sous-Forêts
France
Tel.: +33 (0) 972 35 37 17
Fax: +33 (0) 972 35 37 18
info@pce-france.fr
www.pce-instruments.com/french

Spain

PCE Ibérica S.L.
Calle Mula, 8
02500 Tobarra (Albacete)
España
Tel. : +34 967 543 548
info@pce-iberica.es
www.pce-instruments.com/espanol

United Kingdom

PCE Instruments UK Ltd
Trafford House
Chester Rd, Old Trafford
Manchester M32 0RS
United Kingdom
Tel: +44 (0) 161 464902 0
Fax: +44 (0) 161 464902 9
info@pce-instruments.co.uk
www.pce-instruments.com/english

Italy

PCE Italia s.r.l.
Via Pesciatina 878 / B-Interno 6
55010 Loc. Gragnano
Capannori (Lucca)
Italia
Telefono: +39 0583 975 114
Fax: +39 0583 974 824
info@pce-italia.it
www.pce-instruments.com/italiano

Turkey

PCE Teknik Cihazları Ltd.Şti.
Halkalı Merkez Mah.
Pehlivan Sok. No.6/C
34303 Küçükçekmece - İstanbul
Türkiye
Tel: 0212 471 11 47
Faks: 0212 705 53 93
info@pce-cihazlari.com.tr
www.pce-instruments.com/turkish

The Netherlands

PCE Brookhuis B.V.
Twentepoort West 17
7609 RD Almelo
Nederland
Telefoon: +31 (0)53 737 01 92
info@pcebenelux.nl
www.pce-instruments.com/dutch

United States of America

PCE Americas Inc.
1201 Jupiter Park Drive, Suite 8
Jupiter / Palm Beach
33458 FL
USA
Tel: +1 (561) 320-9162
Fax: +1 (561) 320-9176
info@pce-americas.com
www.pce-instruments.com/us

Denmark

PCE Instruments Denmark ApS
Birk Centerpark 40
7400 Herning
Denmark
Tel.: +45 70 30 53 08
kontakt@pce-instruments.com
www.pce-instruments.com/dansk

Subject to change without notice