


SPARK

deeper

Spark Controller
User Guide



Online version

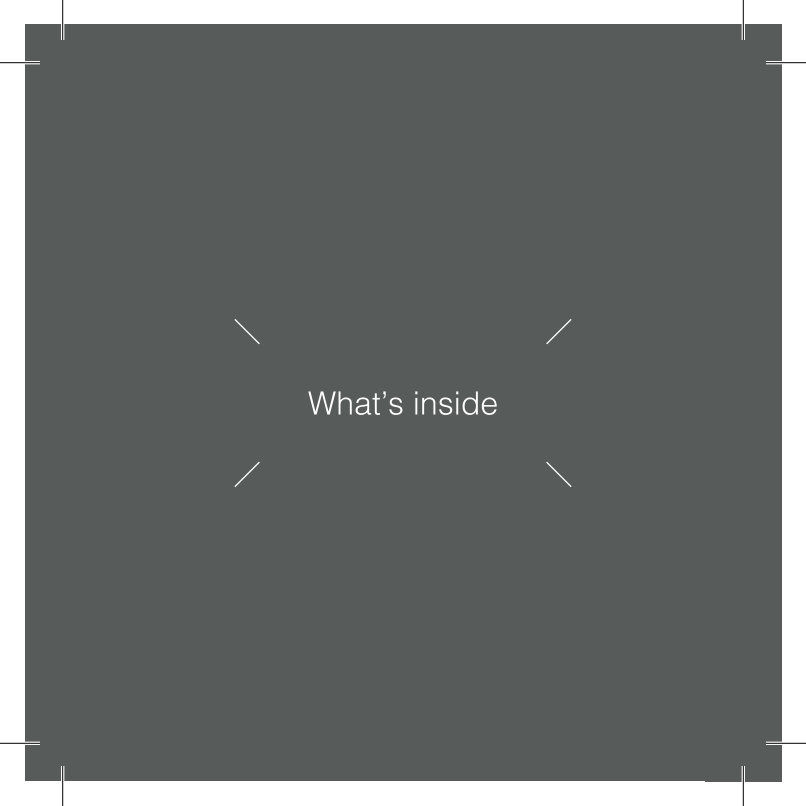

What's inside




Controller





Hard
case

3

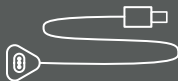

Magnetic - USB C
cable

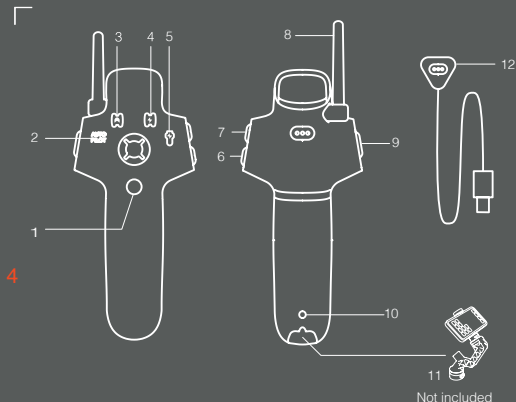

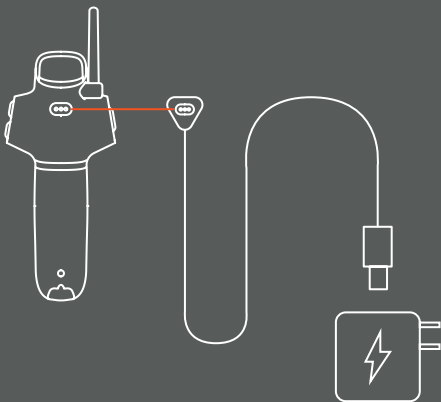

*Charger is not included

Prepare App

6




1. Download Fish Deeper app
2. Create an account
3. Download an offline map of your location

Scan to download
our app



Connect Spark

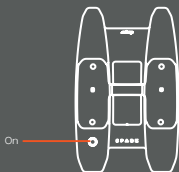

↑ Connects automatically




↑ Press and Hold "B" button for 5 seconds to connect





Connect to Spark Controller Wi-Fi via Wi-Fi Connections of your phone

Unfold antenna and keep
phone high

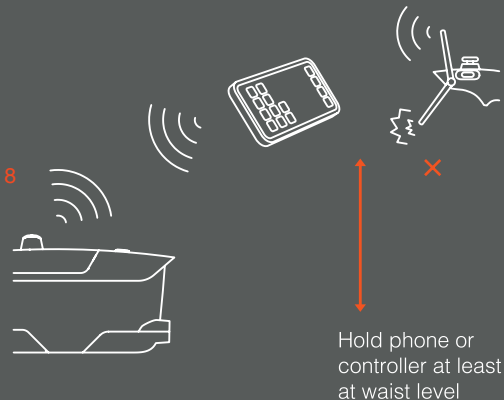


Remote controller extends range

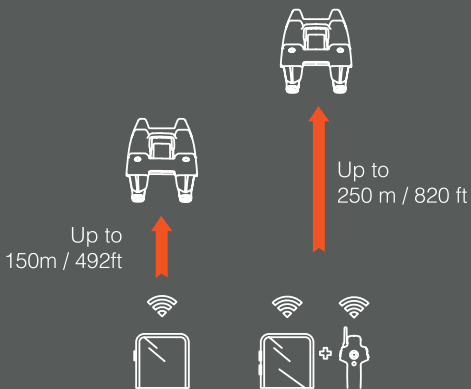

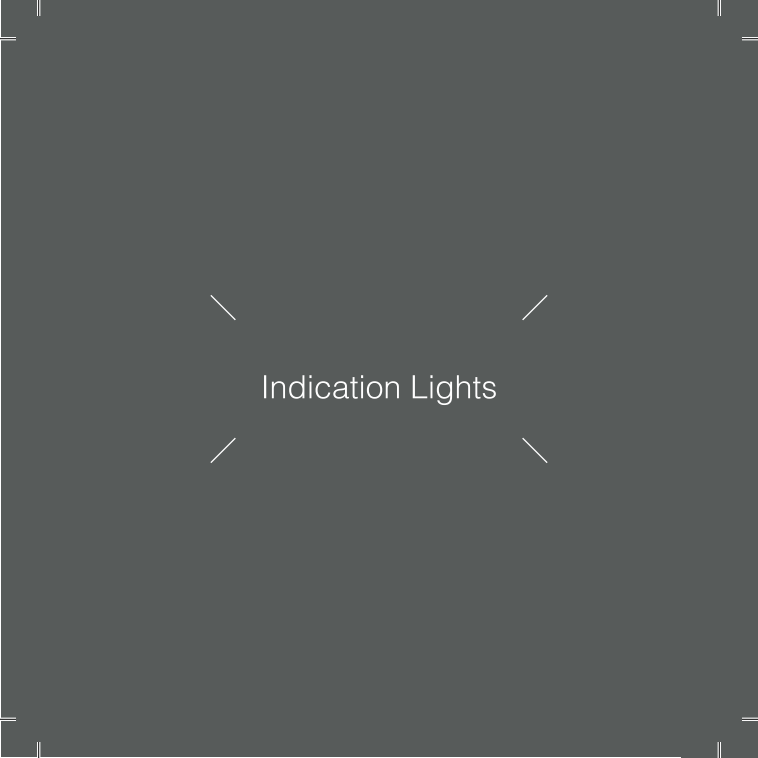

Indication Lights

Battery charging

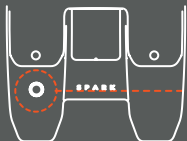

100% - 10%




10% - 0%



Charging
blinking

Battery
state

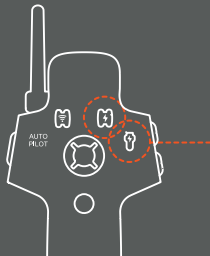

100% - 25%



25% - 10%



10% - 0%



Charging
blinking

Battery
state



Connecting Spark boat & Controller



White headlights
when connected



Red tail lights when
connected

12



Connecting
or disconnected
(Blinking)



Connected
(always on)




Emergency mode
(bad connection)



Weak
Connection

Open hopper

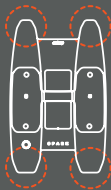

Blinks 2 times




13



Blinks 2 times



Auto pilot

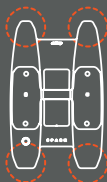

Emergency mode -
returning home,
within range or stuck

14



Autopilot



No GPS



Autopilot active



Emergency mode
- returning home,
within range or is
stuck

Avoid collisions, water
and rain



15

deepersonar.com

support@deeper.eu

www.youtube.com/@Buydeeper

deeper