

Panasonic® LC4H Electronic Counter

INSTALLATION INSTRUCTIONS


Installationsanleitung

RECOMMANDATIONS D'INSTALLATION


Before use

- To avoid damage to the counter, please refer to the following.(without power supply for sensor)
- To prevent interference of internal circuit.
 - Since the counter uses a transformer less power supply system, the input equipment must have the power supply transformer in which the secondary side is not grounded with the primary and secondary sides insulated, in order to prevent interference of the power supply circuit when connecting the external input circuit. Be sure not to use an autotransformer. When the counting and the reset signals are input, securely connect the input signal terminal and common terminal (11-pin type: 3, 8-pin type: 1). Screw terminal type: 6) referring to the wiring diagram.
 - If the input signal terminal is connected to the terminal other than the common terminal or if the power is applied to the input signal terminal, the internal circuit may be damaged.
 - To prevent faulty operation due to noise.
 - The input device, the counter and input signal lines must be separated as far as possible from any source of electrical noise.
 - Connect the input wires, using shielded wires or in separate conduits as short as possible. When connecting the input and output wires, do not connect them parallel to high-voltage or power cables and avoid using the same conduit.
 - Operate the counter at ambient temperature of -10 to +55°C and at the ambient humidity of 30 to 85%RH.
 - Do not use the counter in such places where
 - a) inflammable or corrosive gas is generated,
 - b) dusty environments
 - c) oil is present
 - d) considerable shock and vibration occurs

Output mode and Input mode setting Dip switch setting

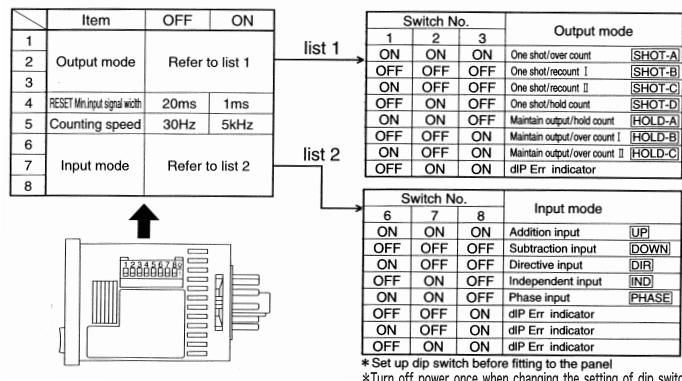

Parts name Set up front key

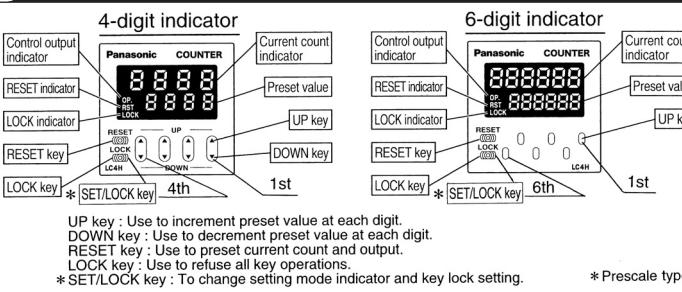

Setting the decimal point Prescale type only

- Press 2nd [key] with pressing [SET/LOCK key] and possible to make operation mode change.
- Release the [SET/LOCK key].
- Set a decimal point by 2-digit,3-digit,4-digit [UP key] or [DOWN key] (4-digit type only). (when setting with 1-digit [UP key] or [DOWN key] (4-digit type only), the setting is no decimal point).
- Press [RESET key] to complete preset procedure.

Kommastelle einstellen (LC4H-S Typ)

- Drücken Sie die SET/LOCK-Taste und die zweite Wipptaste gleichzeitig, um den Betriebsmodus zu ändern.
- JETZT die SET/LOCK-Taste loslassen.
- Setzen Sie eine Kommastelle, indem Sie die entsprechende Wipptaste an der 2, 3, oder 4, (nur 4-stelliger Typ) Stelle betätigen. (Mit der Wipptaste an der 1. Stelle (nur 4-stelliger Typ), wird keine Kommastelle gesetzt).
- Drücken Sie die RESET-Taste, um den Vorgang zu beenden.

Beispiel, 6-stelliges Modusdisplay mit Kommastelle (Beispiel des voreingestellten Wertes)

Beispiel, 6-stelliger Typ Beispiel, Betätigungszeit der 2. Wipptaste

Beispiel, 6-stelliger Typ Beispiel, Betätigungszeit der 2. Wipptaste