

430x297mm



WEEE Number: 80133970


INSTALLATION INSTRUCTION LED FLOODLIGHT SERIES



ITEM NO	VOLTAGE(V)	POWER(W)	LUMINOUS (lm)	TEMPERATURE COLOR (K)	CRI(Ra)	BEAM ANGLE	POWERFACTOR	LIFE	PROTECTION GRADE
VT-10	220-240V	10	800	3000K/4000K/6400K	80	120°	≥0.9	30000	IP65
VT-20	220-240V	20	1600	3000K/4000K/6400K	80	120°	≥0.9	30000	IP65
VT-30	220-240V	30	2400	3000K/4000K/6400K	80	120°	≥0.9	30000	IP65
VT-50	220-240V	50	4000	3000K/4000K/6400K	80	120°	≥0.9	30000	IP65
VT-100	220-240V	100	8000	3000K/4000K/6400K	80	120°	≥0.9	30000	IP65
VT-150	220-240V	150	12000	3000K/4000K/6400K	80	120°	≥0.9	30000	IP65
VT-200	220-240V	200	16000	3000K/4000K/6400K	80	120°	≥0.9	30000	IP65
VT-300	220-240V	300	24000	3000K/4000K/6400K	80	120°	≥0.9	30000	IP65



*Suitable for 10-12 hours daily usage of the product for 24 hours a day would void warranty

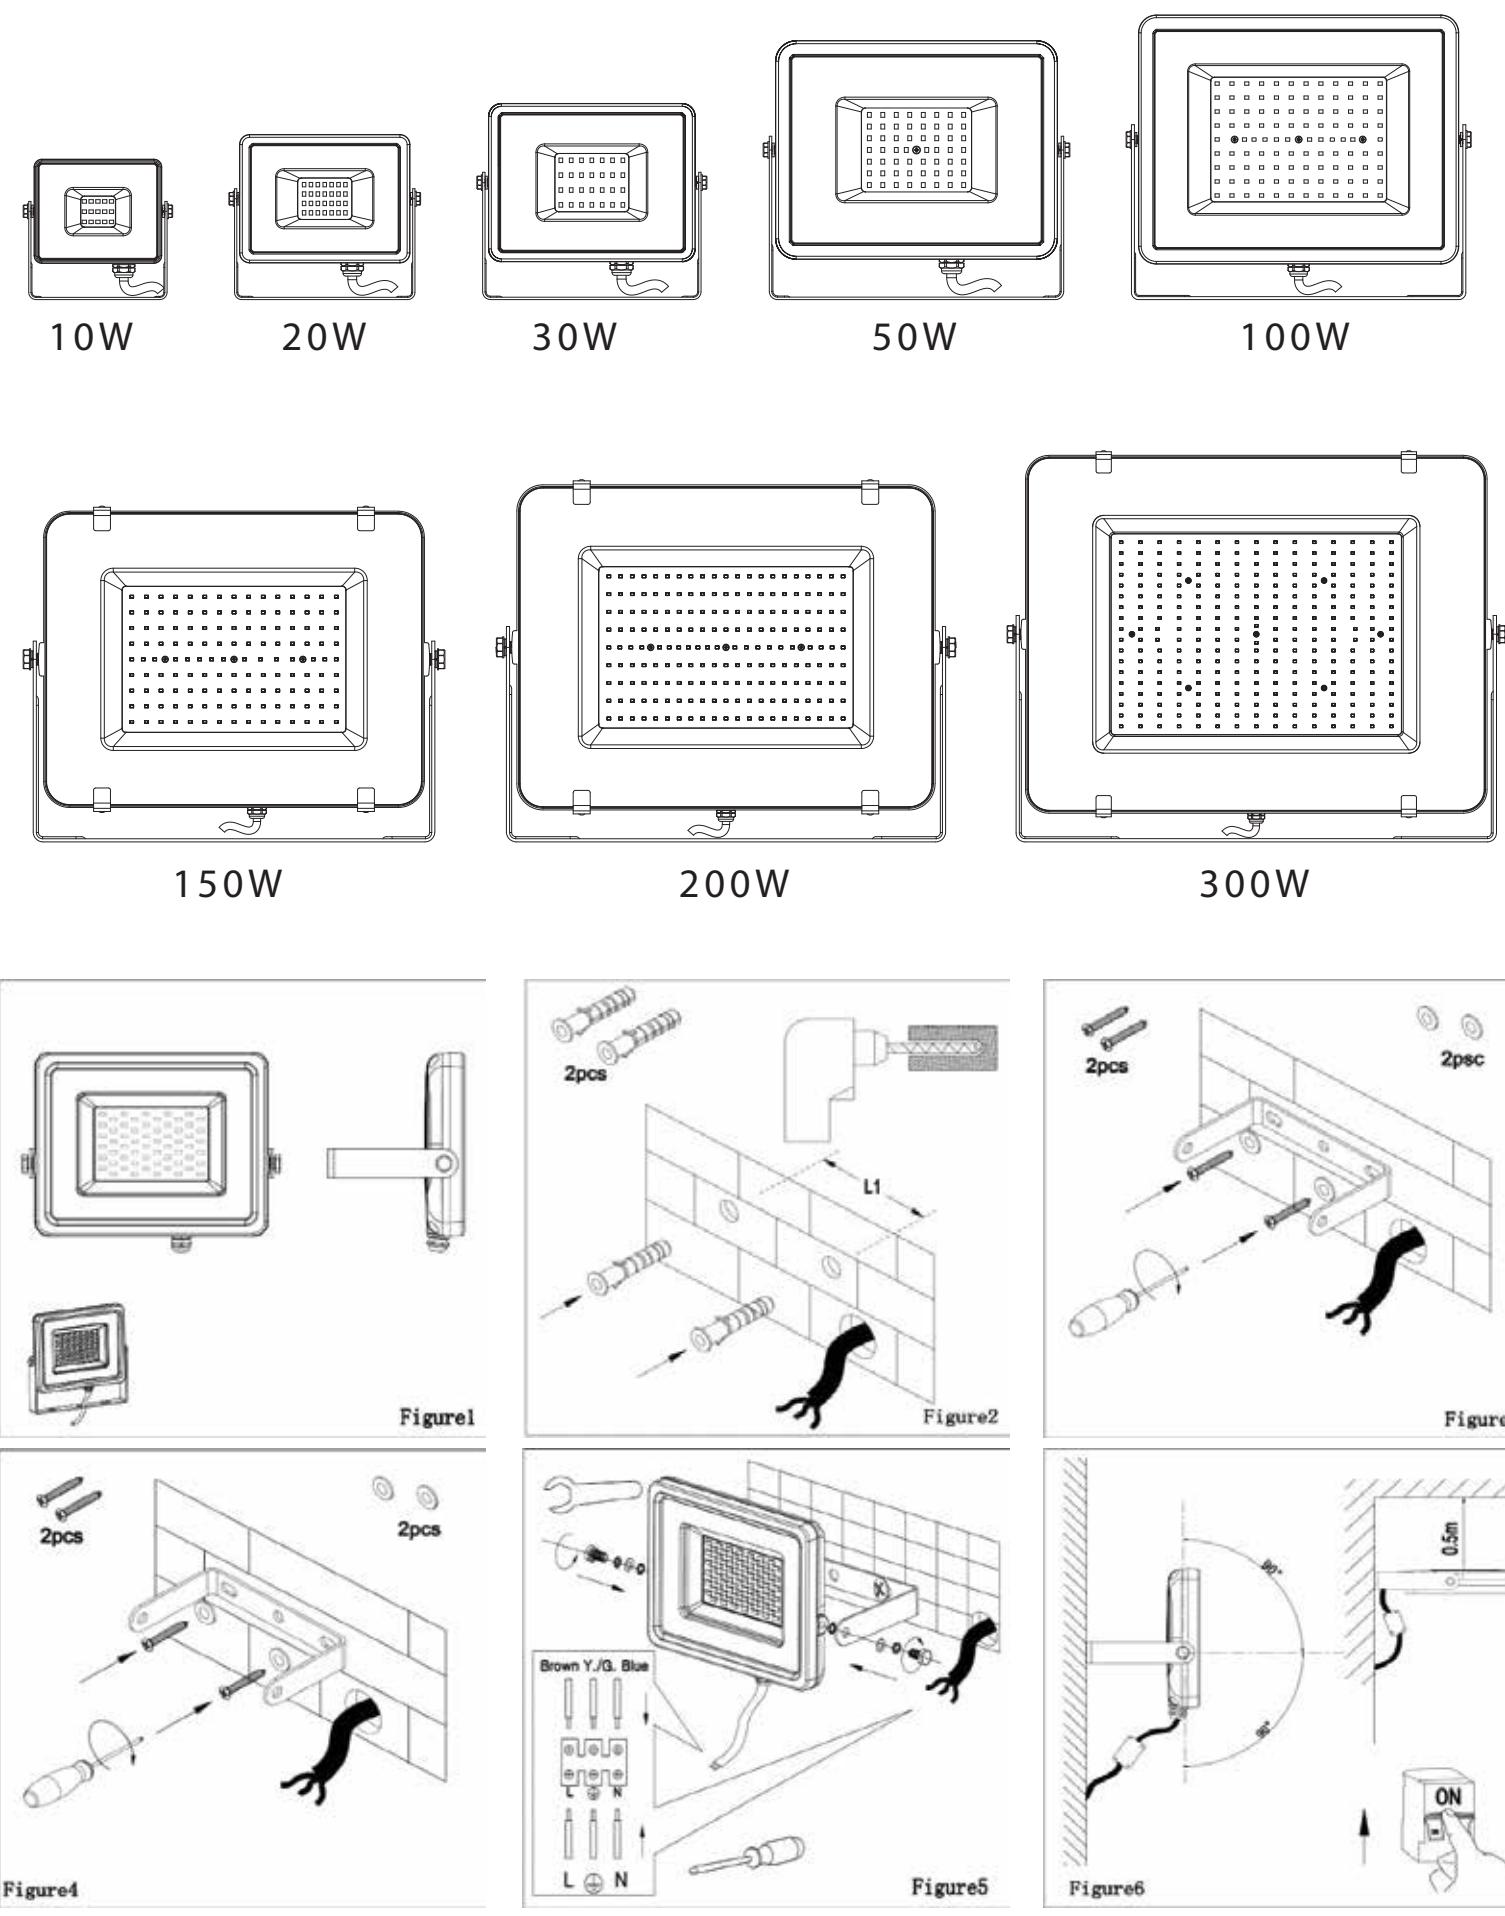

In case of any query/issue with the product please reach out to us at: support@v-tac.eu

For More products range,inquiry please contact our distributor or nearest dealers.
V-TAC EUROPE LTD,Bulgaria,Plovdiv 4000,Bul.L.Karavelow 9B

INTRODUCTION & WARRANTY
Thank you for selecting and buying V-TAC LED Floodlights. V-TAC will serve you the best. Please read these instructions carefully before starting the installation and keep this manual handy for future reference.

The warranty is valid for 5 years from the date of purchase.

The warranty does not apply to damage caused by incorrect installation or abnormal wear and tear. The company gives no warranty against damage to any surface due to incorrect removal and installation of the product. The products are suitable for 10-12 hours daily operation. Usage of product for 24 Hours a day would void the warranty. Usage of product for 24 Hours a day would void the warranty. This product is warranted for manufacturing defects only.

*DO NOT USE IN AREAS WITH UNLIMITED VENTILATION OR OUTSIDE THE RATED AMBIENT TEMPERATURE RANGE.

CONNECT WITH WATERPROOF CABLE HOUSE ONLY. *

ENSURE ELECTRICITY IS OFF BEFORE INSTALLATION.

*Please remove the screw and the bracket afterwards. (Figure 1)

*Screw the retaining bracket to the wall with a suitable quantity of screws. (Figure 2)

*Mount the fixture to the fixture. Adjust the floodlight according to the desired position. Tighten the screw. (Figure 4)

*Connect your fixture to the power source. (Figure 5)

*Please make sure that the lead is correctly connected with the junction box and our product through the waterproof junction box. Note, the line (-) of the lead. (Figure 5) Need to use the junction box of IP65 or above, ensure to tighten the waterproof screw. Switch on the power source and turn on the switch. Regulate the direction angle as per your preference. (Figure 6)

*DO NOT USE IN AREAS WITH UNLIMITED VENTILATION OR OUTSIDE THE RATED AMBIENT TEMPERATURE RANGE.

CONNECT WITH WATERPROOF CABLE HOUSE ONLY. *

ENSURE ELECTRICITY IS OFF BEFORE INSTALLATION.

*Please remove the screw and the bracket afterwards. (Figure 1)

*Screw the retaining bracket to the wall with a suitable quantity of screws. (Figure 2)

*Mount the fixture to the fixture. Adjust the floodlight according to the desired position. Tighten the screw. (Figure 4)

*Connect your fixture to the power source. (Figure 5)

*Please make sure that the lead is correctly connected with the junction box and our product through the waterproof junction box. Note, the line (-) of the lead. (Figure 5) Need to use the junction box of IP65 or above, ensure to tighten the waterproof screw. Switch on the power source and turn on the switch. Regulate the direction angle as per your preference. (Figure 6)

*DO NOT USE IN AREAS WITH UNLIMITED VENTILATION OR OUTSIDE THE RATED AMBIENT TEMPERATURE RANGE.

CONNECT WITH WATERPROOF CABLE HOUSE ONLY. *

ENSURE ELECTRICITY IS OFF BEFORE INSTALLATION.

*Please remove the screw and the bracket afterwards. (Figure 1)

*Screw the retaining bracket to the wall with a suitable quantity of screws. (Figure 2)

*Mount the fixture to the fixture. Adjust the floodlight according to the desired position. Tighten the screw. (Figure 4)

*Connect your fixture to the power source. (Figure 5)

*Please make sure that the lead is correctly connected with the junction box and our product through the waterproof junction box. Note, the line (-) of the lead. (Figure 5) Need to use the junction box of IP65 or above, ensure to tighten the waterproof screw. Switch on the power source and turn on the switch. Regulate the direction angle as per your preference. (Figure 6)

*DO NOT USE IN AREAS WITH UNLIMITED VENTILATION OR OUTSIDE THE RATED AMBIENT TEMPERATURE RANGE.

CONNECT WITH WATERPROOF CABLE HOUSE ONLY. *

ENSURE ELECTRICITY IS OFF BEFORE INSTALLATION.

*Please remove the screw and the bracket afterwards. (Figure 1)

*Screw the retaining bracket to the wall with a suitable quantity of screws. (Figure 2)

*Mount the fixture to the fixture. Adjust the floodlight according to the desired position. Tighten the screw. (Figure 4)

*Connect your fixture to the power source. (Figure 5)

*Please make sure that the lead is correctly connected with the junction box and our product through the waterproof junction box. Note, the line (-) of the lead. (Figure 5) Need to use the junction box of IP65 or above, ensure to tighten the waterproof screw. Switch on the power source and turn on the switch. Regulate the direction angle as per your preference. (Figure 6)

*DO NOT USE IN AREAS WITH UNLIMITED VENTILATION OR OUTSIDE THE RATED AMBIENT TEMPERATURE RANGE.

CONNECT WITH WATERPROOF CABLE HOUSE ONLY. *

ENSURE ELECTRICITY IS OFF BEFORE INSTALLATION.

*Please remove the screw and the bracket afterwards. (Figure 1)

*Screw the retaining bracket to the wall with a suitable quantity of screws. (Figure 2)

*Mount the fixture to the fixture. Adjust the floodlight according to the desired position. Tighten the screw. (Figure 4)

*Connect your fixture to the power source. (Figure 5)

*Please make sure that the lead is correctly connected with the junction box and our product through the waterproof junction box. Note, the line (-) of the lead. (Figure 5) Need to use the junction box of IP65 or above, ensure to tighten the waterproof screw. Switch on the power source and turn on the switch. Regulate the direction angle as per your preference. (Figure 6)

*DO NOT USE IN AREAS WITH UNLIMITED VENTILATION OR OUTSIDE THE RATED AMBIENT TEMPERATURE RANGE.

CONNECT WITH WATERPROOF CABLE HOUSE ONLY. *

ENSURE ELECTRICITY IS OFF BEFORE INSTALLATION.

*Please remove the screw and the bracket afterwards. (Figure 1)

*Screw the retaining bracket to the wall with a suitable quantity of screws. (Figure 2)

*Mount the fixture to the fixture. Adjust the floodlight according to the desired position. Tighten the screw. (Figure 4)

*Connect your fixture to the power source. (Figure 5)

*Please make sure that the lead is correctly connected with the junction box and our product through the waterproof junction box. Note, the line (-) of the lead. (Figure 5) Need to use the junction box of IP65 or above, ensure to tighten the waterproof screw. Switch on the power source and turn on the switch. Regulate the direction angle as per your preference. (Figure 6)

*DO NOT USE IN AREAS WITH UNLIMITED VENTILATION OR OUTSIDE THE RATED AMBIENT TEMPERATURE RANGE.

CONNECT WITH WATERPROOF CABLE HOUSE ONLY. *

ENSURE ELECTRICITY IS OFF BEFORE INSTALLATION.

*Please remove the screw and the bracket afterwards. (Figure 1)

*Screw the retaining bracket to the wall with a suitable quantity of screws. (Figure 2)

*Mount the fixture to the fixture. Adjust the floodlight according to the desired position. Tighten the screw. (Figure 4)

*Connect your fixture to the power source. (Figure 5)

*Please make sure that the lead is correctly connected with the junction box and our product through the waterproof junction box. Note, the line (-) of the lead. (Figure 5) Need to use the junction box of IP65 or above, ensure to tighten the waterproof screw. Switch on the power source and turn on the switch. Regulate the direction angle as per your preference. (Figure 6)

*DO NOT USE IN AREAS WITH UNLIMITED VENTILATION OR OUTSIDE THE RATED AMBIENT TEMPERATURE RANGE.

CONNECT WITH WATERPROOF CABLE HOUSE ONLY. *

ENSURE ELECTRICITY IS OFF BEFORE INSTALLATION.

*Please remove the screw and the bracket afterwards. (Figure 1)

*Screw the retaining bracket to the wall with a suitable quantity of screws. (Figure 2)

*Mount the fixture to the fixture. Adjust the floodlight according to the desired position. Tighten the screw. (Figure 4)

*Connect your fixture to the power source. (Figure 5)

*Please make sure that the lead is correctly connected with the junction box and our product through the waterproof junction box. Note, the line (-) of the lead. (Figure 5) Need to use the junction box of IP65 or above, ensure to tighten the waterproof screw. Switch on the power source and turn on the switch. Regulate the direction angle as per your preference. (Figure 6)

*DO NOT USE IN AREAS WITH UNLIMITED VENTILATION OR OUTSIDE THE RATED AMBIENT TEMPERATURE RANGE.

CONNECT WITH WATERPROOF CABLE HOUSE ONLY. *

ENSURE ELECTRICITY IS OFF BEFORE INSTALLATION.

*Please remove the screw and the bracket afterwards. (Figure 1)

*Screw the retaining bracket to the wall with a suitable quantity of screws. (Figure 2)

*Mount the fixture to the fixture. Adjust the floodlight according to the desired position. Tighten the screw. (Figure 4)

*Connect your fixture to the power source. (Figure 5)

*Please make sure that the lead is correctly connected with the junction box and our product through the waterproof junction box. Note, the line (-) of the lead. (Figure 5) Need to use the junction box of IP65 or above, ensure to tighten the waterproof screw. Switch on the power source and turn on the switch. Regulate the direction angle as per your preference. (Figure 6)

*DO NOT USE IN AREAS WITH UNLIMITED VENTILATION OR OUTSIDE THE RATED AMBIENT TEMPERATURE RANGE.

CONNECT WITH WATERPROOF CABLE HOUSE ONLY. *

ENSURE ELECTRICITY IS OFF BEFORE INSTALLATION.

*Please remove the screw and the bracket afterwards. (Figure 1)

*Screw the retaining bracket to the wall with a suitable quantity of screws. (Figure 2)

*Mount the fixture to the fixture. Adjust the floodlight according to the desired position. Tighten the screw. (Figure 4)

*Connect your fixture to the power source. (Figure 5)

*Please make sure that the lead is correctly connected with the junction box and our product through the waterproof junction box. Note, the line (-) of the lead. (Figure 5) Need to use the junction box of IP65 or above, ensure to tighten the waterproof screw. Switch on the power source and turn on the switch. Regulate the direction angle as per your preference. (Figure 6)

*DO NOT USE IN AREAS WITH UNLIMITED VENTILATION OR OUTSIDE THE RATED AMBIENT TEMPERATURE RANGE.

CONNECT WITH WATERPROOF CABLE HOUSE ONLY. *

ENSURE ELECTRICITY IS OFF BEFORE INSTALLATION.

*Please remove the screw and the bracket afterwards. (Figure 1)

*Screw the retaining bracket to the wall with a suitable quantity of screws. (Figure 2)

*Mount the fixture to the fixture. Adjust the floodlight according to the desired position. Tighten the screw. (Figure 4)

*Connect your fixture to the power source. (Figure 5)

*Please make sure that the lead is correctly connected with the junction box and our product through the waterproof junction box. Note, the line (-) of the lead. (Figure 5) Need to use the junction box of IP65 or above, ensure to tighten the waterproof screw. Switch on the power source and turn on the switch. Regulate the direction angle as per your preference. (Figure 6)

*DO NOT USE IN AREAS WITH UNLIMITED VENTILATION OR OUTSIDE THE RATED AMBIENT TEMPERATURE RANGE.

CONNECT WITH WATERPROOF CABLE HOUSE ONLY. *

ENSURE ELECTRICITY IS OFF BEFORE INSTALLATION.

*Please remove the screw and the bracket afterwards. (Figure 1)

*Screw the retaining bracket to the wall with a suitable quantity of screws. (Figure 2)

*Mount the fixture to the fixture. Adjust the floodlight according to the desired position. Tighten the screw. (Figure 4)

*Connect your fixture to the power source. (Figure 5)

*Please make sure that the lead is correctly connected with the junction box and our product through the waterproof junction box. Note, the line (-) of the lead. (Figure 5) Need to use the junction box of IP65 or above, ensure to tighten the waterproof screw. Switch on the power source and turn on the switch. Regulate the direction angle as per your preference. (Figure 6)

*DO NOT USE IN AREAS WITH UNLIMITED VENTILATION OR OUTSIDE THE RATED AMBIENT TEMPERATURE RANGE.

CONNECT WITH WATERPROOF CABLE HOUSE ONLY. *

ENSURE ELECTRICITY IS OFF BEFORE INSTALLATION.

*Please remove the screw and the bracket afterwards. (Figure 1)

*Screw the retaining bracket to the wall with a suitable quantity of screws. (Figure 2)