


OLIGHT

USER MANUAL

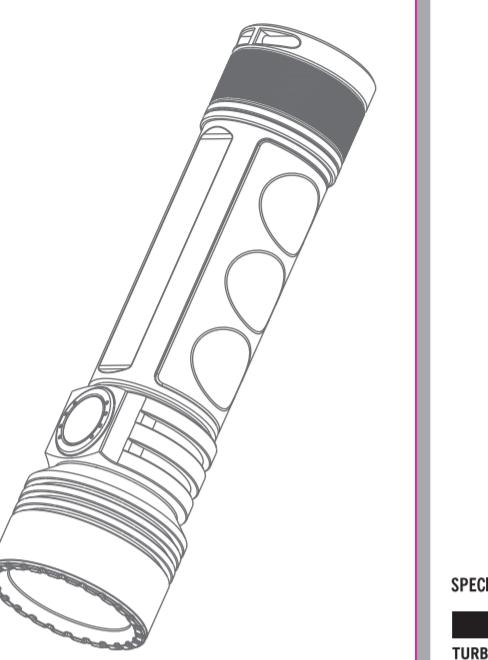

Seeker 2 Pro

Thank you for purchasing this Olight Product. Before use, please read the manual carefully!

(EN) English

HOW TO OPERATE

ON/OFF: Single click the side switch to turn the light on/off. When the light is turned on, it will return to the previous brightness level selected before the light was turned off. (Only the moonlight, low, medium and high mode can be memorized when the flashlight is switched off. The turbo mode is memorized as high mode. The strobe mode cannot be memorized).

CHANGE BRIGHTNESS LEVEL: When the flashlight is on, press and hold the side switch to automatically cycle through the moonlight, low, medium, high, and low modes. The mode is selected when the side switch has been released.

MOONLIGHT: When the flashlight is off, press and hold the side switch for about one second to access the moonlight mode.

DIRECT ACCESS TO TURBO: Enter and exit Turbo mode, quickly double click the side switch to enter Turbo mode, and quickly double-click the side switch again to exit Turbo mode. When the memorized mode is high, quickly double-click the side switch to exit Turbo mode and switch to medium mode. When the memorized mode is Medium, Low, or Moonlight, quickly double click the side switch to exit Turbo mode and switch to the previous memorized mode.

STROBE: When the flashlight is on, triple-click the side switch to activate strobe mode. To quit the mode, single click or hold the switch.

TIMER: The Seeker 2 Pro has a long (9 minute) and short (3 minutes) timer when the light needs to be automatically turned off. When the flashlight is on, double click and hold the side switch under the current brightness level to access the timer setting. A single click accesses the short timer while two clicks access the long timer. The flashlight will automatically turn off when the timer is up. After the timer is set, double click and hold the side switch to shift the timer settings. When the timer is up and the user is about to enter the timer again, the light will return to the last timer setting.

LOCK/UNLOCK: When the flashlight is off, press and hold the side switch (for about three seconds) until the moonlight mode is activated. To unlock, turn back on. After this, you are back to normal functionality.


(CHS) 简体中文

操作


开关/关闭: 单击侧键开、关机。开机时，手电点亮在记忆存储的亮度。(月光、低、中、高亮在关机时亮起，Turbo记忆为高，Strobe不记忆)。

改变亮度: 在灯光亮起时按住侧键1秒以上，月光开启，如前次闪光为月光，单按侧键。

Turbo与返回: 快速双按侧键进入Turbo，再次双按返回，如记忆档为高亮档或中亮档，输出中亮档。如记忆档为低亮或月光，输出记忆档。

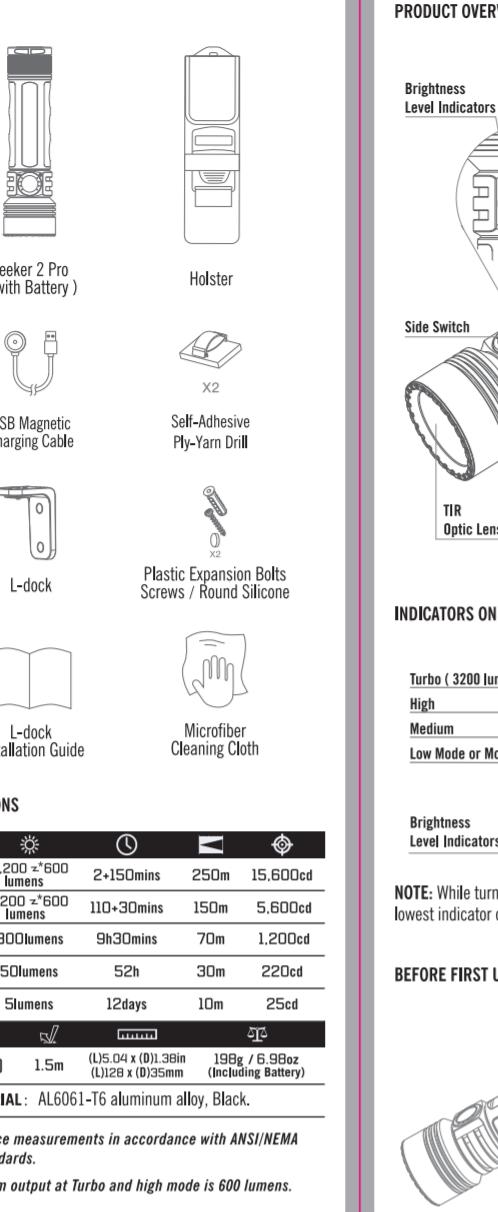


IN THE BOX

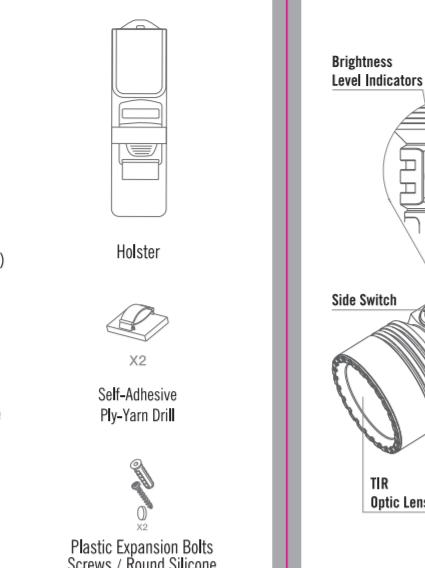

SPECIFICATIONS

	TURBO 3200~600 lumens	2~150mins	250m 5.60cd
HIGH	1200~600 lumens	110~30mins	150m 5.60cd
MEDIUM	300lumens	9h30mins	70cm 1.20cd
LOW	50lumens	52h	30m 220cd
MOON	Slumens	12days	10m 25cd
	IPX8 (2m)	1.5m (0.5m x 0.1m) 30min (1.2m x 0.35m, including Battery)	19h / 5.99x (including Battery)
BODY MATERIAL:	AL6016-T6 aluminum alloy, Black.		
All performance measurements in accordance with ANSI/NEMA FLI-2009 standards.			
* The minimum output at Turbo and high mode is 600 lumens.			

BEFORE FIRST USE

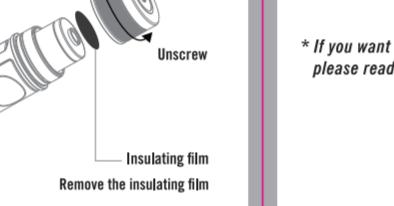

* If you want to know more about the usage of L-dock, please read the L-dock Installation Guide.


SPECIFICATIONS

NOTE: While turning on, if the battery power is less than 10%, the lowest indicator on the right side will glow red.

AFTER FIRST USE



PRODUCT OVERVIEW

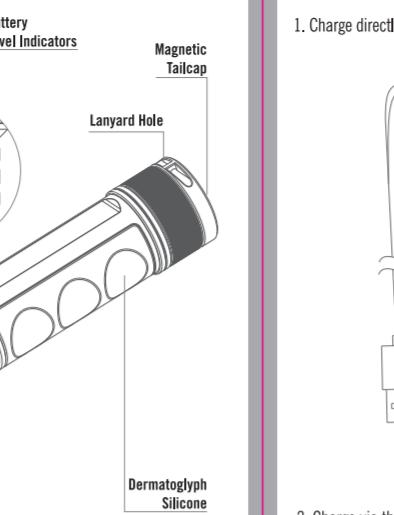

TWO WAYS TO CHARGE

1. Charge directly via the provided MCC1A1.



2. Charge via the L-dock.



CONTENTS

(EN) English

(CHS) 简体中文

(FI) Finnish

(NO) Norwegian

(SV) Swedish

(NED) Nederland

(PL) Polska

(DE) Deutsch

(HU) Magyarország

(RU) Русский

(ES) Español

(RO) Românească

(JP) 日本語

(FR) Français

(BG) Български

(IT) Italia

(DE) Deutsch

(HU) Magyarország

(RU) Русский

(ES) Español

(RO) Românească

(JP) 日本語

(FR) Français

(BG) Български

(IT) Italia

(DE) Deutsch

(HU) Magyarország

(RU) Русский

(ES) Español

(RO) Românească

(JP) 日本語

(FR) Français

(BG) Български

(IT) Italia

(DE) Deutsch

(HU) Magyarország

(RU) Русский

(ES) Español

(RO) Românească

(JP) 日本語

(FR) Français

(BG) Български

(IT) Italia

(DE) Deutsch

(HU) Magyarország

(RU) Русский

(ES) Español

(RO) Românească

(JP) 日本語

(FR) Français

(BG) Български

(IT) Italia

(DE) Deutsch

(HU) Magyarország

(RU) Русский

(ES) Español

(RO) Românească

(JP) 日本語

(FR) Français

(BG) Български

(IT) Italia

(DE) Deutsch

(HU) Magyarország

(RU) Русский

(ES) Español

(RO) Românească

(JP) 日本語

(FR) Français

(BG) Български

(IT) Italia

(DE) Deutsch

(HU) Magyarország

(RU) Русский

(ES) Español

(RO) Românească

(JP) 日本語

(FR) Français

(BG) Български

(IT) Italia

(DE) Deutsch

(HU) Magyarország

(RU) Русский

(ES) Español

(RO) Românească

(JP) 日本語

(FR) Français

(BG) Български

(IT) Italia

(DE) Deutsch

(HU) Magyarország

(RU) Русский

(ES) Español

(RO) Românească

(JP) 日本語

(FR) Français

(BG) Български

(IT) Italia

(DE) Deutsch

(HU) Magyarország

(RU) Русский

(ES) Español

(RO) Românească

(JP) 日本語

(FR) Français

(BG) Български

(IT) Italia</