

2. PARTS DESCRIPTION

2.1 BOX CONTENT

1. 1x	2. 1x	3. 1x	4. 1x	5. 1x	6. 1x	7. 1x	8. 4x 4x 3x
---------------------	---------------------	---------------------	---------------------	---------------------	---------------------	---------------------	---------------------------------

2.2.1 INDOOR UNIT (MONITOR)

2.2.2 OUTDOOR UNIT (DOORBELL)

! INSTALLATION !

3. INSTALLATION

3.1 PLACING THE INDOOR UNIT (MONITOR)

3.2 MOUNT THE OUTDOOR UNIT (DOORBELL)


3.2 MOUNT THE OUTDOOR UNIT (DOORBELL)

3.3.1 CONNECTING AC POWER TO THE INDOOR UNIT


3.3.2 INSTALLING AND CHARGING THE INDOOR UNIT (MONITOR) BATTERY

3.3.3 CHARGING OUTDOOR UNIT (DOORBELL) BATTERY


3.3.4 INSTALLING A MICRO SD CARD (NOT INCLUDED)

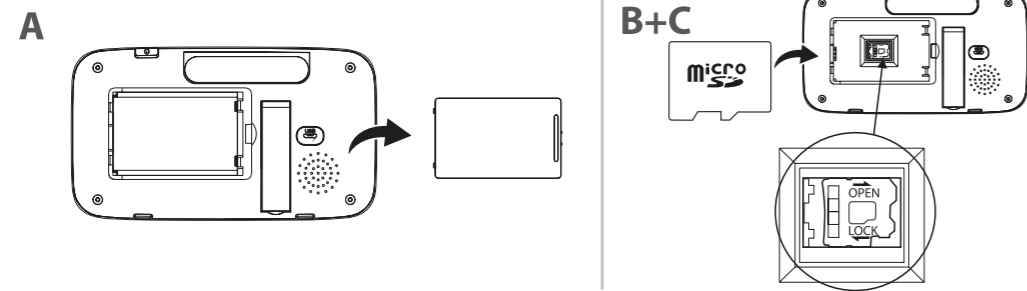


3.3.5 CONNECTING AC POWER TO THE OUTDOOR UNIT (OPTIONAL, ADAPTER NOT INCLUDED)

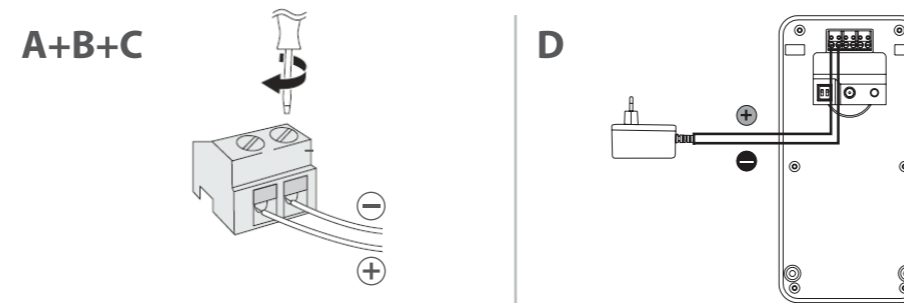

3.3.6 + 3.3.7 CONNECTING A DOOR LOCK/GATE OPENER (NOT INCLUDED)

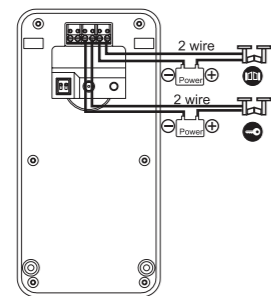


3.3.8 CONNECTING THE EXTERNAL ANTENNA (NOT INCLUDED)

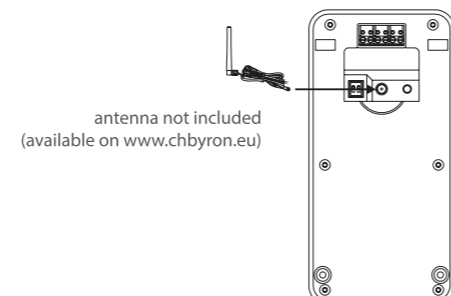

4. BASIC FUNCTIONS

4.1 CONTROL BUTTONS

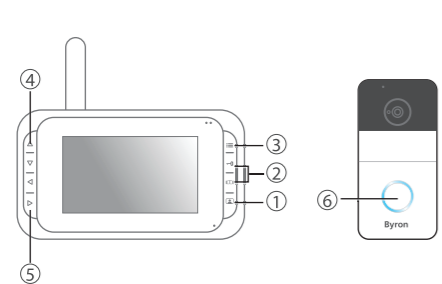


4.2 SCREEN ICONS



4.3 SETTINGS MENU




4.4 ANSWERING A CALL

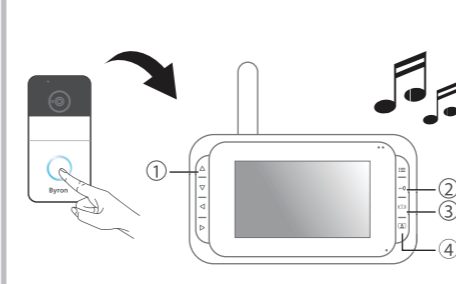


4.5 PAIRING THE MONITOR/DOORBELL




4.6 PAIRING AN ADDITIONAL MONITOR (NOT INCLUDED)

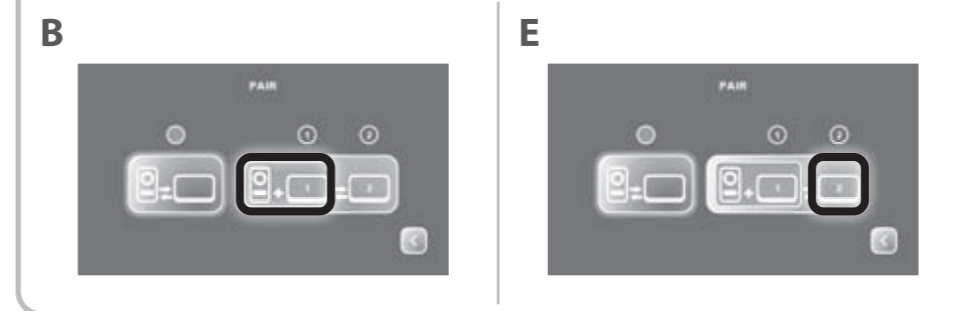

4.7 IMAGE SETTING

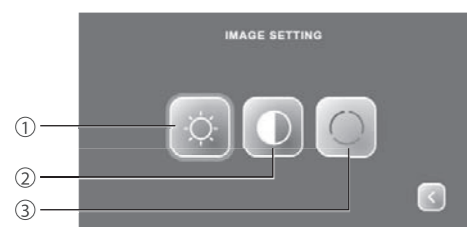

4.8 VOLUME CONTROL

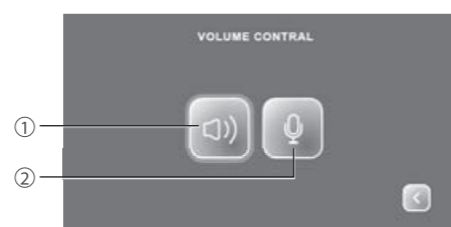


4.9 RINGTONE SETTING



4.10 PLAY BACK MENU



4.11 RECORDING VIDEOS/PHOTOS

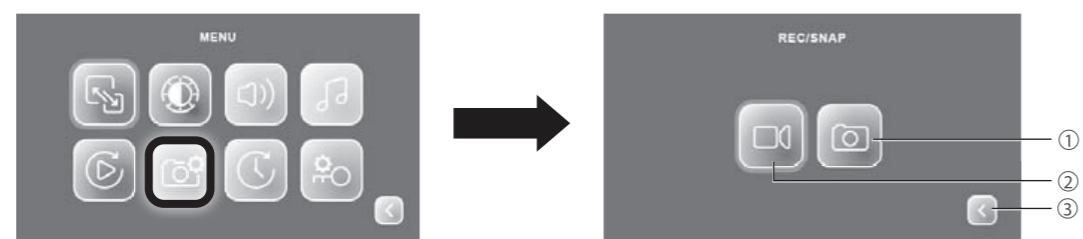

4.12 TIME SETTING



4.13 UNLOCK TIME SETTING

