

# DENVER<sup>®</sup>

## **MLC-3403**

### PC Monitor




Read this booklet thoroughly before using and save it for future reference




# Section 1: Product Overview

## 1.1 - Monitor Buttons

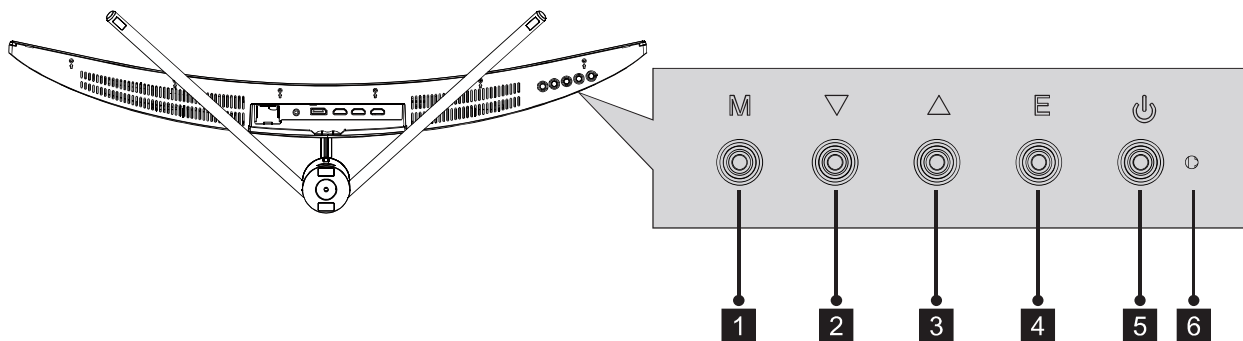

- 1 M Menu Button:** Press to display the OSD menu or enter sub-menus.
- 2 ▼ Down Button:** Press to move down in the menus.
- 3 ▲ Up Button:** Press to move up in the menus.
- 4 E Exit Button:** Press to exit.
- 5 Power Button:** Press to turn the monitor on/off.
- 6 LED Indicator:** Changes colors to indicate status. Refer to Section 6.

## 1.2 - Monitor Ports

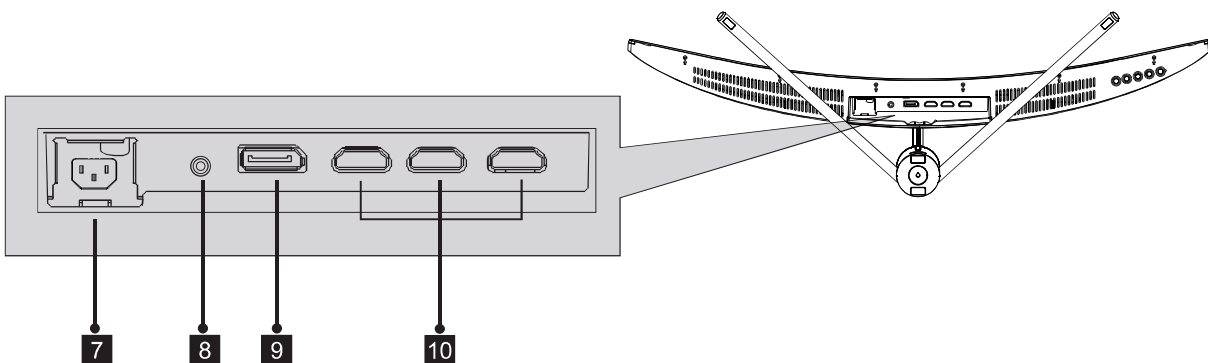


- 7 Power Connector:** Insert the power cable to supply power to the monitor.
- 8 Audio Output :** Insert one end of the Audio cable into the computer' Audio output to receive the Audio singals from your PC.
- 9 DP Connector :** Insert one end of the DP cable into the computer' DP output and connect the other end to the monitor's DP port.
- 10 HDMI Connector :** Insert one end of the HDMI cable into the computer's HDMI output and connect the other end to the monitor's HDMI port.

## 2. Stand Installation




Hold the foam in the monitor before attaching the base.


1. Open the package and take out the product with foam still attached. Gently place it on a desktop or table.
2. Take out the upper polyfoam and the inner package bag, lower polyfoam place on a desktop or table, keep the lower foam underneath the monitor.
3. See picture, fasten the stand stem and base with a screw.

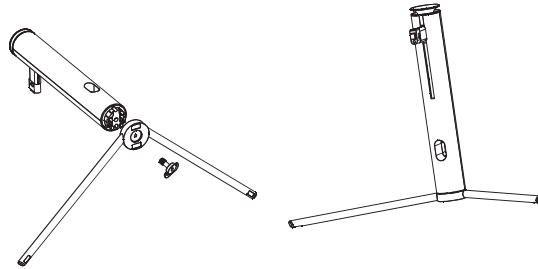

4. Press the button to remove the stand plate, Fix the stand plate into the stand stem with the screw 5\*11mm.

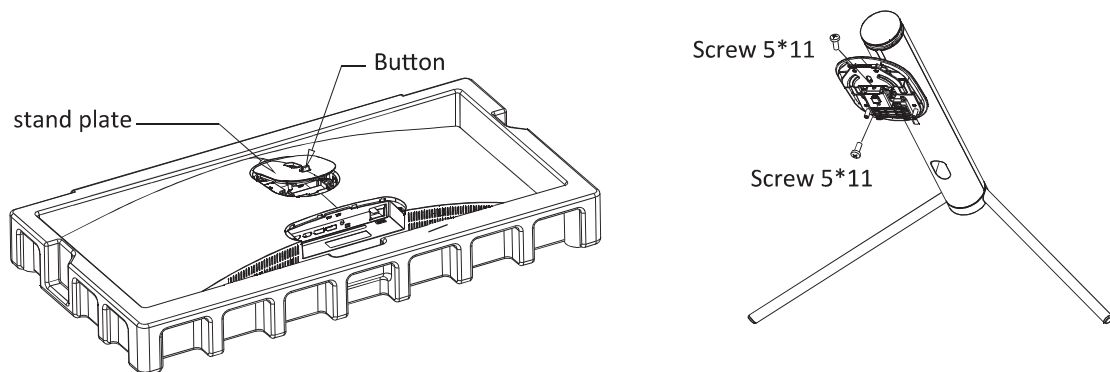


5. Fix the whole assembled stand into the monitor, and check carefully to make sure it is fasten.

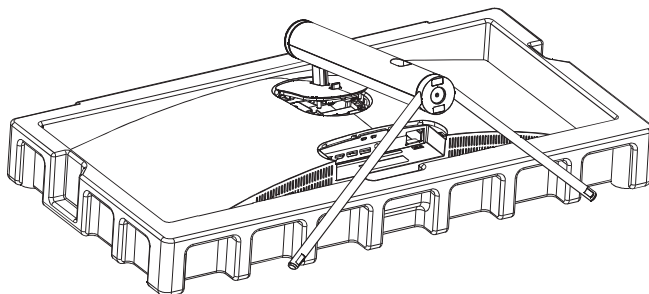


6. Hold on the stand stem and stand the monitor up on a flat, level desktop or table.  
Note: Don't touch the screen during stand it up, to avoid screen broken.

### 3. Wall Mounting


1. Open the package and take out the product with foam still attached. Gently place it on a desktop or table. Remove the extra parts and the foam covering the monitor. If the monitor is already attached to the stand, remove the stand.

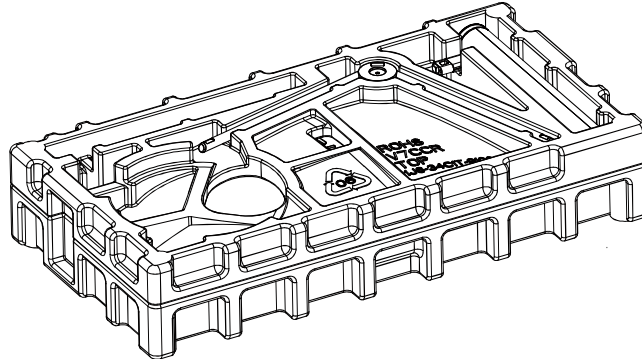

2. Press the button to remove the adapter on back of monitor, then tighten the included four screws onto the mounting holes on back of monitor.

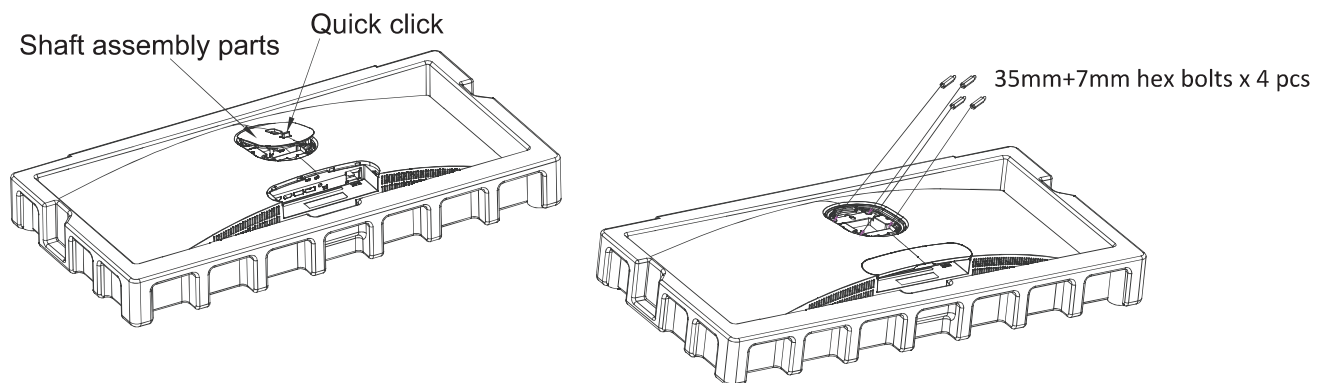


3. Install the monitor on the wall, mount, or fixture as desired.

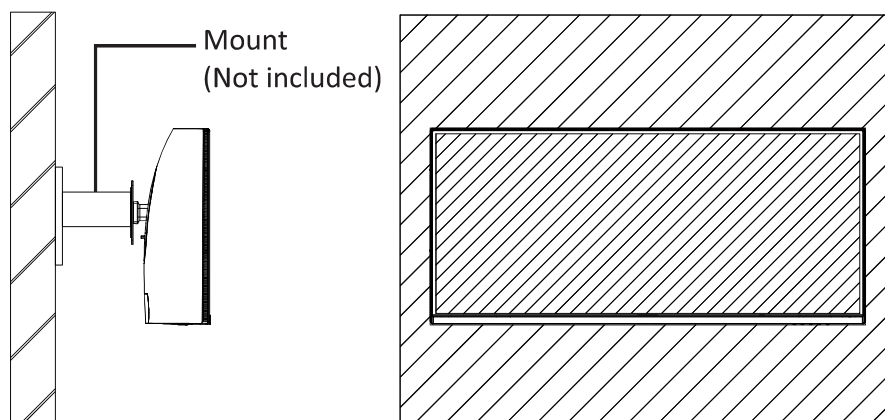

## 4. Connectivity Options


### 4.1 - Connecting the power cable

Connect the included power cable to the power connector, and then plug the other end into an wall outlet.

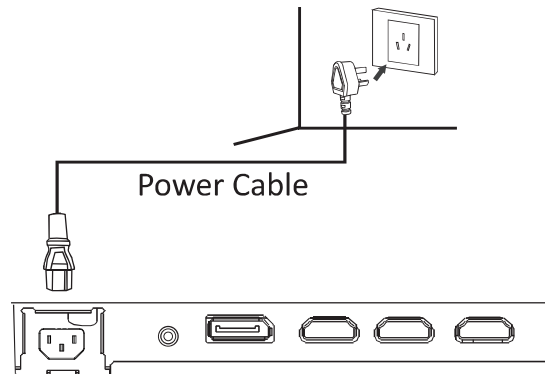


### 4.2 - Connecting Your Earphones

Plug in your earphones to receive audio signals from your monitor. If your earphones are connected to the monitor and audio devices are connected to your computer at the same time, the audio devices will not produce sound. Earphones and other audio devices not included.

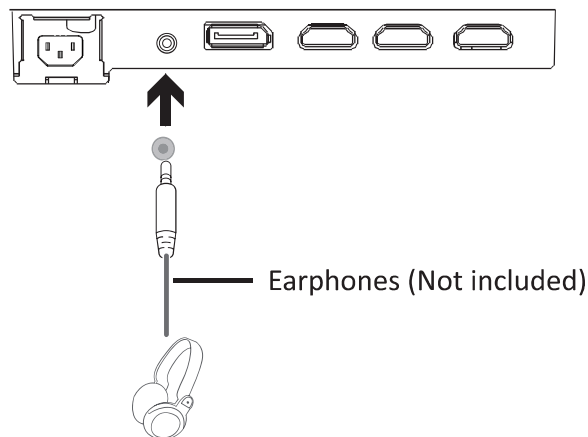


### 4.3 - DP Connectivity

In order for the monitor to receive DP signals from the computer, use a DP cable to connect the monitor to the computer.

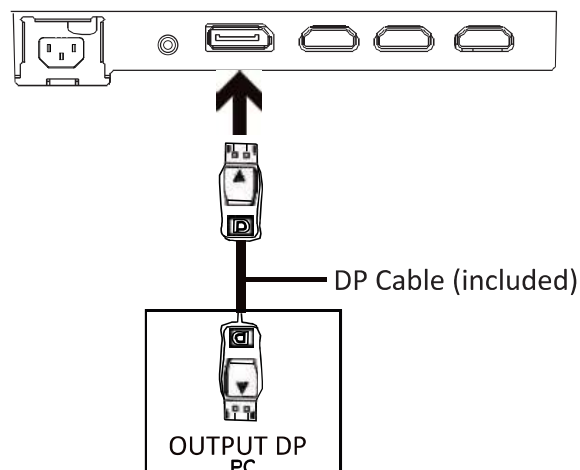


## 4.4 - HDMI Connectivity

In order for the monitor to receive HDMI signals from the computer, use a HDMI cable to connect the monitor to the computer.

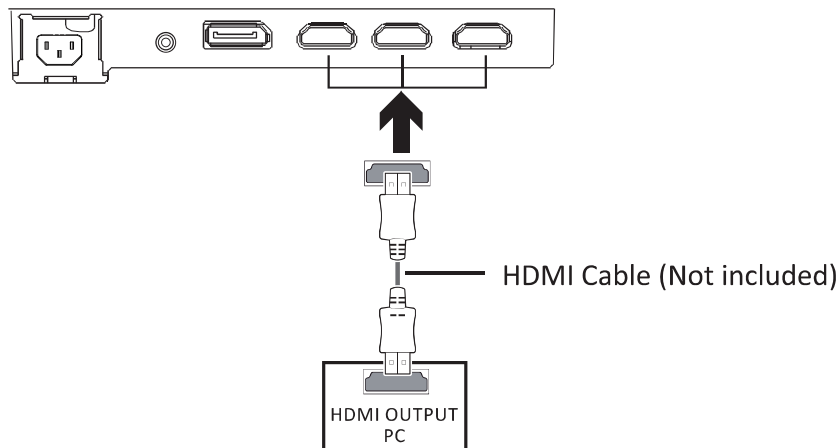


## 5. Basic Operation

1. Insert one end of the DP cable into your Pc's graphics card. A HDMI cable may also be used. A HDMI cables is not included.
2. Connect the other end of the cable to the corresponding connector on your monitor.

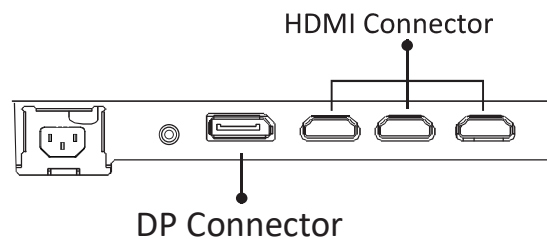

3. Connect the power cable to your monitor then connect the other end to your power source. It is recommended that you use a surge protector with adequate voltage if a wall outlet cannot be reached directly.
4. Locate the power button on the monitor and press it to turn the monitor on.

## 6. Indicator Light

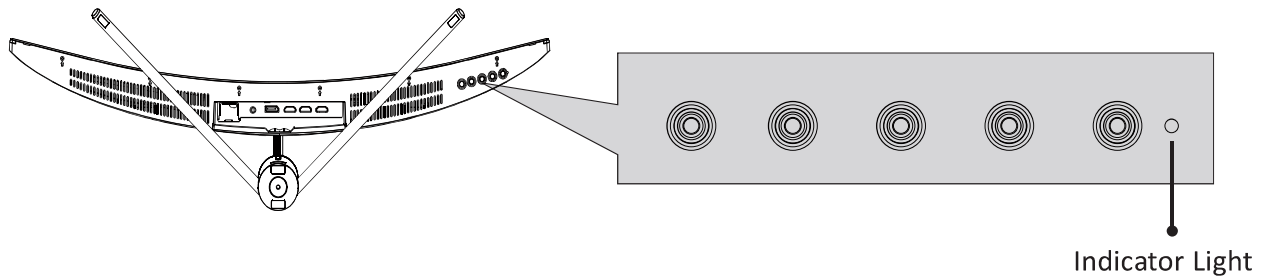

Solid blue light indicates power is on and the monitor is operating normally . Flashing blue light indicates no video source has been detected.

## 7. ECO Modes and Gameplus Switching


1. Press any one of the buttons ( **M**, **▼**, **▲**, **E**, **🖱** ) to activate the navigation window .



2. Press **▼** to switch Gameplus modes. According to the needs of your game, choose the corresponding game icon. These game icons are primarily designed to optimize your aim during shooting games, though they can be used for other scenarios.



3. Press **▲** to switch ECO modes. These modes include Standard, Text, Movie, Game, FPS and RTS modes and can be used to optimize settings according to your activity . Standard mode is suitable for most activities.

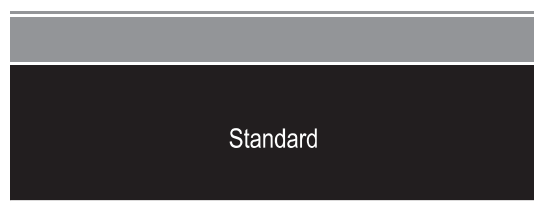






ENERG  
енергия · ενεργεια



DENVER®

MLC-3403

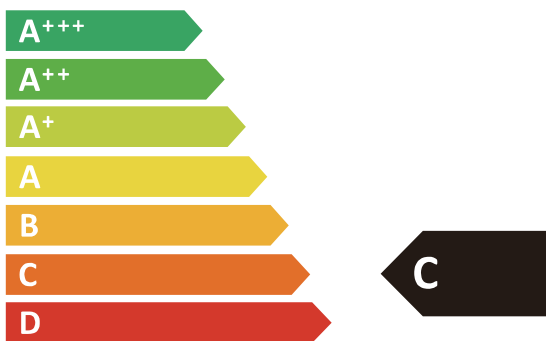

ENERGIA · ЕНЕРГИЯ  
ΕΝΕΡΓΕΙΑ · ENERGIJA  
ENERGY · ENERGIE  
ENERGI



52  
Watt

75  
kWh/annum

86.36  
cm



34  
inch

2010/1062 - 2020

Please notice - All products are subject to change without any notice.  
We take reservations for errors and omissions in the manual.  
ALL RIGHTS RESERVED, COPYRIGHT DENVER ELECTRONICS A/S

# DENVER®

[www.denver-electronics.com](http://www.denver-electronics.com)

CE



Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

DENVER ELECTRONICS A/S  
Omega 5A, Soeflen  
DK-8382 Hinnerup  
Denmark  
[facebook.com/denverelectronics](https://facebook.com/denverelectronics)