# LTE-CATM1/NB1 **MEZZANINE FOR** 96BOARDS **QUICK START GUIDE**

P/N: SRT-96B-MEZ-CATM1NB1



#### 1. INTRODUCTION

Shiratech LTE CAT-M1/NB1 Mezzanine is a 96Boards compatible mezzanine board that adds LTE modem functionality to any 96Boards CE/EE boards.

This guick start guide will show you how to connect the mezzanine and accessories and configure the LTE modem on Debian Linux.

#### 2. BOX CONTENT

- 1. LTE CAT-M1/NB1 mezzanine board
- 2. LTE RF antenna
- 3. Quick start guide

## 4. RUNNING THE MEZZANINE FOR THE FIRST TIME

- 1. Insert your SIM card to the SIM card connector.
- Connect the mezzanine on top of your 96Boards CE/EE board.
- Connect the included LTE antenna to RF connector Antenna Main.
- Connect HDMI monitor, USB keyboard and USB mouse to your board.
- Power on your board.
- 6. Download and install the latest Debian Linux for your 96Boards CE/EE board.
- 7. For Dragonboard 410C follow the instructions in the following link: https://www.96boards.org/ documentation/consumer/dragonboard410c downloads/debian.md.html

### 5. LTE MODEM CONFIGURATION

- 1. Once Debian desktop is up and running it is time configure the LTE modem. Click the Network Connection icon on the lower
- 2. Select New Mobile Broadband Connection from the menu.
- 3. In the Set up a Mobile Broadband Connection wizard window click Next.
- 4. Select your country and click Next.

right corner of the desktop.

- 5. Select your provider and click Next.
- Select your plan and click Next.
- Confirm configuration settings and click Apply.

# 3. REQUIRED HARDWARE

- 1. Cellular data SIM (make sure that your mobile network operator supports LTE CAT-M1/NB1 connectivity)
- 2. USB flash drive or Micro SD card
- 3. 96Boards CE/EE board running latest Debian Linuxin this guide we will use the Dragonboard 410C
- 4. Power supply
- 5. HDMI monitor and cable
- 6. USB mouse and keyboard

The modem will attempt to connect to the cellular network. Once connection established the network connection icon will change to LTE connected icon. Open a web browser and check your new LTE connection.

WWW.SHIRATECH-SOLUTIONS.COM