



2. PARTS DESCRIPTION


2.1 BOX CONTENT

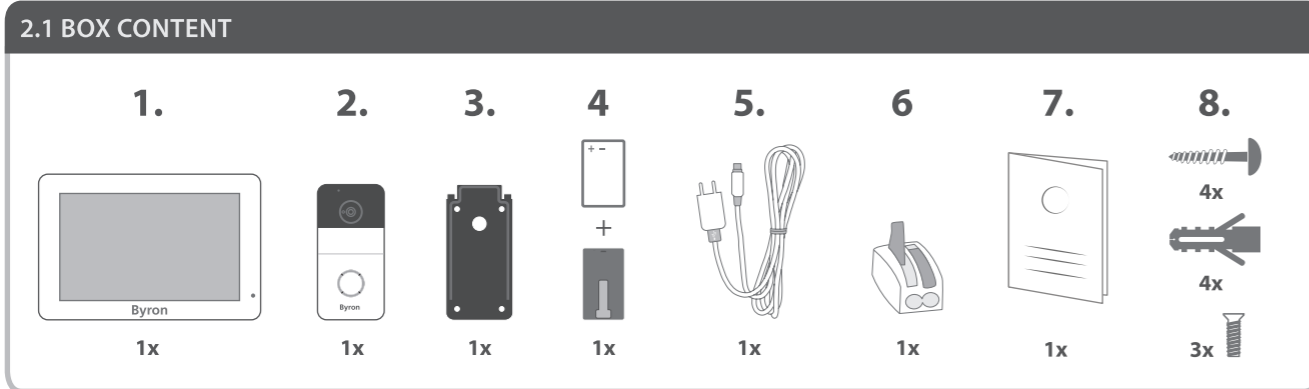


2.2.1 INDOOR UNIT (MONITOR)

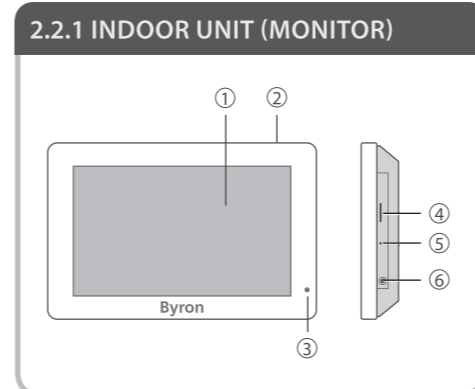


2.2.2 OUTDOOR UNIT (DOORBELL)

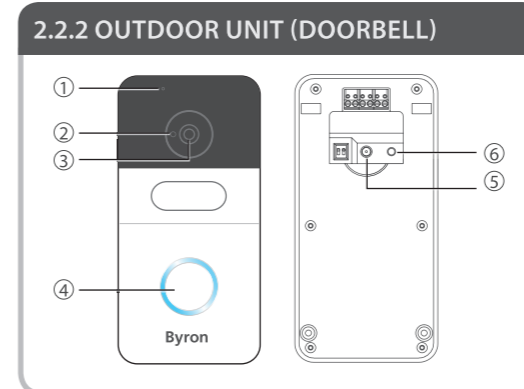


2.2.3 SCREEN ICONS

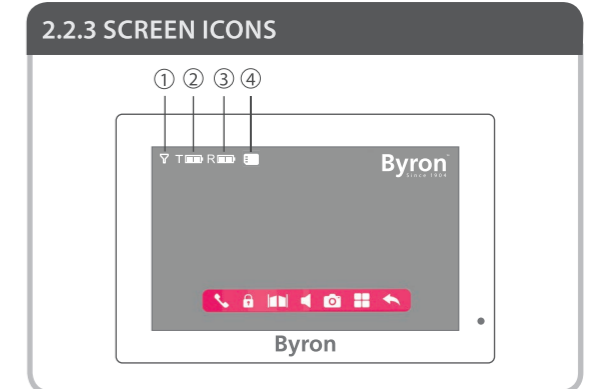


3. INSTALLATION

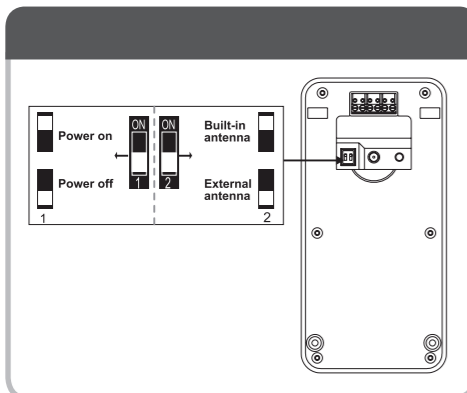


3.1 PLACING THE INDOOR UNIT (MONITOR)

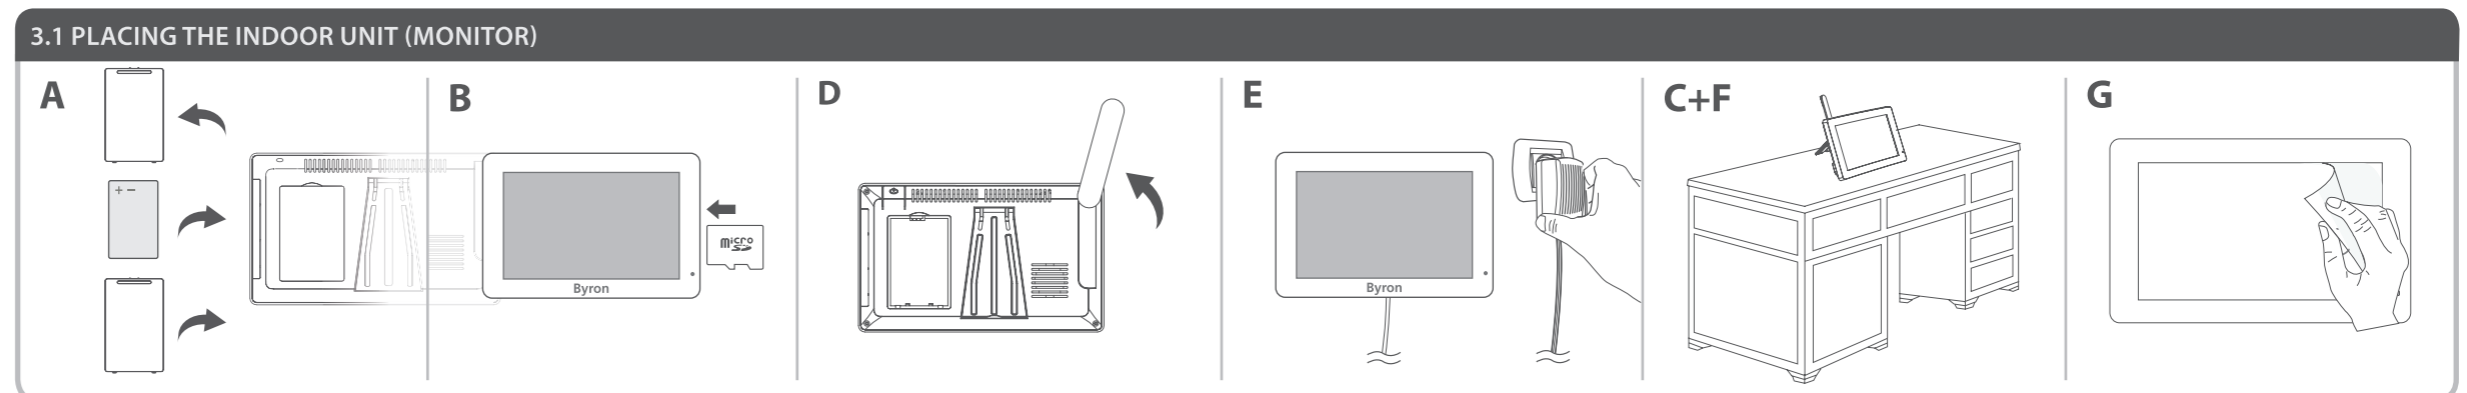

3.2 MOUNT THE OUTDOOR UNIT (DOORBELL)

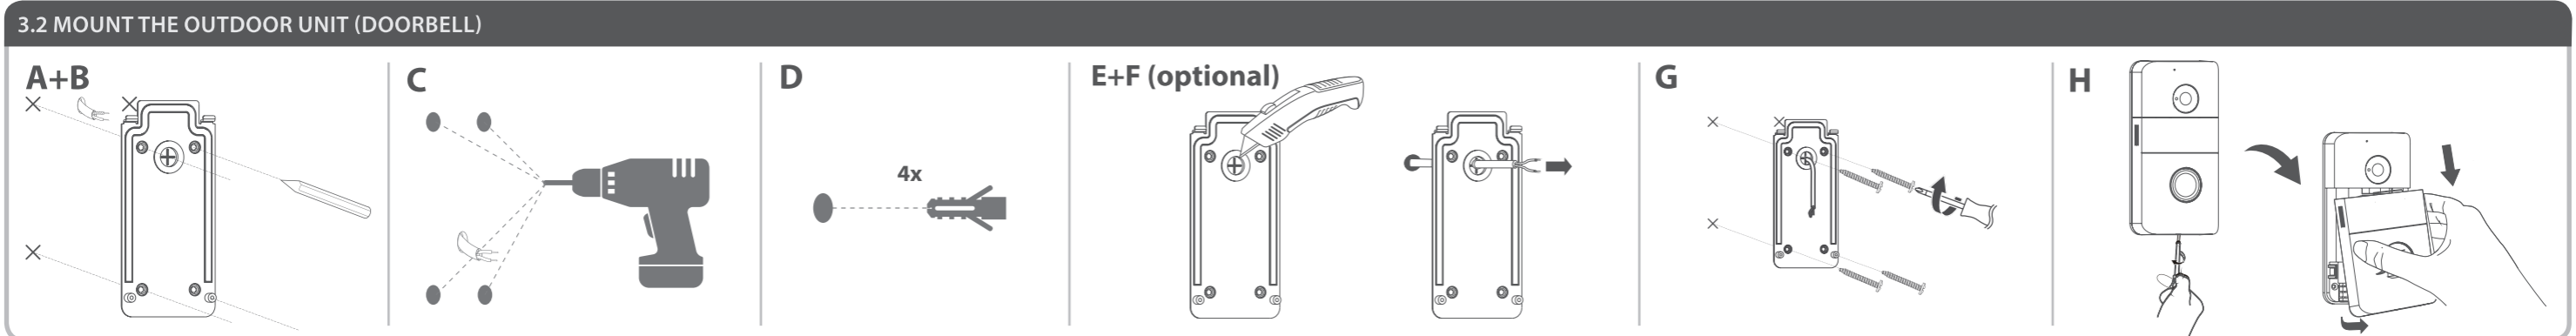


3.2 MOUNT THE OUTDOOR UNIT (DOORBELL)

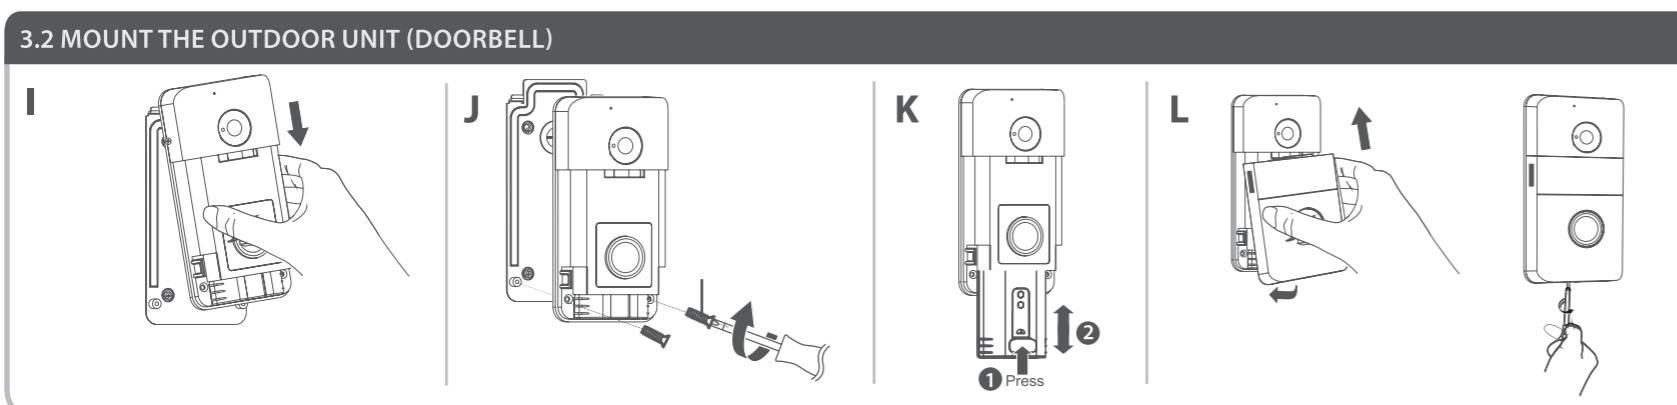


3.3 ELECTRICAL INSTALLATION


3.3.1 CONNECTING AC POWER TO THE INDOOR UNIT

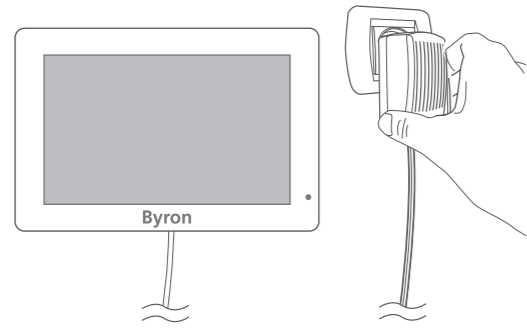


3.3.2 CHARGING OUTDOOR UNIT (DOORBELL) BATTERY

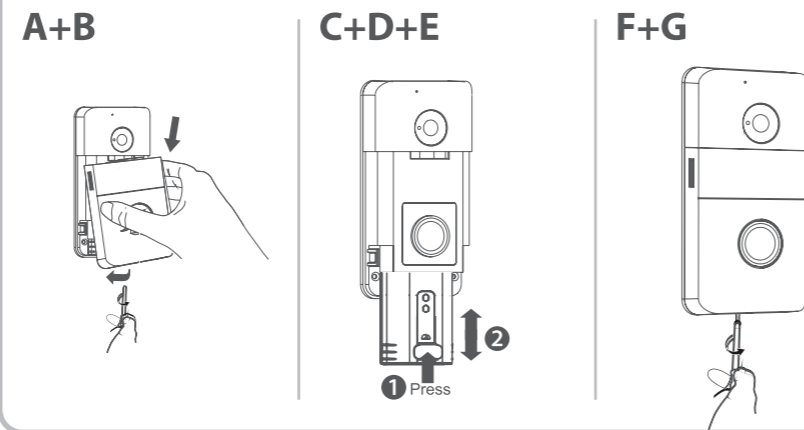


3.3.4 CONNECTING AC POWER TO THE OUTDOOR UNIT (DOORBELL) (ADAPTER NOT INCLUDED)

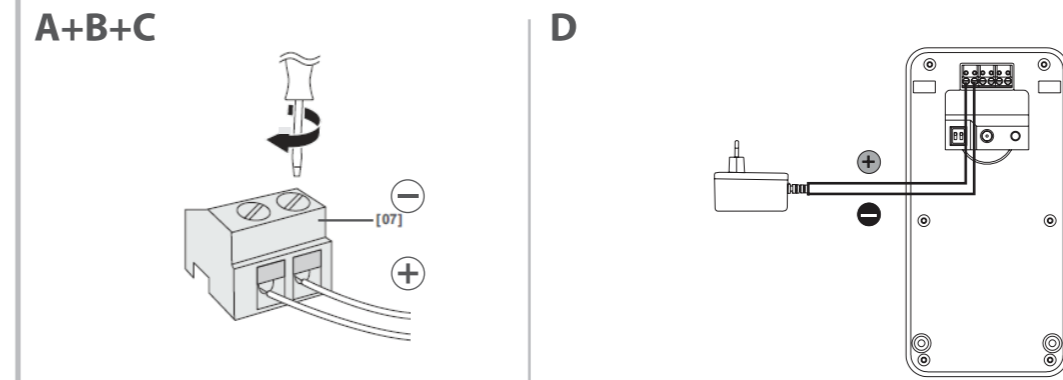

3.3.5 + 3.3.6 CONNECTING A DOOR LOCK/GATE OPENER (NOT INCLUDED)

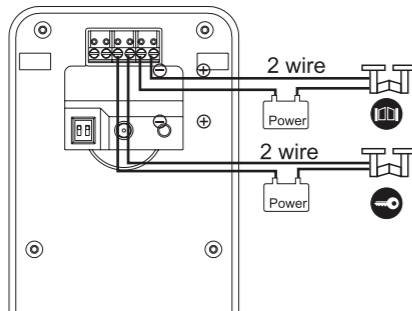


3.3.7 CONNECTING THE EXTERNAL ANTENNA (NOT INCLUDED)

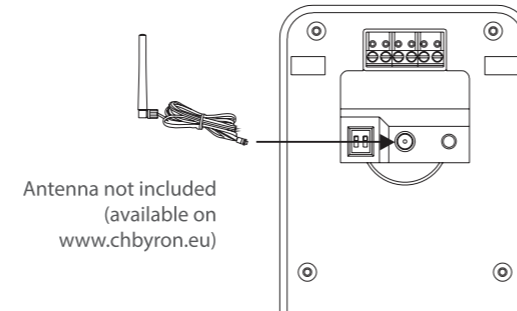


4. HOME SCREEN AND MENUS


4.1 CONTROL BUTTONS

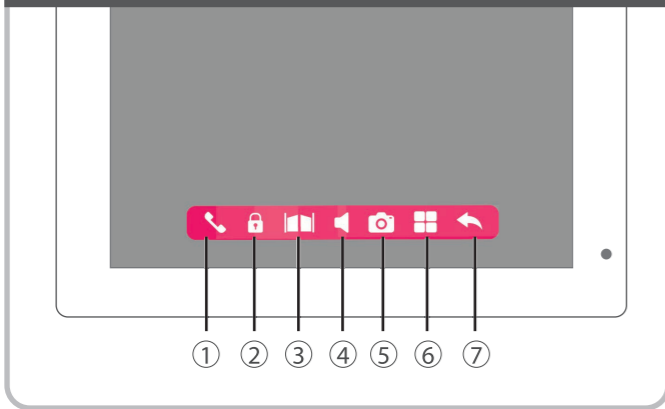


4.1.1 INTERCOM

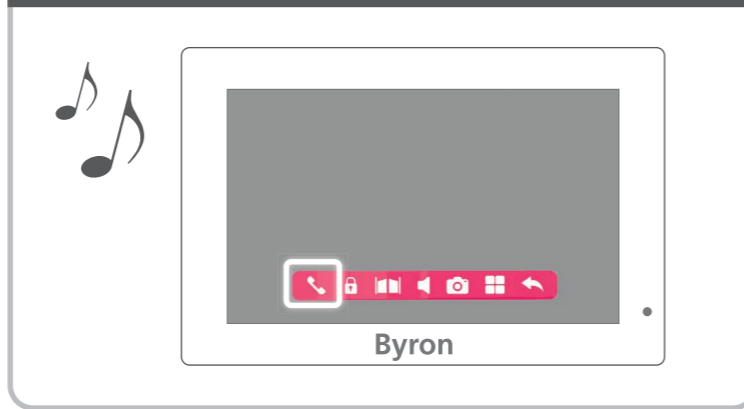


4.1.2 DOOR OPENER

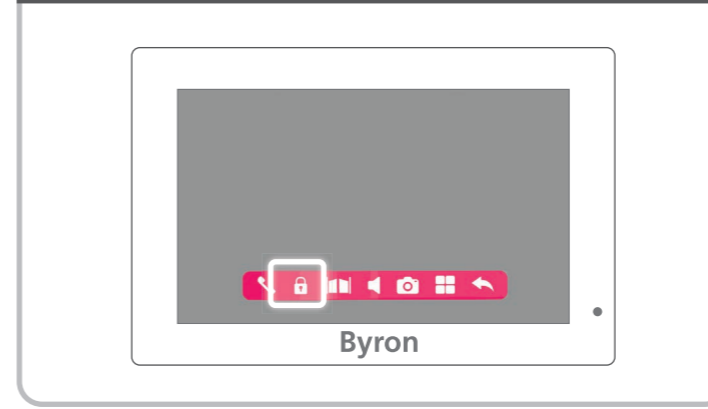


4.1.3 GATE OPENER

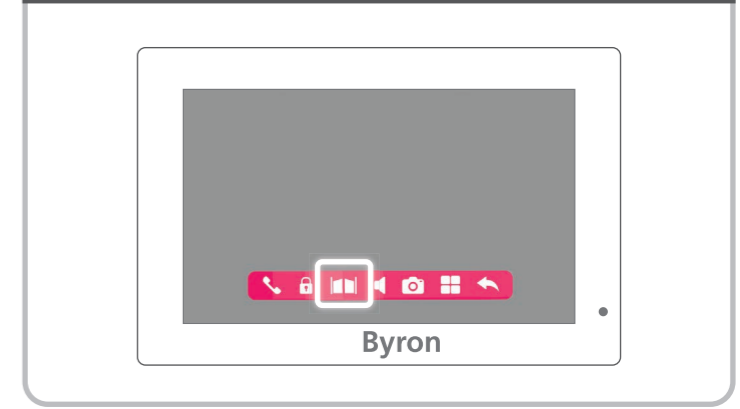


4.1.4 INTERCOM VOLUME ADJUSTMENT

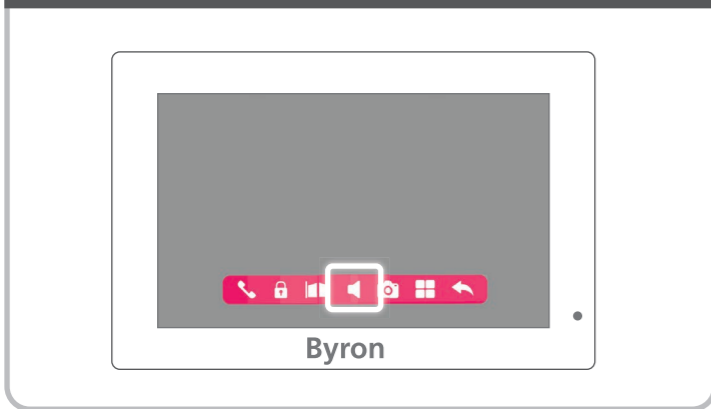


4.1.5 PHOTO / VIDEO RECORDER

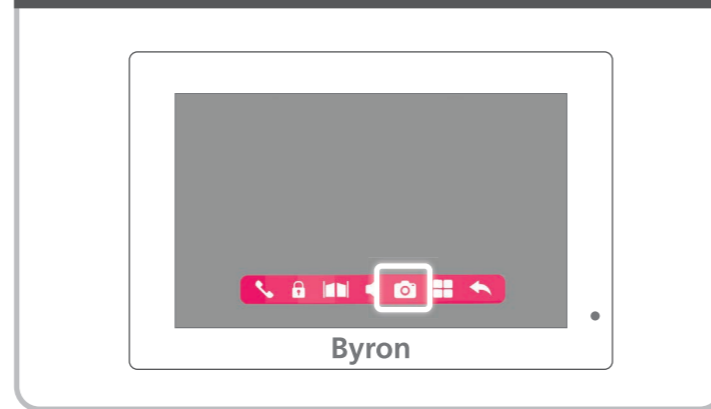


4.2 MENU SETTINGS

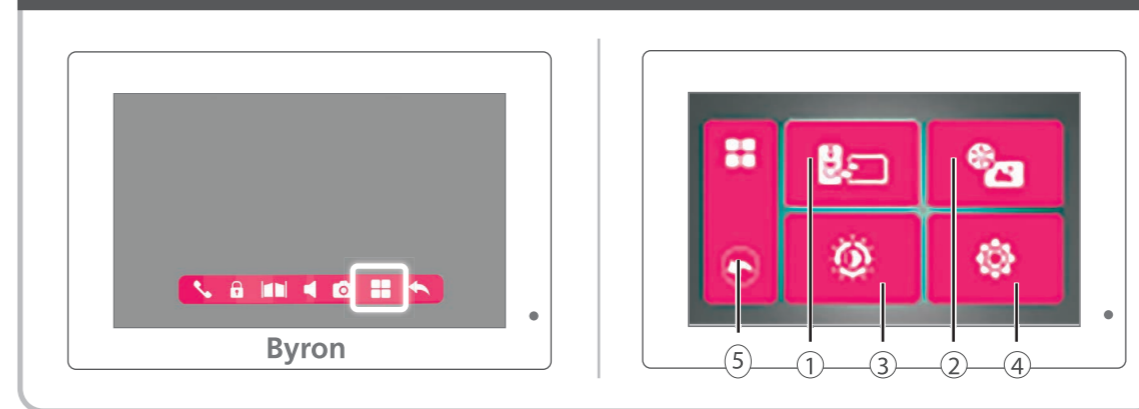


4.2.1 PAIRING

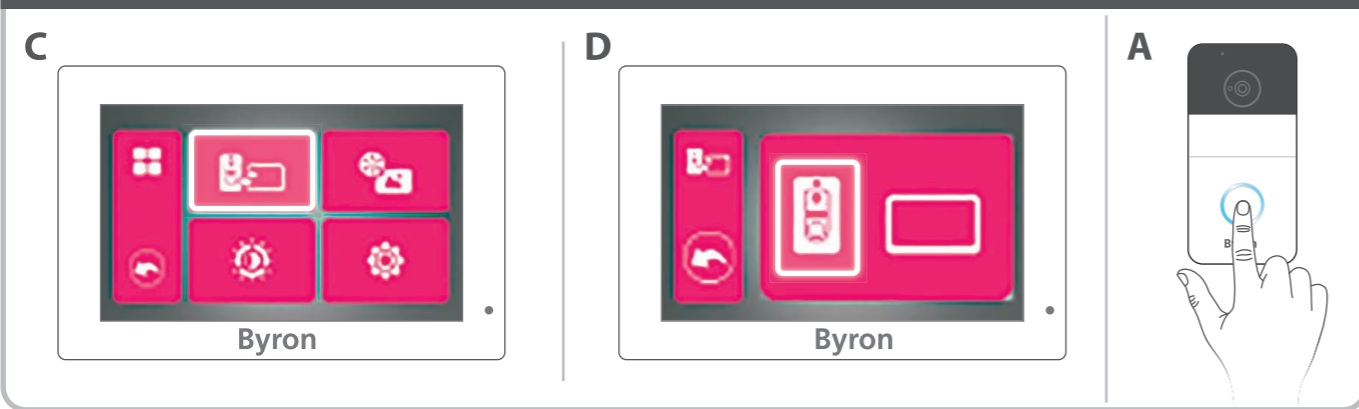

4.2.2 PLAYBACK

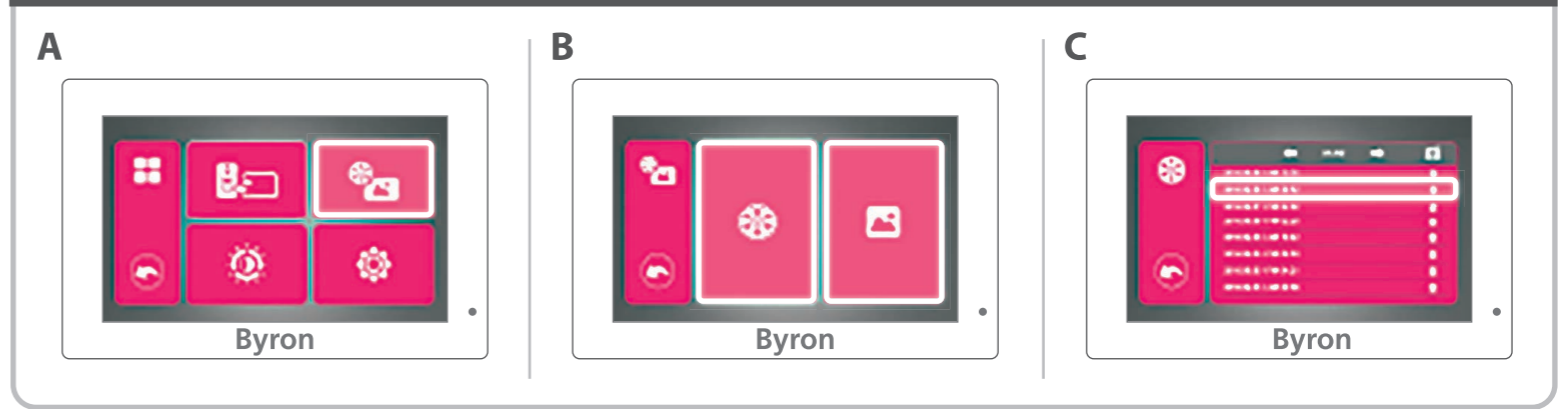

4.2.3 ADJUSTING IMAGES

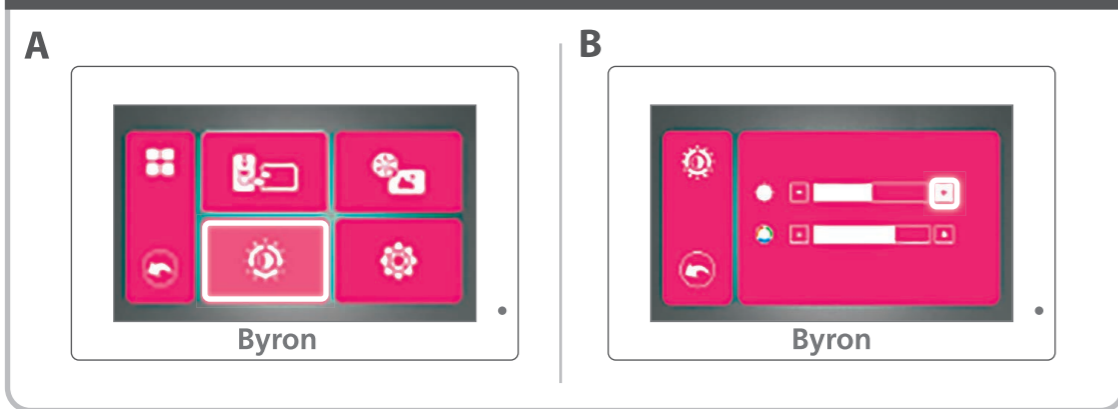

4.2.4 SETTINGS

