 
 
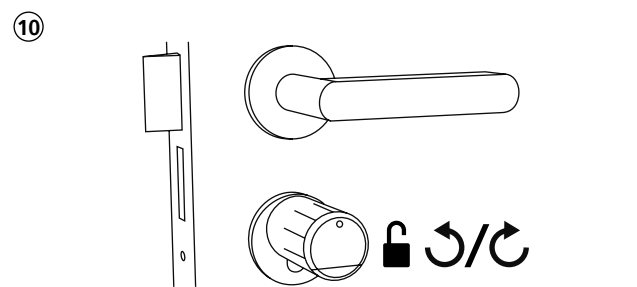 
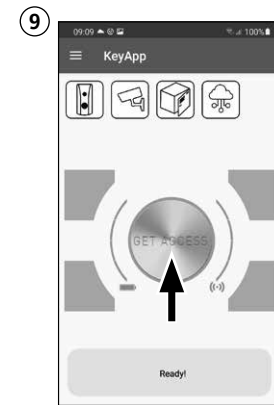 
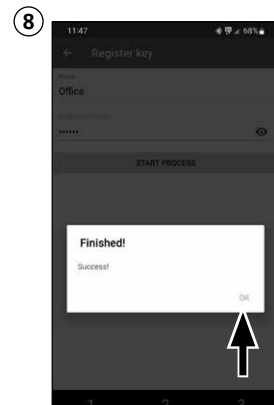 
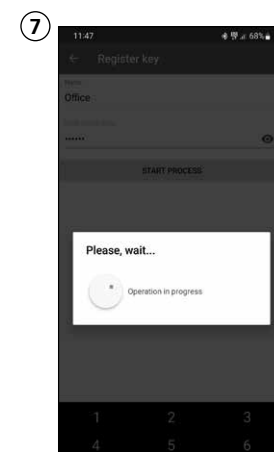 
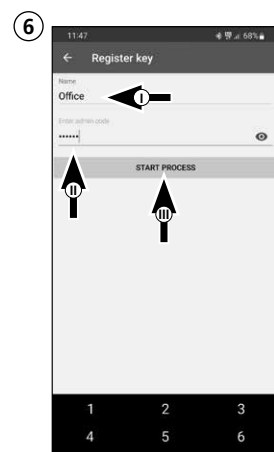 
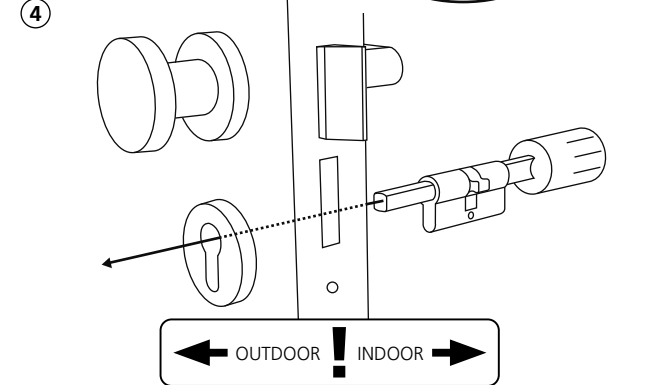 
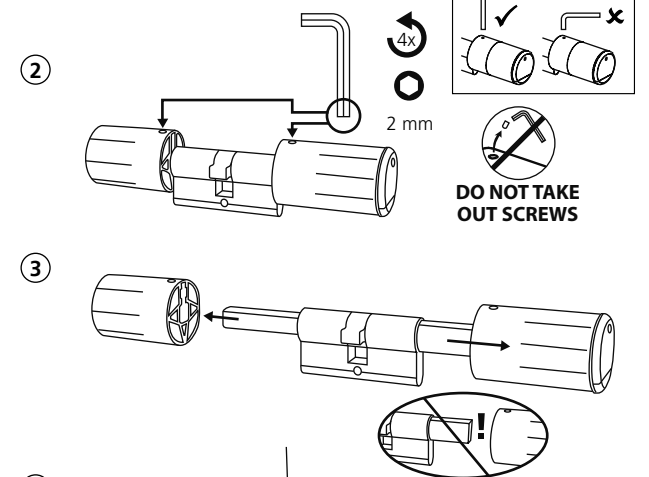 





Quick Start
secuENTRY Home
ENTRY 5001 PIN 1

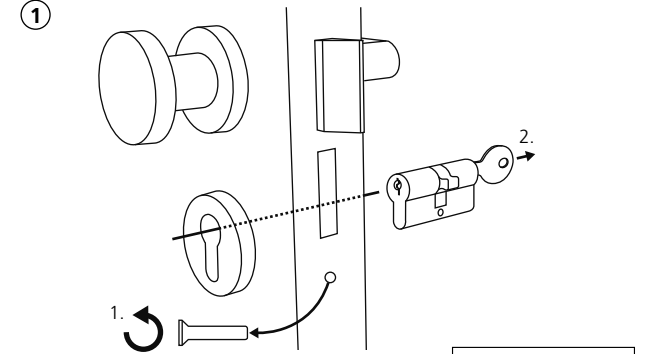




Quick Start
secuENTRY Home
ENTRY 5001 PIN 2

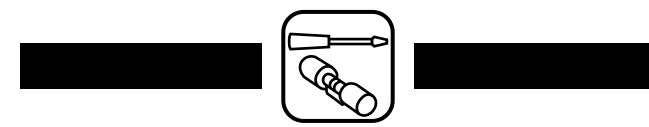









 
 
 
Quick Start
secuENTRY Home
ENTRY 5001 PIN 3

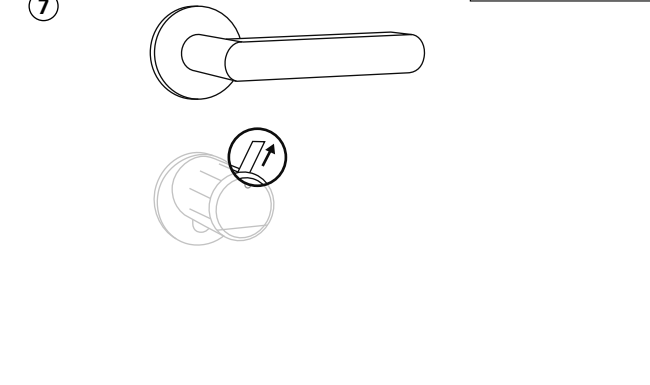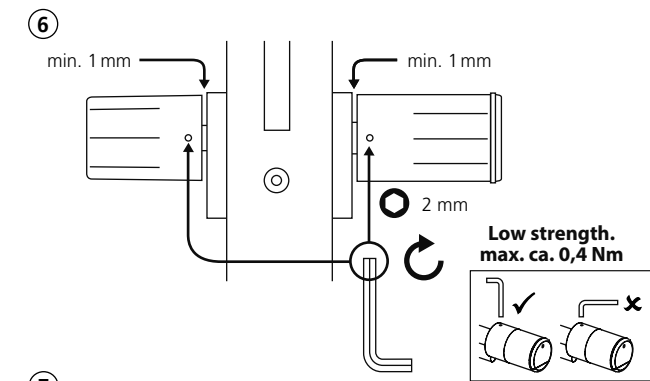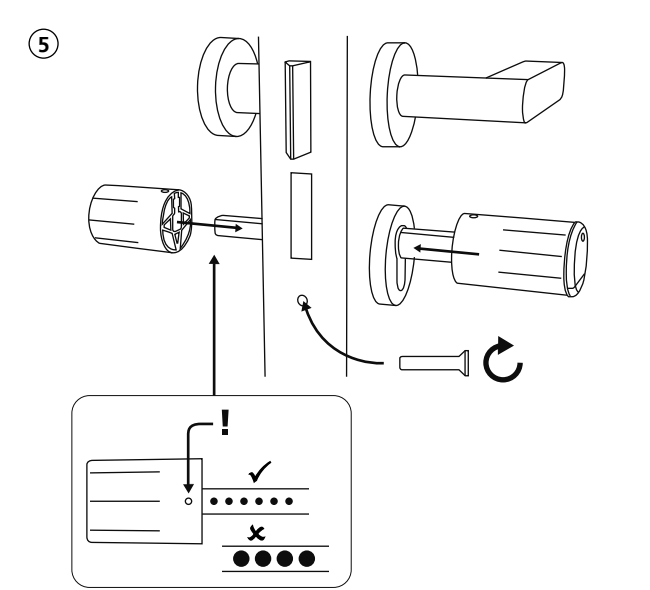

   
Quick Start
secuENTRY Home
ENTRY 5001 PIN 4

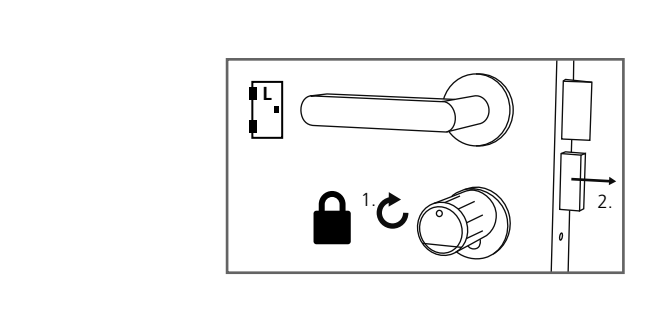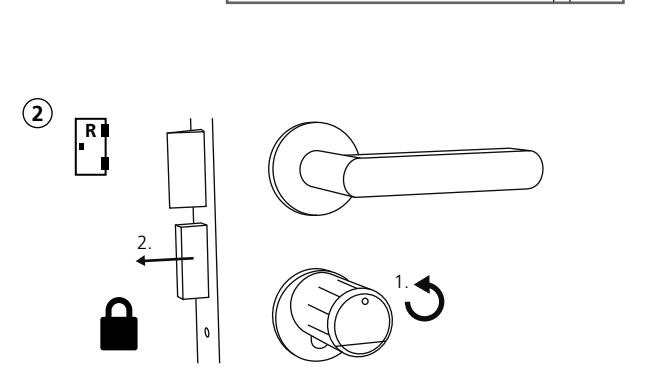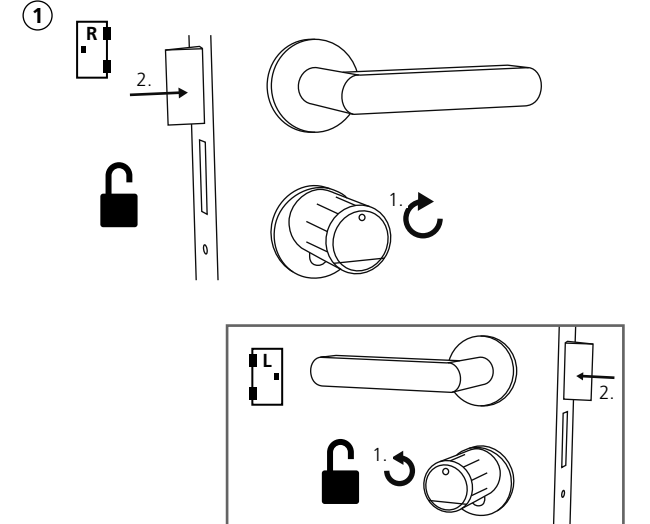

           
Quick Start
secuENTRY Home
ENTRY 5001 PIN 5

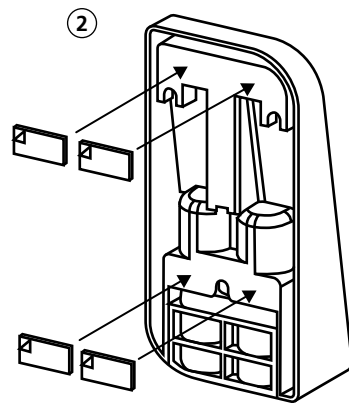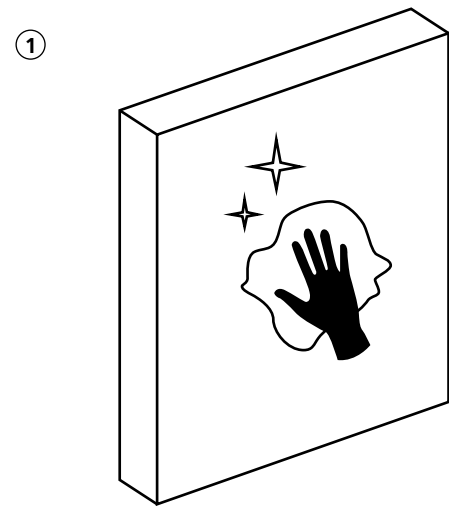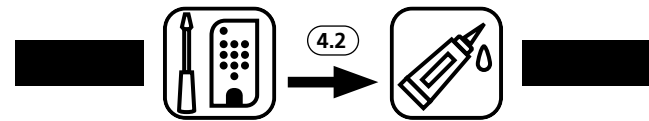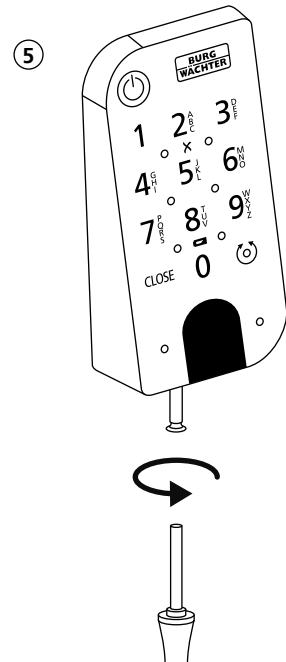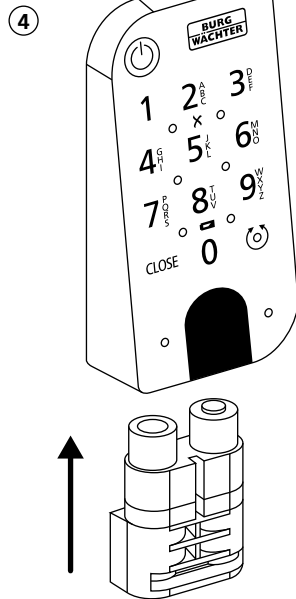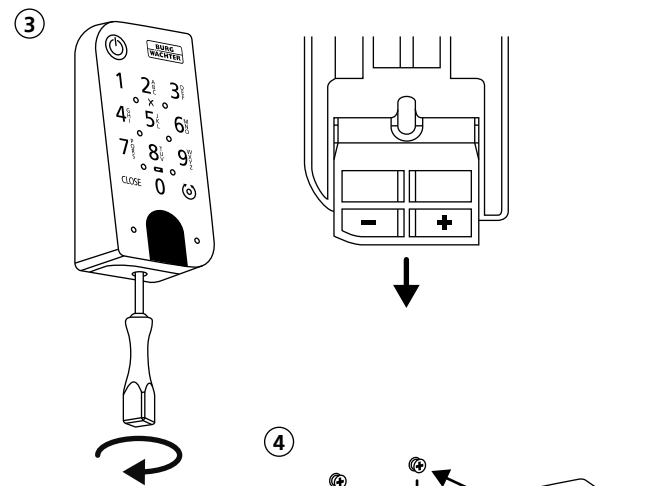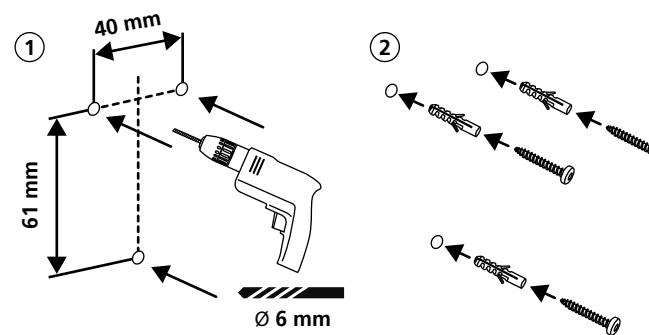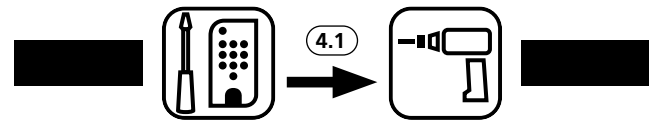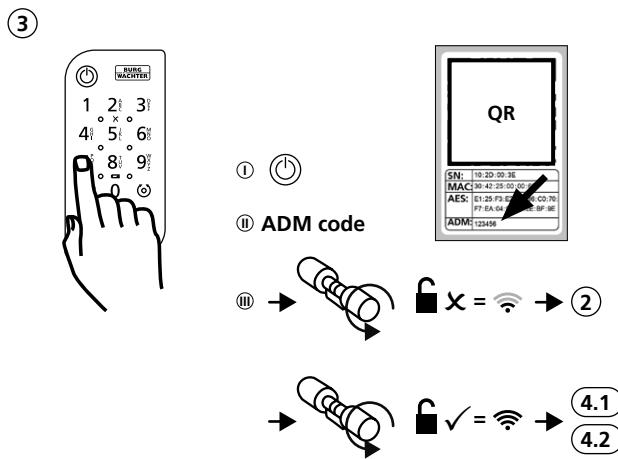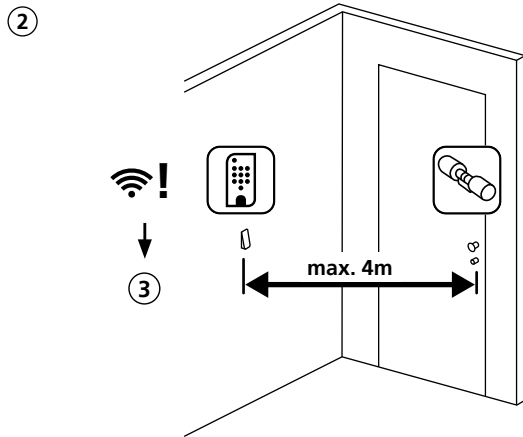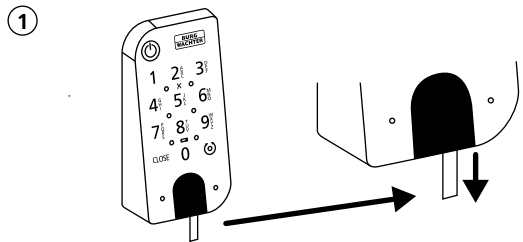

3

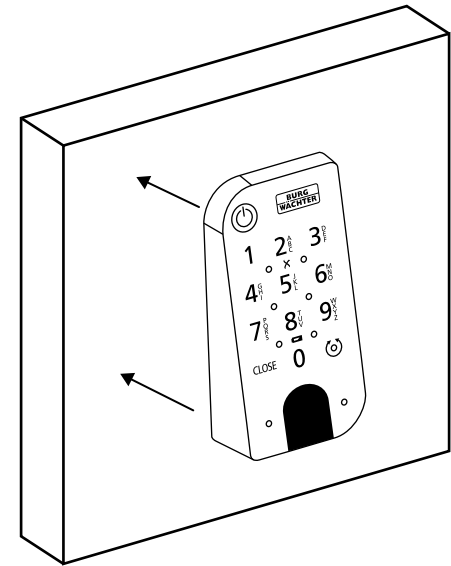 

4

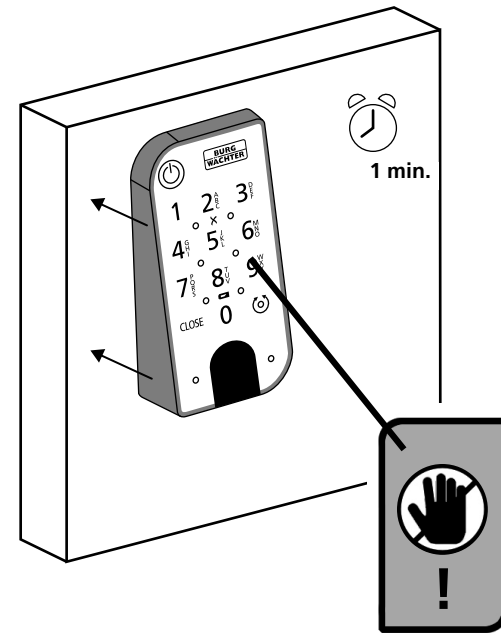 

Quick start
secuENTRY HOME
ENTRY 5001 PIN

secuENTRY



Download:
Hauptanleitung
Main manual
Manuel Principal
Hoofdgebruiksaanwijzing