

# Technaxx® \* User Manual

## OBD II Scanner TX-184

Before using the appliance for the first time, please read the instructions for use and safety information carefully.



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capacities, or by persons lacking in experience or knowledge, unless they are supervised or instructed on the use of this device by a person responsible for their safety.

Service phone No. for technical support: 01805 012643\* (14 cent/minute from German fixed-line and 42 cent/minute from mobile networks).

Free Email: **support@technaxx.de**

\*The support hotline is available Mon-Fri from 9 am to 1 pm & 2 pm to 5 pm.

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.

***Enjoy your product \* Share your experience and opinion on one of the well-known internet portals.***

# Table of contents

<b>Hints</b> .....	2
<b>Safety Instructions</b> .....	2
<b>Features</b> .....	3
<b>Product overview</b> .....	3
<b>Specifications</b> .....	4
<b>Operation</b> .....	4
<b>Diagnostic Trouble Codes (DTCs)</b> .....	5
<b>Starting up</b> .....	6
OBDII Diagnostics.....	7
Erase Codes.....	8
Notes:.....	8
I/M Readiness.....	8
Vehicle Info.....	9
Declaration of conformaty.....	9
Disposal.....	9

## Hints

- The device is intended exclusively for private and not for commercial use.
- Only use this device as described in this user manual.
- Do not place any part of this device in water or any other liquid.
- Do not handle the device with wet hands.
- When disconnecting the cable, always pull at the plug. Do not pull on the cable itself.
- Do not let the cord on the edge of a table or work surface.
- Prevent it comes into contact with hot surfaces.
- Keep it away from heat sources to avoid deformation of plastic parts.

## Safety Instructions


- Always perform automotive testing in a safe environment
- Do not attempt to operate or observe the tool while driving a vehicle. Operating or observing the tool will cause driver distraction and could cause a fatal accident.
- Operate the vehicle in a well ventilated work area: Exhaust gases are Poisonous.
- Put the transmission in PARK (for automatic transmission) or NEUTRAL (for manual transmission) and make sure the parking brake is engaged.

●Keep the scan tool dry, clean, free from oil/water or grease. ●Use a mild detergent on a clean cloth to clean the outside of the scan tool, when Necessary. Keep packaging material, like plastic bags and rubber bands, out of the reach of children, as these materials pose a choking hazard. ● Do not disassemble the device. ● Do not expose the device to high temperatures. ● The device is intended only for private use.

## Features

- Retrieves vehicle information (VIN, CIN, CVIN)
- Compatible with most 1996 and newer Vehicles OBD II & CAN
- Retrieves generic (P0, P2, P3 and U0) and specific (P1, P3, U1) Codes
- Multilingual menu options and code definition
- Read & Clear codes

## Product overview

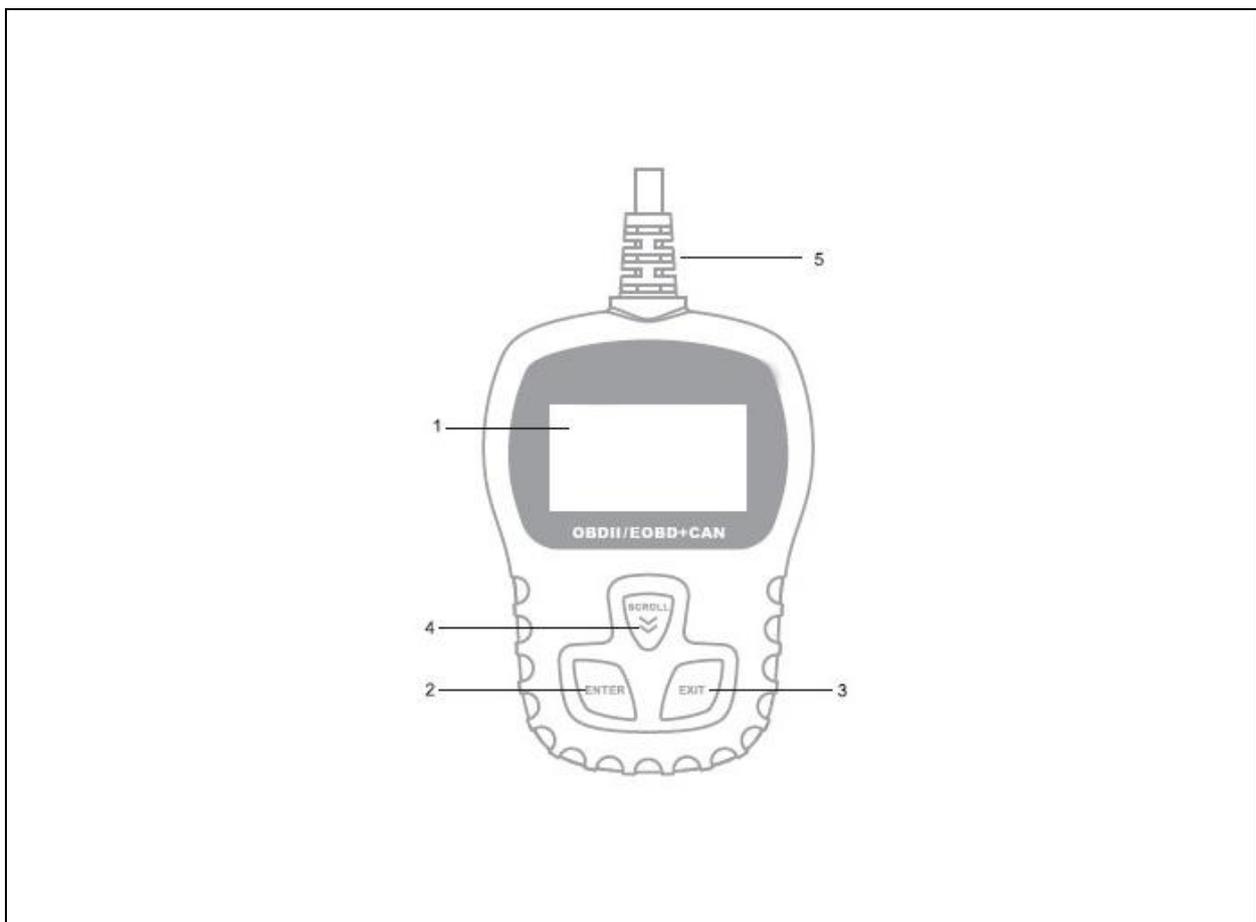


1	LC Display	4	SCROLL Button
2	ENTER Button	5	OBD II Cable
3	EXIT Button		

## Specifications


Display	Backlit, 128 x 64 pixels with contrast adjustment
External power	8.0V – 18.0V provided by vehicle battery
Connection	OBD II plug, ~80cm Cable
Weight/Dimensions	195g / 10.8x74x2cm
Package contents	Technaxx TX-184, User manual

## Operation

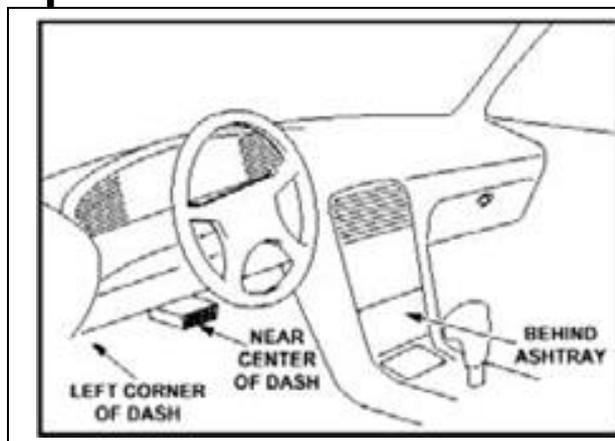

The DLC connector (left) can be found in the area of the car interior seen at right (black arrow).

## Diagnostic Trouble Codes (DTCs)

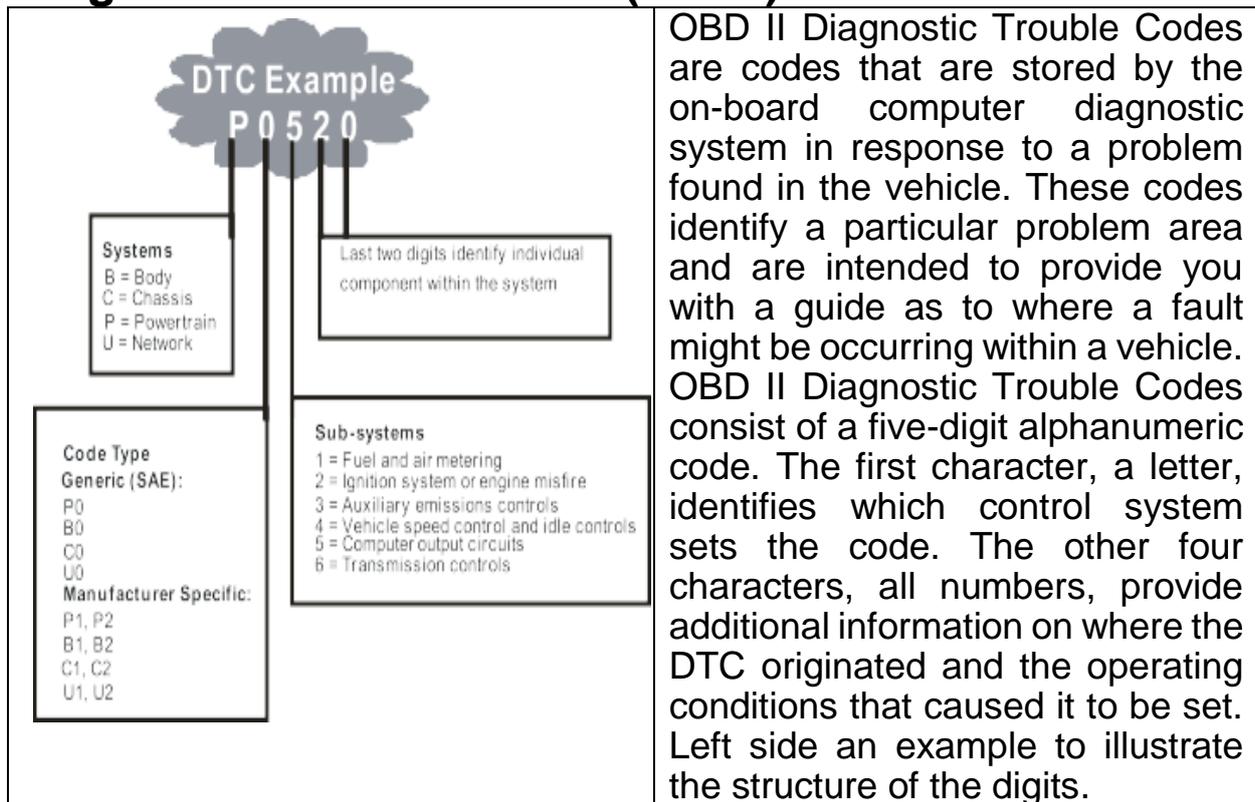

### ODB II Definitions:





Powertrain Control Module (PCM) -the OBD II terminology for the on-board computer that controls the engine and the drive train.

Malfunction Indicator Light (MIL) -Malfunction Indicator Light (Service Engine Soon, Check Engine) is a term used for the light on the instrument panel. It is to alert the driver and/or the repair technician that there is a problem with one or more of vehicle's systems and may cause emissions to exceed federal standards. If the MIL illuminates with a steady light, it indicates that a problem has been detected and the vehicle should be serviced as soon as possible.

Under certain conditions, the dashboard light will blink or flash. This indicates a severe problem and flashing is intended to discourage vehicle operation. The vehicle on board diagnostic system can not turn the MIL off until necessary repairs are completed or the condition no longer exists.

DTC -Diagnostic Trouble Codes (DTC) these identify which section of the emission control system has malfunctioned.

## Starting up

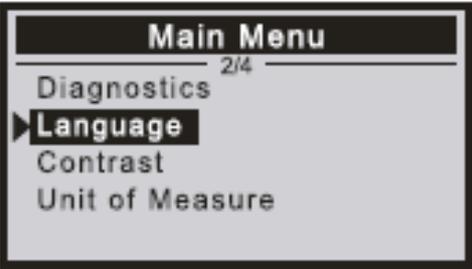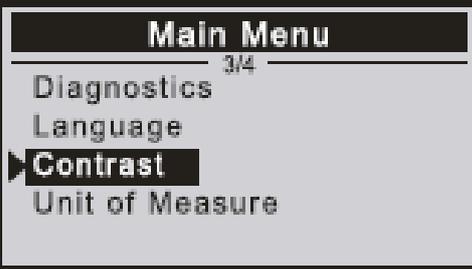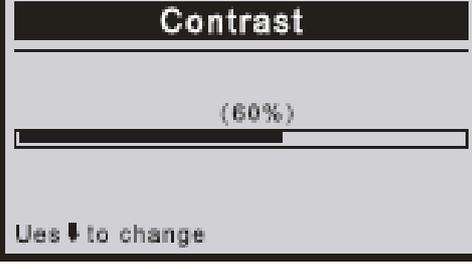
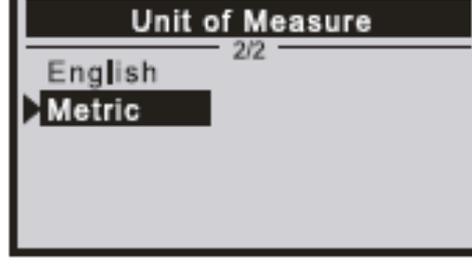
 <p>The image shows a 'Main Menu' screen with a title bar 'Main Menu' and a page indicator '2/4'. The menu items are 'Diagnostics', 'Language', 'Contrast', and 'Unit of Measure'. 'Language' is highlighted with a black bar and a white arrow pointing to it.</p>	<p>From the Main Menu, use the SCROLL button to select the Language and press the ENTER button.</p>
 <p>The image shows a 'Main Menu' screen with a title bar 'Main Menu' and a page indicator '3/4'. The menu items are 'Diagnostics', 'Language', 'Contrast', and 'Unit of Measure'. 'Contrast' is highlighted with a black bar and a white arrow pointing to it.</p>	<p>From the Main Menu, use the SCROLL button to select Contrast, and press ENTER.</p>
 <p>The image shows a 'Contrast' screen with a title bar 'Contrast'. Below the title bar is a horizontal bar representing the contrast level, with '(60%)' written above it. At the bottom, it says 'Use ↓ to change'.</p>	<p>From the Contrast menu, use the SCROLL button to increase or decrease contrast. Press ENTER to save your settings and return to the previous menu.</p>
 <p>The image shows a 'Main Menu' screen with a title bar 'Main Menu' and a page indicator '4/4'. The menu items are 'Diagnostics', 'Language', 'Contrast', and 'Unit of Measure'. 'Unit of Measure' is highlighted with a black bar and a white arrow pointing to it.</p>	<p>From the Main Menu, use the SCROLL button to select Unit of Measure, and press ENTER</p>
 <p>The image shows a 'Unit of Measure' screen with a title bar 'Unit of Measure' and a page indicator '2/2'. The menu items are 'English' and 'Metric'. 'Metric' is highlighted with a black bar and a white arrow pointing to it.</p>	<p>Press the ENTER button to save your selection and return to the previous menu.</p>

## OBDII Diagnostics

**CAUTION:** Don't connect or disconnect any test equipment with ignition on or engine running.

- 1) Turn the ignition off.
- 2) Locate the vehicle's 16-pin Data link Connector (DLC)
- 3) Plug the scan tool cable connector into the vehicle's DLC.
- 4) Turn the ignition on.

Press ENTER to enter main menu. Use the SCROLL button to select **diagnostics** from the menu.

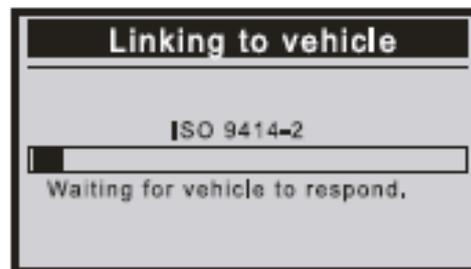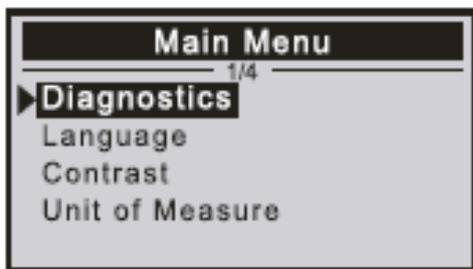


Press ENTER to confirm.

If "LINKING ERROR!" message shows on the display.

- Verify that the ignition is ON;
- Check if the scan tool's OBDII connector is securely connected to the vehicle's DLC;
- Turn the ignition 'off' and wait for about 10 seconds. Turn the ignition back to 'on' and repeat the procedure.

## Read Codes


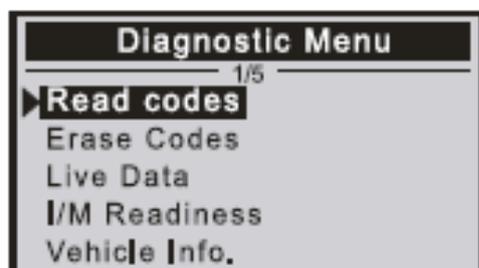


Stored codes are also known as "hard codes" or "permanent codes". These codes cause the control module to illuminate the malfunction indicator lamp (MIL) when an emission-related fault occurs.

Pending Codes are also referred to as "maturing codes" or "continuous monitor codes". They indicate problems that the control module has detected during the current or last driving

cycle, but are not considered serious, yet. Pending Codes will not turn on the malfunction indicator up cycles, the code clears from memory.

## View DTCs

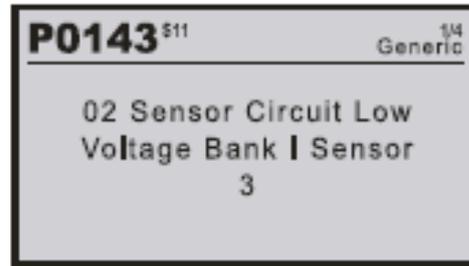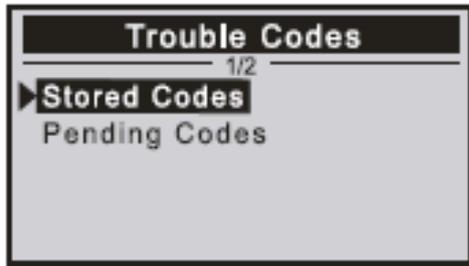


## Erase Codes

### Notes:




This function is performed with key on engine off. Do not start the engine. Before performing this function, make sure to retrieve and record the trouble codes. After clearing, you should retrieve trouble codes once more or turn ignition on and retrieve codes again. If there is still some trouble codes for hard troubles, please find

the reason caused the trouble code firstly, and then solve the problem. Now, the trouble codes can be erased.

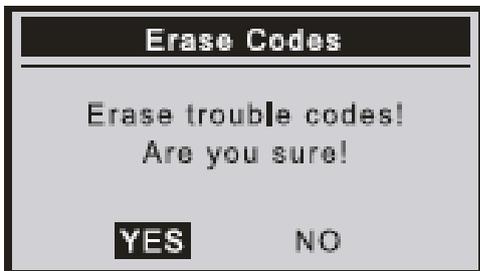

A warning message comes up asking for your confirmation.


## I/M Readiness

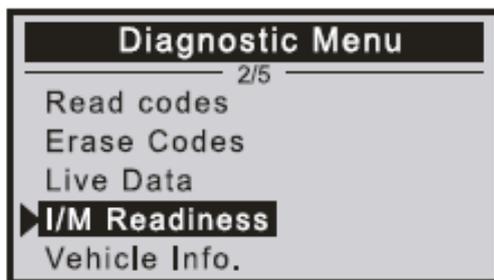

I/M refers to Inspection and Maintenance, that is legislated by the Government to meet federal clean-air standards. I/M Readiness indicates whether or not the various emissions-related systems on the vehicle are operating properly and are ready for Inspection and Maintenance testing. The I/M readiness Monitor Status function also can be used (after repair of a fault has been performed) to confirm that the repair

has been performed correctly, and/or to check for Monitor Run Status.

## Vehicle Info

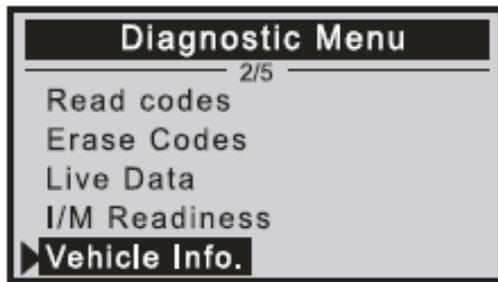

Select [Vehicle Info.] and press [ENTER], the screen will display the formation such as VIN (Vehicle identification Number, CID Calibration ID and CVN (Calibration verify number).

## Declaration of conformity



The EU declaration of conformity can be obtained from the address given [www.technaxx.de/](http://www.technaxx.de/) (in bottom bar "Konformitätserklärung").

## Disposal



Dispose of packaging. Dispose of the packaging according to type. Dispose of cardboard and carton in the waste paper foils to the recyclables collection.

Dispose of old appliance (Applicable in the European Union and other European countries with separate collection (collection of recyclable materials) Old appliances must not be disposed of with household waste! If the product can no longer be used, every consumer is legally obliged to dispose of old appliances separately from household waste, e.g. at a collection point in his or her municipality or district. e.g. at a collection point in his or her municipality/borough. This ensures that old appliances are recycled properly and that negative impacts on the environment are avoided. This is why electrical appliances are marked with the symbol shown here.



Made in China  
Vertrieben durch:  
Technaxx Deutschland GmbH & Co. KG  
Konrad-Zuse-Ring 16-18,  
61137 Schöneck Germany