



180.00mm


86.00mm

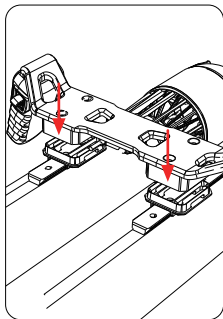


手柄安装于主机

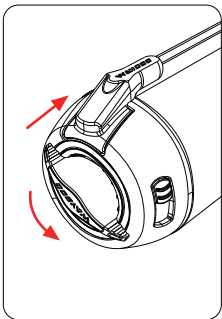


逆时针拧开防水盖到如图位置油门线接口安装于对应位置

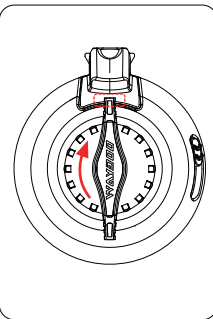

顺时针拧紧防水盖

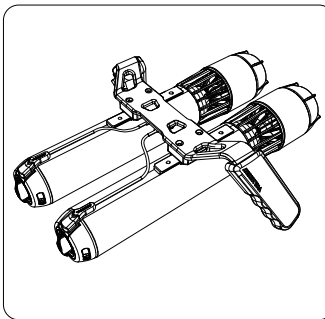

完成安装

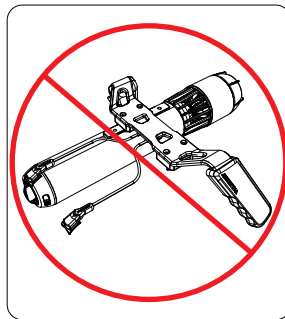


禁止单机使用


注意：需要在无水环境下安装，避免接口处有水，如果有水需要晾干，可用清水清洁后并用棉签或纸巾擦干，并晾干使用；
注意：建议充满电后使用，避免两台主机电量不同影响使用体验；
注意：在使用双机手柄前，请一定要装配两台主机，不能使插头线单独浸泡在海水中，这将会导致插头线的铜针被腐蚀，以至于连接器无法正常导通及工作；
注意：在使用双机手柄前，请先确认两台主机的定速巡航模式是一致的，避免两台主机模式不同影响使用。

180.00mm


86.00mm

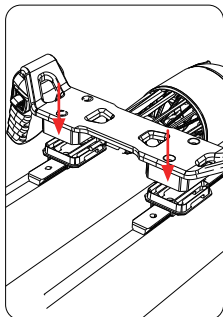


Install the handle bracket on the main unit.

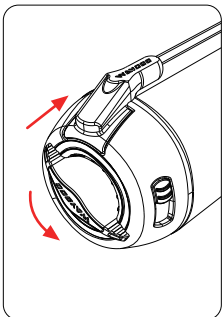


Turn the waterproof cover counterclockwise to the illustrated position. Install the wired thumb controller to the corresponding port.

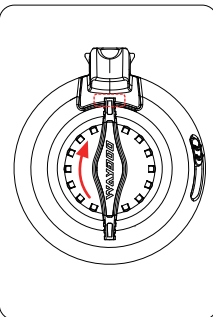

Tighten the waterproof cover clockwise.

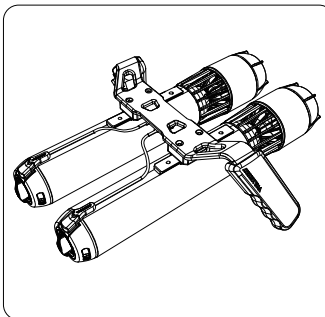

Installation complete.

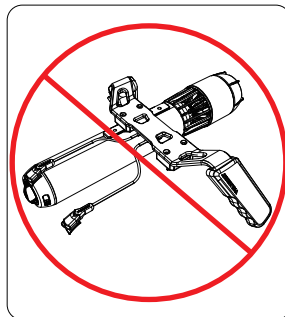

DO NOT use with a single Subnado.

Note: Please install the wired thumb controller in a dry environment. Please dry the port before installation if it is wet. Please clean and dry the connector and port with cotton swabs or tissue paper before use.
Note: Please fully charge the Subnados before use to avoid imbalanced performance.
Note: Please connect the controllers before using the handle bracket. Please do not submerge the disconnected controller connector and port in sea water to prevent poor controller connection due to corroded pin connector.
Note: Please ensure the Subnados are on the same gear during operation to prevent imbalanced thrust output.

正反打印

尺寸：180*86mm

材质：100G 铜版纸

公差：±1mm