

Rotary Remote Control Manual



Electricity supply method: 2450 coin cell powered

Communications protocol: Casambi

The Rotary Remote is a wireless, remote, Casambi enabled user interface that brings great flexibility to interior design as furniture can be replaced and walls rebuilt without having to think about switch wiring or switch placement. Switches can be placed wherever the user needs them, and it provides direct access to all Casambi lighting controls.

The Rotary remote control can be configured for all four ABCD channels via the Casambi APP.

Basic Functions

A/B/C/D Key	Short press: turn on or off the corresponding channel lights (brightness mode); the coldest and warmest switch (colour temperature mode) Long press 3S: switch off all the lights of all channels (need APP to tick 'Long press all to switch off').
	Double click: Switch Rotary mode (colour temperature mode/brightness mode)
Rotary	Clockwise rotation: Brighten the light (Brightness Mode)/Cool Colour Temperature (Colour Temperature Mode) Counterclockwise rotation: Darken the light (Brightness mode) / Warming the colour temperature (Colour temperature mode)

Indicator status

a) Each button position has an LED indicator, different colors represent different modes of rotary control

When the white LED is blinking: The rotary control is in brightness adjustment mode.

When the orange LED is blinking: The rotary control is in the colour temperature adjustment mode.

b) There is no operation within 5 seconds, the remote control enters low power mode.


Press any key to exit hibernation mode and switch to dimming mode.

Remote Control Configuration

When using the rotary remote control for the first time, it is necessary to configure the rotary remote control into the network and key configuration.

During configuration, you need to keep holding down any key to prevent the remote from going into low power until the pairing is complete.


Remote Control Removal

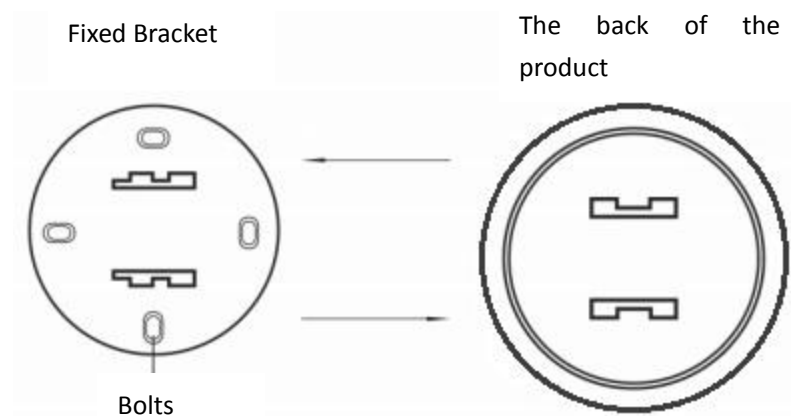

a) Base disassembly:

Press and hold the base of the remote control and push it to the right, the remote control can be removed.

Press and hold the base of the remote control and push it to the left, the remote control can be installed with the base.

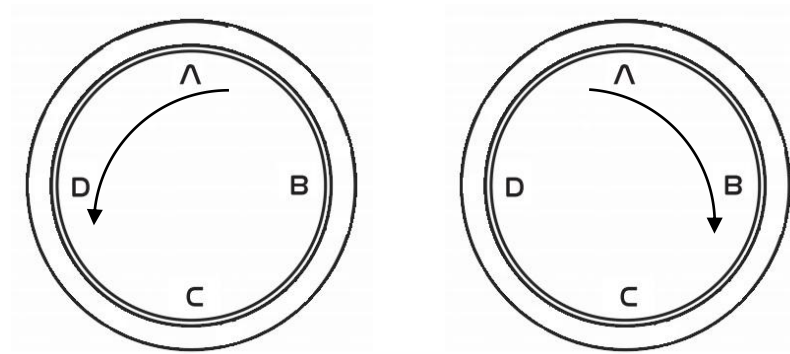

b) Battery Removal:

Two thumbs press left and right on the button panel of the remote control and rotate it anti-clockwise to open it, the

Two thumbs press left and right on the key panel of the remote control and rotate clockwise to lock.

Technical Parameters

Input

- Voltage: 3VDC
- Battery type: CR2450 button lithium battery

Radio transceiver

- Operating frequency: 2.402...2.480 Ghz
- Maximum output power: +8 dBm

Operation condition

- Operation temperature: 0° C...+40° C
- Storage temperature: -25° C...+ 70° C
- Maximum relative humidity: 0 ... 80%

Mechanical data

- Dimension: D66XH61.5mm
- Weight:390g

Warning



Contains a button battery (also known as a coin battery), which can be dangerous if swallowed--please refer to the instructions. If the battery is swallowed or placed in any part of the body, it may cause serious or fatal injury within 2 hours or less

If you suspect the battery has been swallowed, seek medical attention immediately