



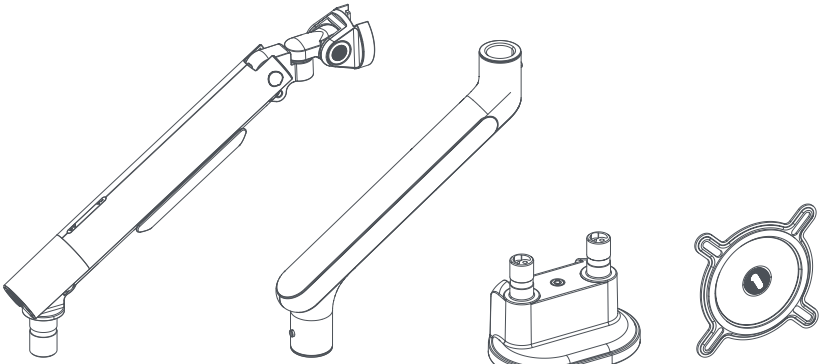

Universal
100 x 100 max

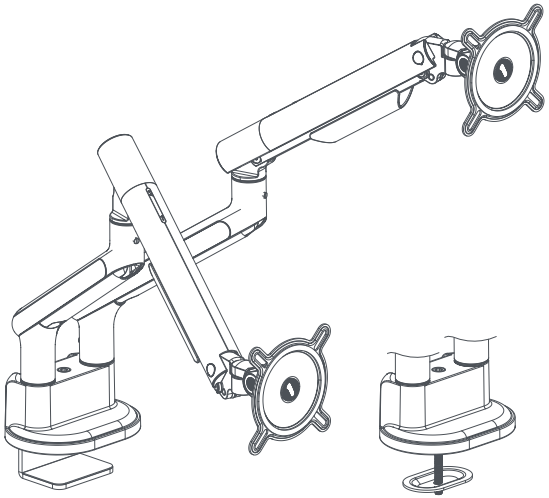

A 2x

B 2x

C

D 2x



E

F

G

H 4mm

I 5mm

J 6mm

Package M

M-A 8 x M4x12mm



M-C 8 x D5



M-B 8 x M5x12mm



Separate the waste
Differenza i Rifiuti




<http://www.oneforall.com/documents>

DM7210/DN7220
71366
Universal Electronics BV - Europe & International
P.O. Box 3332, 7500 DH Enschede
The Netherlands
RDL-L1240424


START

1

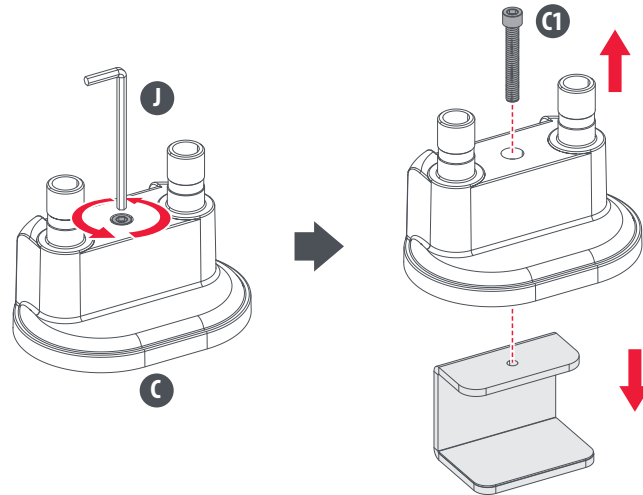


2a

CLAMP INSTALLATION
for 10-50mm thickness desks

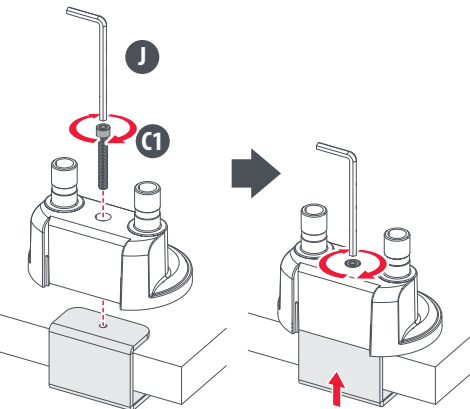


2b


GROMMET INSTALLATION
for 10-50mm thickness desks
& Ø10-60mm installation holes

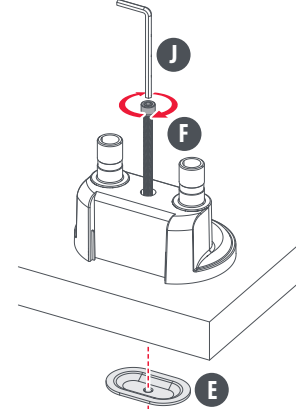

3

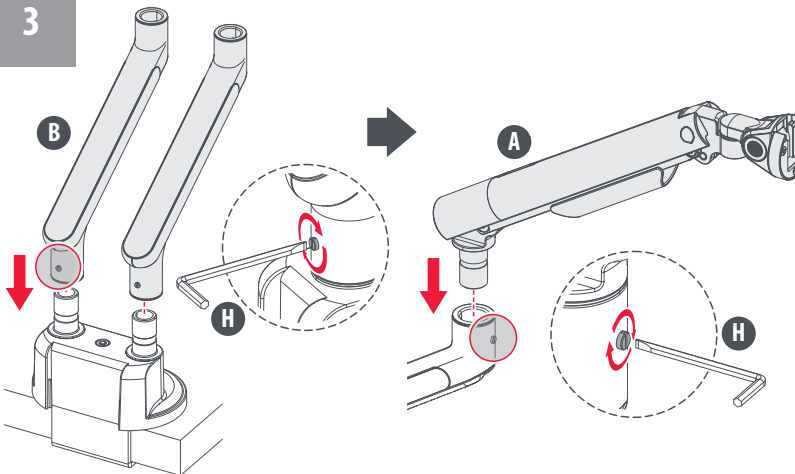

6

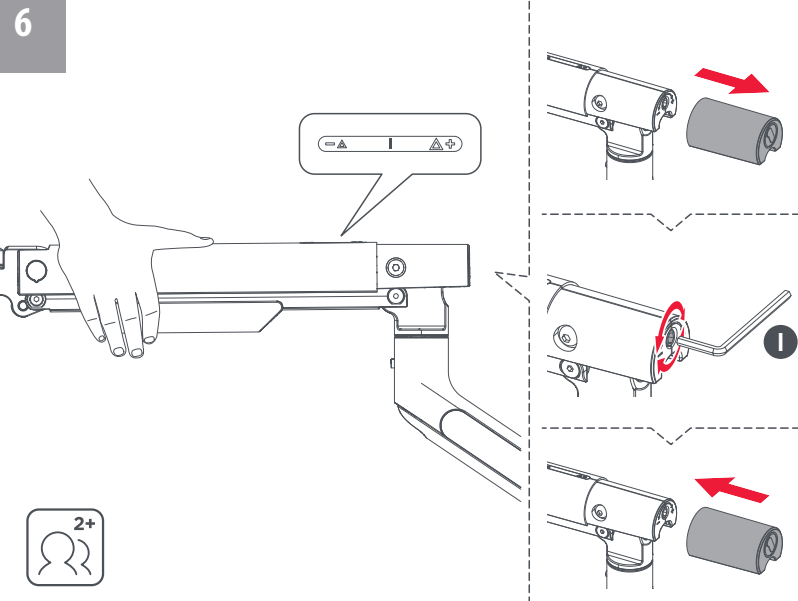

Before adjusting the spring tension and during the adjustment process, **position and hold the arm horizontally as shown**. Use the supplied Allen Key for adjustment. Ask for assistance should you require it.

If the arm **drops**, turn the adjustment screw in the + direction until it remains in a horizontal position.


If the arm **rises**, turn the adjustment screw in the - direction until it remains in a horizontal position.




CAUTION:

- Do not over tighten the screws.
- To prevent damage to the Tension Indicator, never allow the Red Indicator Line move beyond the Caution Triangles found on the Left and Right Side of the display window.


7

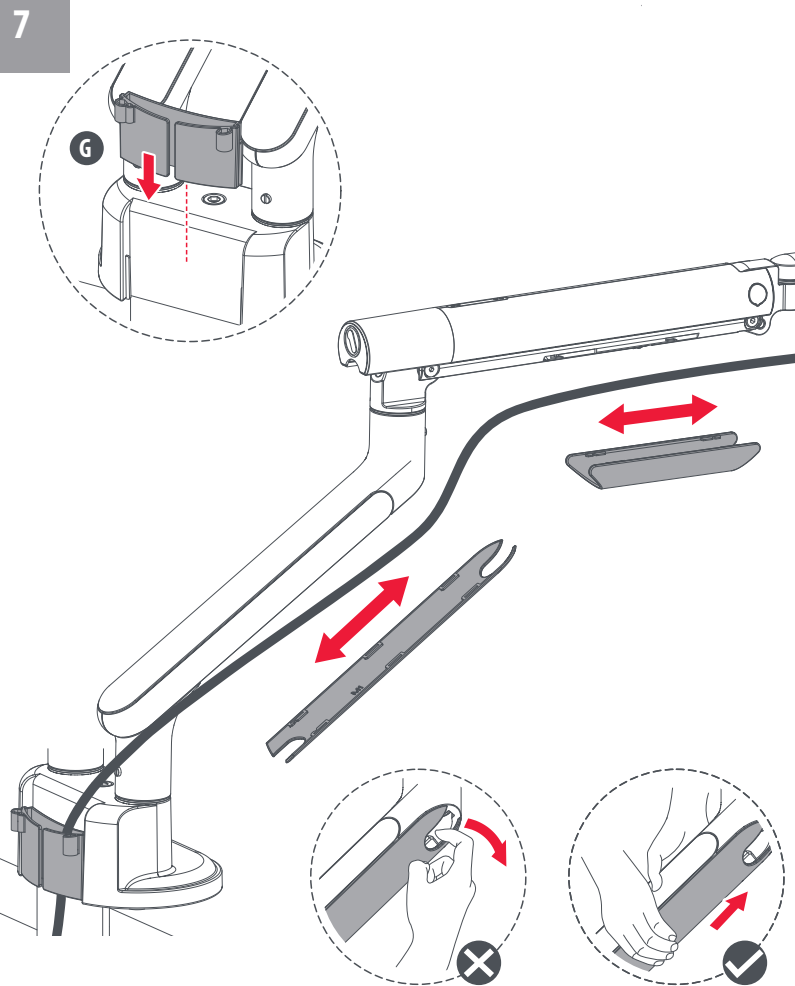


4

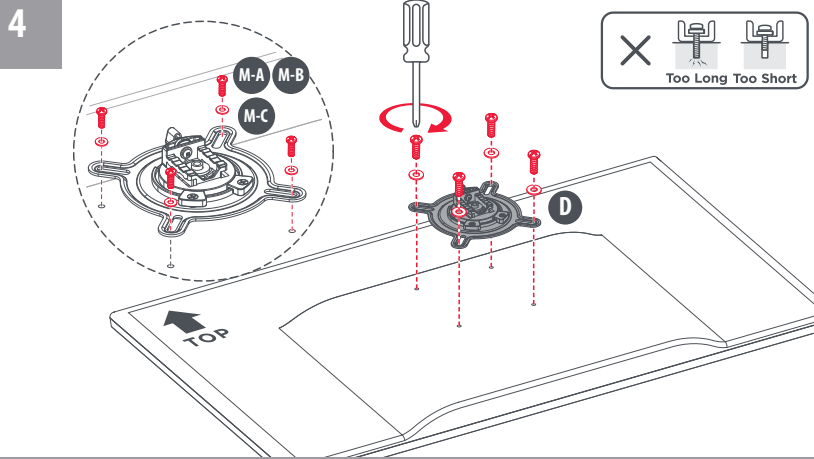


5

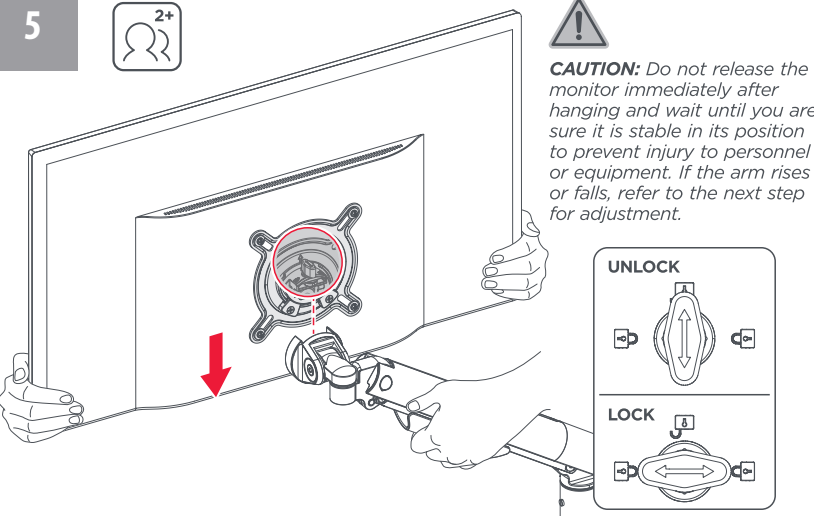


CAUTION: Do not release the monitor immediately after hanging and wait until you are sure it is stable in its position to prevent injury to personnel or equipment. If the arm rises or falls, refer to the next step for adjustment.

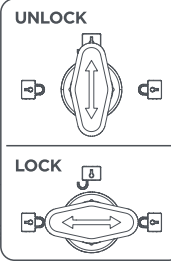


Note: If the display does not stop at your desired position, adjust the screws using the tools as shown.

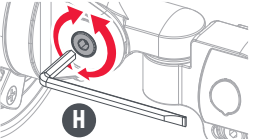

Note: If the display does not stop at your desired position, adjust the screws using the tools as shown.

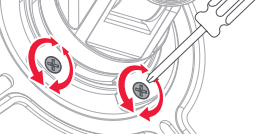

CAUTION: DO NOT rotate the monitor past rear edge of desk to avoid an unstable situation that may cause tipping.

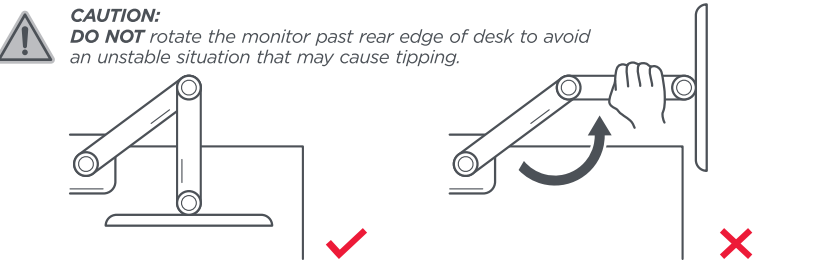

FINISH