

DAH-126MK2

denver.eu

09/23




Points de collecte sur www.quefairedesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. This product is not a toy. Keep it out of reach of children.
2. Keep product out of the reach of children and pets to avoid chewing and swallowing.
3. Product operating and storage temperature is from 0 degree Celsius to 40 degree Celsius. Under and over this temperature might affect the function.
4. Never open the product. Repairs or service should only be performed by qualified personnel.
5. Do not expose to heat, water, moisture, direct sunlight!
6. Please protect your ears against loud volume. Loud volume can damage your ears and risk in hearing loss.
7. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
8. Warning: This product includes lithium polymer batteries.

Overview

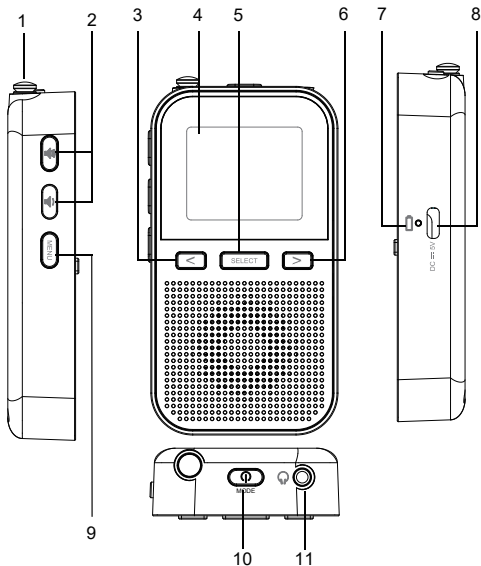

- | | |
|----------------------|--------------------------|
| 1. Telescope antenna | 7. Charging indicator |
| 2. Vol+ / Vol- | 8. DC 5V input |
| 3. Previous button | 9. Menu/Info button |
| 4. Display | 10. Standby/Mode button |
| 5. Select button | 11. 3.5 mm Earphone jack |
| 6. Next button | |

OPERATION

For optimal reception, fully extend the antenna and adjust its angle.

Press the **standby** button to turn on/off the unit.

The volume can be adjusted during playback with the volume controls

Vol+ / Vol-.

DAB RADIO

Press **Mode** to select DAB mode.

When the radio is switched on for the first time, it will automatically do a full scan of DAB stations and store the stations.

Note

If there is no DAB reception at any time, move the unit to another place or adjust the antenna.

CHANGING DAB STATIONS

Press the buttons **Prev** or **Next** in DAB mode to navigate available DAB stations and press **Select** to confirm.

DAB AUTO SCAN

Press and hold the button **Menu** in DAB mode and then the buttons **Prev** or **Next** until **Full scan** appears on the display. Press **Select** to confirm.

Note

New stations and services are added to the stored DAB stations.

To make new DAB stations and services available on your radio, run a full scan at regular intervals.

DISPLAYING STATION INFORMATION

Select a DAB station and during DAB radio playback, press **Menu** repeatedly to display the following information (if available):

- | | |
|----------------------------|-----------------------------------|
| • Ensemble | • Radio text |
| • Frequency | • Signal strength |
| • Signal frequency error | • Programme type |
| • Audio state and bit rate | • Power status (mains or battery) |
| • Date | |

DAB MENU

In DAB mode press and hold **Menu** for one second and the display shows the menu. Use the buttons **Prev** or **Next** to browse the menu options and confirm selections with **Select**.

Station list

Full scan - Searches for all available DAB stations.

DRC - Dynamic Range Control setting boosts the volume of quieter sounds in noisy environments.

Off / low / high

FM RADIO

Selecting FM stations

1. Press the **Mode** button to select FM stations. The radio plays the last station selected.

Selecting FM station frequencies

1. Select an FM station.
2. **Manual frequency selection**
For fine tuning, adjust with **Prev** or **Next** buttons in steps of ± 0.05 MHz.
3. **Automatic frequency selection**
Press and hold the **Prev** or **Next** button to search for stations one after the other. If a station is received, the search stops. To continue searching, press and hold the **Prev** or **Next** button again.

STORING DAB/FM STATIONS MANUALLY

Store up to 30 preset DAB and 30 preset FM stations.

1. Select the desired station.
2. Press and hold **Menu** for one second then use the buttons **Prev** or **Next** to select **Preset Save**. Press **Select** to enter **Preset Save**.
3. Use the buttons **Prev** or **Next** to select a preset number **#:<Empty>**, then confirm by pressing **Select** so that **<Preset # saved>** appears on the display.

Note: If there is already a DAB/FM station stored under a preset, it will be overwritten when you store the new station.

SELECTING PRESET DAB/FM STATIONS

1. Press and hold **Menu** for one second then use the buttons **Prev** or **Next** to select **"Preset Recall" <#:stored station name>**.
2. Use the buttons **Prev** or **Next** to select a preset number and confirm your selection by pressing **Select**.

Using the FM menu

Press and hold **Menu** button in FM mode and select a menu option.

AMS - Start auto search? "**Yes/No**" press **Select** button to confirm.

Scan Setting - **Strong stations only/ All stations** confirm with **Select**.

Audio Setting - **Mono/Stereo** confirm with **Select**.

SYSTEM SETTING

Press and hold **Menu** in any mode and select **System Setting**.

The following menu options are available:

Sleep timer

Time/Date

Backlight

Language

Factory Reset

Software version

TECHNICAL DATA

Input voltage: 5V  1A (Type C port)

Power consumption: 5W

Rechargeable battery powered: ZEC 103450, 3.7V 1800mAh

Note: The output of USB power supply device shall not exceed 5V 1A.

Input source in product is based on manufacturer definition (5V 1A)

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



denver.eu



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type DAH-126MK2 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: denver.eu and then click the search ICON on topline of website. Write model number: DAH-126MK2. Now enter product page, and RED directive is found under downloads/other downloads.

Operating Frequency Range:

DAB Frequency range: 174.9 – 239.2 MHz

FM Frequency range: 87.5 -108MHz.

Max Output Power: 1 W

DENVER A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

www.facebook.com/denver.eu

Contact

Nordics

Headquarter
Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

Phone: +45 86 22 61 00
(Push "1" for support)

E-Mail
For technical questions, please write to:
support.hq@denver.eu

For all other questions please write to:
contact.hq@denver.eu

Benelux

DENVER BENELUX B.V.
Barwoutswaarder 13C+D
3449 HE Woerden
The Netherlands

Phone: 0900-3437623

E-Mail: support.nl@denver.eu

Spain/Portugal

DENVER SPAIN S.A
Ronda Augustes y Louis Lumiere, n° 23 – nave 16
Parque Tecnológico
46980 PATERNA
Valencia (Spain)

Spain
Phone: +34 960 046 883
Mail: support.es@denver.eu

Portugal:
Phone: +35 1255 240 294
E-Mail: denver.service@satfiel.com

Germany

Denver Germany GmbH Service
Max-Emanuel-Str. 4
94036 Passau

Phone: +49 851 379 369 40

E-Mail
support.de@denver.eu

Fairfixx GmbH
Repair and service
Rudolf-Diesel-Str. 3 TOR 2
53859 Niederkassel

(for TV, E-Mobility/Hoverboards/Balanceboards,
Smartphones & Tablets)

Tel.: +49 851 379 369 69
E-Mail: denver@fairfixx.de

Austria

Lurf Premium Service GmbH
Deutschstrasse 1
1230 Wien

Phone: +43 1 904 3085
E-Mail: denver@lurfservice.at

If your country is not listed above,
please write an email to
support@denver.eu



DENVER A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

denver.eu
facebook.com/denver.eu



Version 1.1