



**CCT-1650**

denver.eu

12/2024



**FR**

Cet appareil, ses  
cordons, ses accessoires  
et ses batteries sont  
recyclables

**À DÉPOSER  
EN MAGASIN**



**À DÉPOSER  
EN DÉCHÈTERIE**

OU



Points de collecte sur [www.quefairedemesdechets.fr](http://www.quefairedemesdechets.fr)  
Privilégiez la réparation ou le don de votre appareil !

## **Safety information**

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. The battery in this unit is only there to make sure the recordings are saved correctly. It is not designed to work on battery only, as the capacity are small
2. Warning: This product includes lithium polymer battery.
3. Keep product out of the reach of children and pets to avoid chewing and swallowing.
4. Product operating temperature is from -15 degree Celsius to +60 degree Celsius and storage temperature is from -20degree Celsius to +65 degree Celsius. Under and over this temperature might affect the function.
5. Never open the product. Touching the inside electrics can cause electric shock. Repairs or service should only be performed by qualified personnel.
6. Do not expose to heat, water, moisture, direct sun light!
7. The unit is not waterproof
8. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
9. Only use with supplied 12V car adapter.
10. Do not use non original accessories together with the product as this can make the product functionality abnormal.

## Operation interface introduction



- 1. display screen
- 2. charge indicator
- 3. work indicator
- 4. lens
- 5. speaker
- 6. M button
- 7. right button

- 8. left button
- 9. Micro SD card slot
- 10. Type-C port
- 11. power button
- 12. suction cup slot
- 13. reset hole
- 14. MIC

**1. Display screen**

3-inch IPS display screen

**2. Charge indicator**

Red indicator lights up when charging

Fully charged red indicator off

**3. work indicator**

When the machine is switched on, the blue indicator light is on;

When the machine is switched off, the blue indicator light is off.

**4.lens**

Camera Viewfinder Window

**5. Speaker**

Speaker for playing sound

**6. M button**

Long press to switch video mode/photo mode/playback mode;

In playback mode, short press M button to delete/lock files

In photo/video mode, short press to enter menu setting mode

**7.right button**

In photo/video mode, a short press turns the flash on/off;

Scroll down in playback mode/setting menu;

**8.left button**

Turns recording on/off in video mode;

Upward scrollable in playback mode/setup menu

**9.SD card**

Micro SD card up to 64GB

**10.Type-c charge port**

For connection to car converter (12V) and external power supply for battery charging

**11.power button**

Start recording, stop recording, take a picture, confirm settings in the menu, confirm playback or pause playback during playback.

**12.suction cup slot**

For fixing suction cup holder

**13.reset hole**

Inserting a sharp object into the reset hole when the machine dies can restart the machine

## **Operating Instructions**

### **1. Switching machines on/off**

Switch on the machine: Under the state of switching off the machine, long press the power button to hear the beep, at the same time, the screen appears on the boot screen, the work indicator (blue) lights up, this time the machine is switched on.

Switch off the machine: Under the state of switching on the machine, long press the power button to hear the beep, at the same time, the screen appears on the shutdown screen, the work indicator (blue) lights off, this time the machine is switched off. Note: When using the car charger, the machine will be turned on automatically when the car is started; when the car is switched off, the machine will be turned off automatically.

### **2. recorder**

Starting the car engine, the recorder automatically turns on the video recording function; switching off the car engine, the recorder automatically saves the log content and switches off. Press the power button to manually stop/start the video recording function.

Recorded video clips are stored in the SD card; when the SD card is full, the logger will overwrite the oldest recorded images with priority.

The recording time period can be set to Off/1/3/5/10 minutes in the menu.

### **3.Photo mode**

The recorder mode is the default when the machine is switched on, in standby mode, long press the M button to switch to the photo mode, and press the power button to take a picture.

In photo mode, short press M button to enter the setting menu.

### **4.G- Sensor**

Select the Gravity Sensor (G-sensor) function in the menu setting, short press the power button to turn on this function, in the process of driving, if the vehicle has a collision, the recorder will lock the date of the image of the first 5 seconds and the last 10 seconds of the accident, and the locked image will be saved as a special file, which will not be overwritten by the cycle.

Gravity Sensor (G-Sensor) sensitivity can be changed according to your needs in the setup menu: Off/Low/Medium/High

## 5.playback

Long press the M button to switch to playback mode, press the left/right button to select your desired file or photo, press the power button to play/pause.

In playback mode, press M briefly to delete/lock files.

## 6.Date/Time Setting

Press [M] key to enter the menu setting, find the date/time menu, short press the power button to confirm the time, press [M] key to exit the menu setting.

[Note] For effective recording and forensics, please set the correct time and date immediately before using the recorder.

## Featur

 
G-sensor	Built-in
Display size	3 inch
language	German, Danish, Spanish, French, Italian, Dutch, Norwegian, Polish, Portuguese, Swedish, Finnish, English, Croatian
file format	AVI.
Video resolution	1080P/ 720P /VGA
Cyclic video	off/1/3/5/10 minutes
Photo format	JPG
SD card	SD card (supports up to 64GB SD card)
microphone	support
Photo resolution	VGA/ 1.3M/ 2M/ 3M /5M/ 8M /10M/ 12M
frequency of electric current	50HZ/60HZ
battery	built-in battery 3.7V 180mAh

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



denver.eu



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

DENVER A/S

Omega 5A, Soefte  
DK-8382 Hinnerup  
Denmark  
[www.facebook.com/denver.eu](http://www.facebook.com/denver.eu)



# Contact

**Main contact point: [contact.hq@denver.eu](mailto:contact.hq@denver.eu)**

## Nordics

**Headquarter**  
Denver A/S  
Omega 5A, Soeften  
DK-8382 Hinnerup  
Denmark

Phone: **+45 86 22 61 00**  
(Push "1" for support)

E-Mail  
For technical questions, please write to:  
**[support.hq@denver.eu](mailto:support.hq@denver.eu)**

For all other questions please write to:  
**[contact.hq@denver.eu](mailto:contact.hq@denver.eu)**

---

## Benelux

**DENVER BENELUX B.V.**  
Barwoutswaarder 13C+D  
3449 HE Woerden  
The Netherlands

Phone: **0900-3437623**  
E-Mail: **[support.nl@denver.eu](mailto:support.nl@denver.eu)**

---

## Spain/Portugal

**DENVER SPAIN S.A**  
Ronda Augustes y Louis Lumiere, n° 23 – nave  
16  
Parque Tecnológico  
46980 PATERNA  
Valencia (Spain)

**Spain**  
Phone: **+34 960 046 883**  
Mail: **[support.es@denver.eu](mailto:support.es@denver.eu)**

**Portugal:**  
Phone: **+35 1255 240 294**  
E-Mail: **[denver.service@satfiel.com](mailto:denver.service@satfiel.com)**

## Germany

**Denver Germany GmbH Service**  
Max-Emanuel-Str. 4  
94036 Passau

Phone: **+49 851 379 369 40**

E-Mail  
**[support.de@denver.eu](mailto:support.de@denver.eu)**

**Fairfixx GmbH**  
Repair and service  
Rudolf-Diesel-Str. 3 TOR 2  
53859 Niederkassel

(for TV, E-Mobility/Hoverboards/Balanceboards,  
Smartphones & Tablets)

Phone: **+49 851 379 369 69**  
E-Mail: **[denver@fairfixx.de](mailto:denver@fairfixx.de)**

---

## Austria

Lurf Premium Service GmbH  
Deutschstrasse 1  
1230 Wien

Phone: **+43 1 904 3085**  
E-Mail: **[denver@lurfservice.at](mailto:denver@lurfservice.at)**

---

## Poland

**LetMeRepair Poland sp. z o.o.**

ul. Częstochowska 140  
62-800 Kalisz

Phone: **62 75 38 092**  
E-Mail: **[denver-service@letmerepair.pl](mailto:denver-service@letmerepair.pl)**

Godziny pracy: 8 – 18 (poniedziałek – piątek)

---

If your country is not listed above,  
please write an email to  
[contact.hq@denver.eu](mailto:contact.hq@denver.eu)



Denver A/S  
Omega 5A, Soeften  
DK-8382 Hinnerup  
Denmark

[denver.eu](http://denver.eu)  
[facebook.com/denver.eu](https://facebook.com/denver.eu)

