



PR-800

denver.eu

10/2024



FR

Cet appareil et
ses accessoires
sont recyclables

À DÉPOSER
EN MAGASIN



À DÉPOSER
EN DÉCHÈTERIE



OU

Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. Do not look directly at the projector lens while the machine is working to avoid damaging your eyes.
2. This projector does not have a waterproof function, so please keep it away from rain, moisture and other items containing liquid such as a vase etc.
3. To avoid clog of the projector vent, please do not cover the projector with a cloth, carpet or other materials.
4. Keep product out of the reach of children and pets to avoid chewing and swallowing.
5. Product operating and storage temperature is from 0 degrees Celsius to 40 degrees Celsius. Under and over this temperature might affect the function.
6. Never open the product. Touching the inside electrics can cause electric shock. Repairs or service should only be performed by qualified personnel.
7. Only charge with supplied USB cable.
8. Do not use non original accessories together with the product as this can make the product functionality abnormal.

Interface introduction



HDMI input slot



Micro SD card slot



5V2A
Type-C slot



Type-C input



AUX



Power switch



Left



Right



OK




Input



Return

Remote control introduction

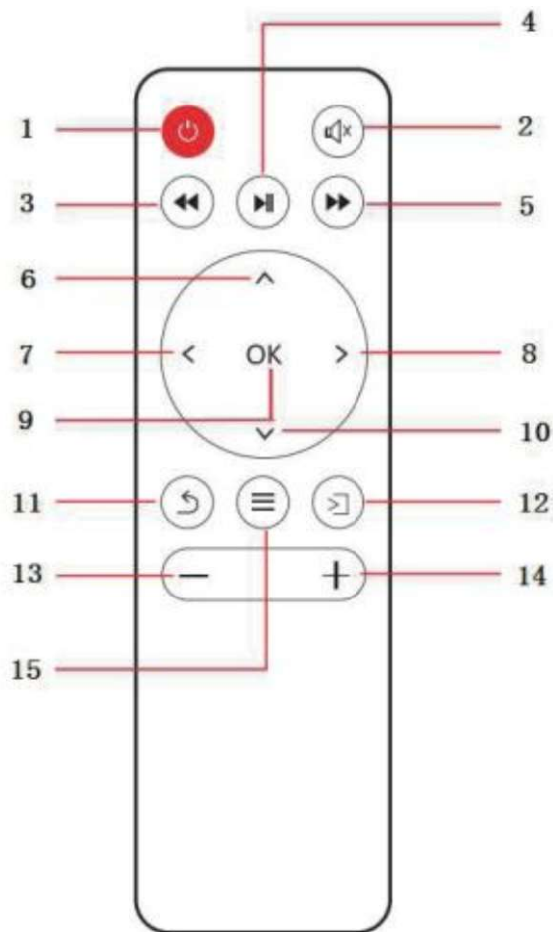

- 1.Power ON/OFF
- 2.Mute button
- 3.Rewind button
- 4.Play/pause
- 5.Fast forward button
- 6.Up button
- 7.Left button
- 8.Right button
- 9.OK button
- 10.Down button
- 11.Return button
- 12.Signal source
- 13.Volume down button
- 14.Volume up button
- 15.Menu/shortcut


*NOTE:

- 1.To avoid power shortage, please do not mix old and new batteries when using the remote.
- 2.To avoid battery leakage corrosion, please remove the batteries if the remote control will not be used for an extended period of time.
- 3.When using the remote control, please align the remote control's signal transmitter with the projector's infrared signal reception window.

Operating instructions

1. Preparation before turning on

Connect the power adapter to the projector as shown below.

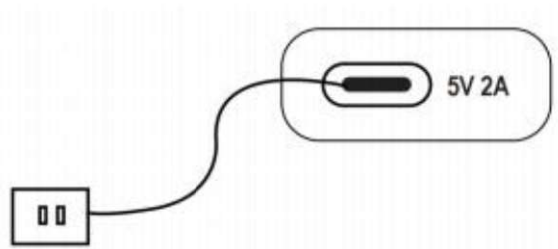

2. Power on/Power off

Press the power switch on the projector or the  button on the remote control to start the projector.



3. When turning on the projector

Once the projector powers on, it will display the boot screen for approximately 2-5 seconds before transitioning to the multimedia screen.

4. Focus

Position the projector horizontally in front of the projection screen or wall. Adjust the keystone wheel until the picture appears clear.


Projector connection introduction

*Can connect to multiple devices and applications.

Press the  key to access signal source, and choose desired source from the below described connections.

1. Multi —media connection


The USB type C output allows you to connect your phone to the projector via a USB type C cable and project a mirrored screen from your device.

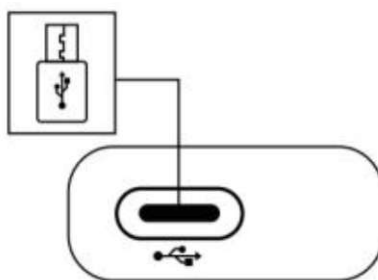

Note: Press the OK button on the device or the remote control OK button to turn mirror rotation on/off

2. HDMI connection


HDMI slot can be used to connect to a computer or any device with an HDMI cable. Once connected, select the signal source “HDMI”.

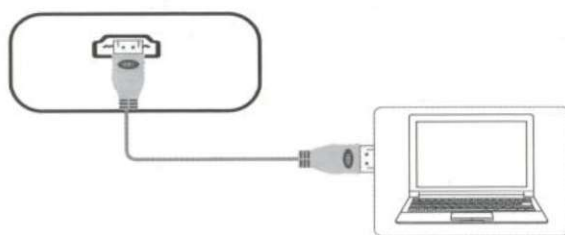

Multimedia supported format

Multi-media	Audio support	MP3/APE/OGG/AAC/FLAC/ATRA
	Photo support	JPEG/BMP/PNG/GIF
	Video support	MKV/AVI/MOV/MP4/TS/ASF/FLV/PMP/MPG/VOB/WMV
	E-book	TXT

SD card functions

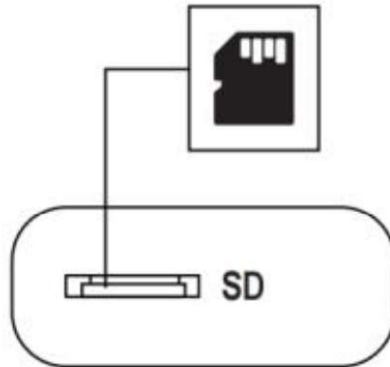

1. Select the contents you need to display: Movie, Music, Photo or Text.



2. Select the file you wish to display, and press ►|| to display or stop.



Support files:

576P,480P,720P,1080P,640*480,800*600,1024*768,1280*1024,1280*720,
1440*900,1920*1080,1366*768,1280*800,1440*960,1600*1200,1680*1050

Menu settings

1. Picture sub-menu

Remote control user guide: Press the " ≡ " key to access the main menu. Next, press the " ◀▶ " key to enter the picture sub-menu. Then, press the " ▼▲ " key to select the program you want to adjust. Finally, press "OK" to enter the settings.

You are able to select image mode, color temperature, aspect ratio, and noise reduction.

2. Time sub-menu

Press the " ≡ " key on the remote control to access the main menu. Then, press the " ◀▶ " key to select the time sub-menu. Next, use the " ▼▲ " key to choose the items you wish to adjust, and finally press "OK" to enter the settings.

In the settings, you can choose time, off time, on time, sleeptime and auto sleep.

3. Sound sub-menu

Press the " ≡ " key to access the main menu, then press the " ◀▶ " key to select the audio sub-menu. Next, use the " ▼▲ " key to choose the items you want to adjust. Finally, press "OK" to enter the settings.

You are able to choose between sound mode, balance, auto volume, and surround sound.

4. Option sub-menu

Press the " ≡ " key on the remote control, then press the " ◀▶ " key to access the sub-menu. Next, press the " ▼▲ " key to select the program you want to adjust, and then press "OK" to enter the settings.

You are able to choose the OSD language, factory reset, flip, OSD timer and software upgrade.

5. Instrucion of display menu


You can control the contents by the display menu.



Power supply by portable charger

Support power supply from a portable charger with a 5V/2A output.

Connect the projector's Type-C port to the 5V/2A output port of the portable charger using a Type-C cable to charge the projector.

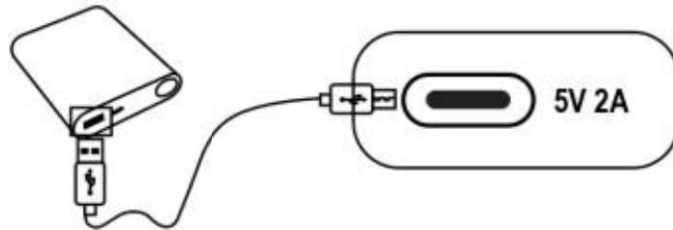

Technology features

Imaging Technology : TFT/LCD

Contrast:800:1

Supported Interpolated Resolution:1920x1080pixels

Lumens:15 ANSI Lumens

LED Life time: 30000hours

Focus Mode: Manually

Projection distance: 1.2-2.5m

Projection size: 35-60 inches

Projector Ratio: 1.6:1

Color: 16.7M

Consumption:18W

Video Format: MKV/AVI/MOV/MP4/TS/ASF/FLV/PMP/MPG/VOB/WMV

Audio Format:MP3/APE/OGG/AAC/FLAC/ATRA

Photo Format: JPEG/BMP/PNG/GIF

E-book: TXT

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



denver.eu



Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed-out trash can symbol, seen above. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites or be collected from the households. Additional information is available at the technical department of your city.

DENVER A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark
www.facebook.com/denver.eu