

Rittal – The System.

Faster – better – everywhere.



Server-Teleskopschienen
Server telescopic slides
Rail télescopiques pour serveurs

IT 3659.181

IT 3659.191

Montageanleitung
Assembly instructions
Notice de montage

ENCLOSURES

POWER DISTRIBUTION


CLIMATE CONTROL

IT INFRASTRUCTURE

SOFTWARE & SERVICES







FRIEDHELM LOH GROUP




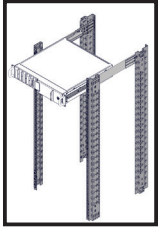

1. Montage
1. Assembly
1. Montage

1. Montage der Teleskopschiene an Profilschienen
1. Mounting the telescopic slides on the mounting angles
1. Montage des rails télescopiques sur montants

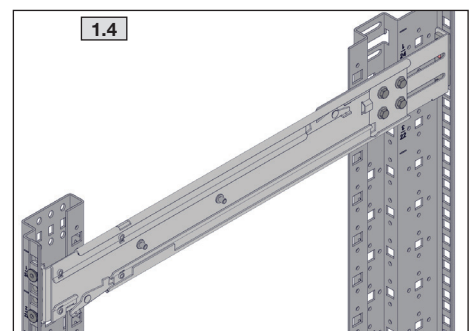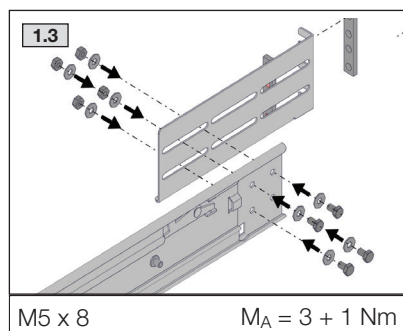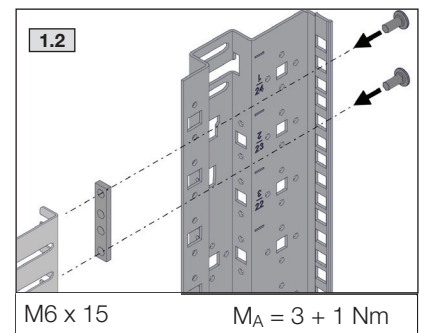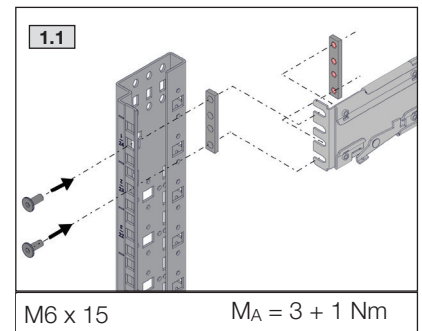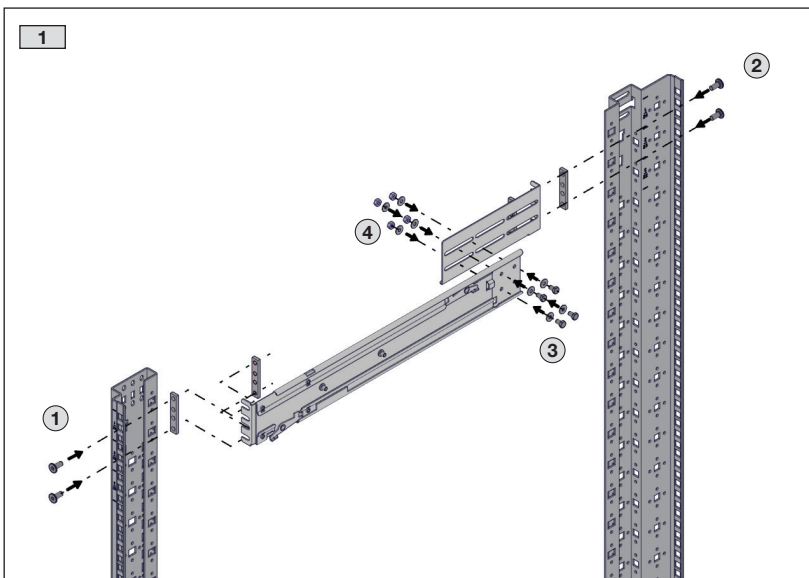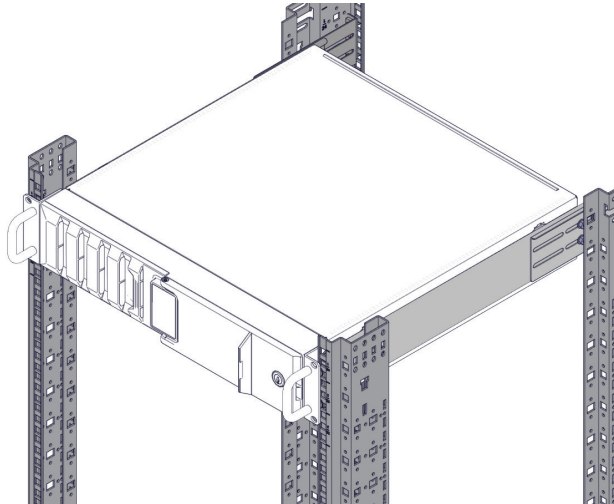

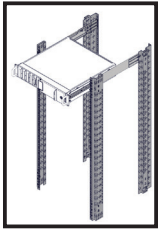

SW8



SW3



SW4






DE

EN




FR

1. Montage 1. Assembly 1. Montage

2. Montage der Innenschiene am Gehäuse 2. Fixing the inner rail to the housing 2. Montage du rail intérieur sur le boîtier

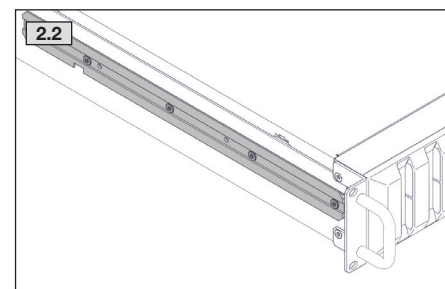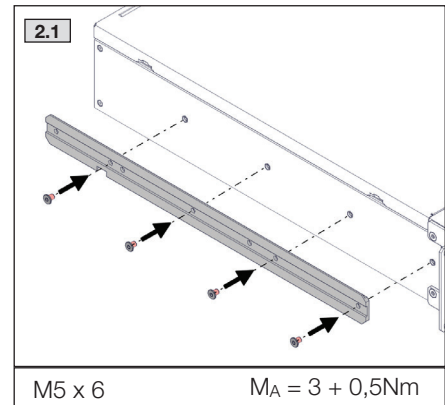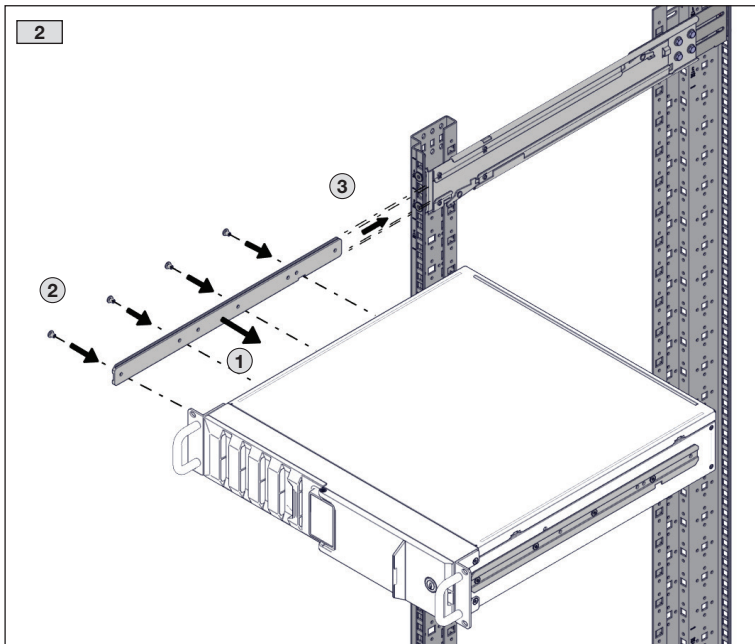

3. Einschub Gehäuse in Außenschiene 3. Inserting the housing into the outer rail 3. Insertion du boîtier dans le rail extérieur

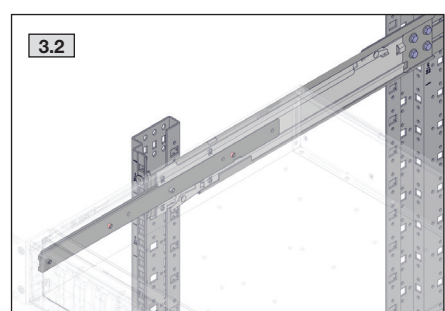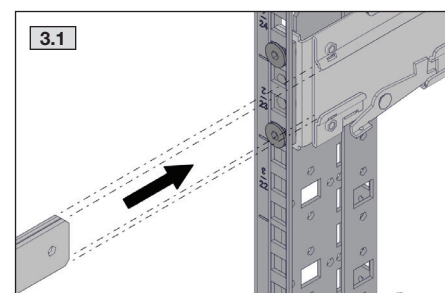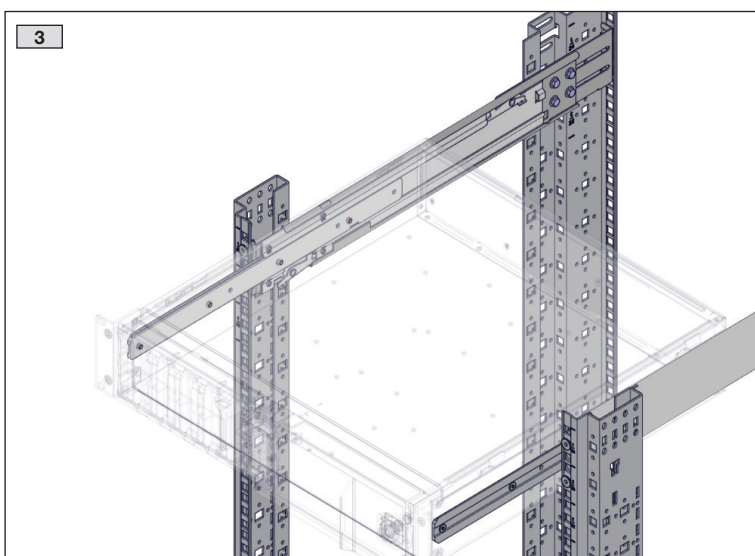

Rittal – The System.

Faster – better – everywhere.

- Enclosures
- Power Distribution
- Climate Control
- IT Infrastructure
- Software & Services

You can find the contact details of all
Rittal companies throughout the world here.



www.rittal.com/contact

RITTAL GmbH & Co. KG
Auf dem Stuetzelberg · 35745 Herborn · Germany
Phone +49 2772 505-0
E-mail: info@rittal.de · www.rittal.com

02.2021/D-0000-00002674-00

ENCLOSURES

POWER DISTRIBUTION

CLIMATE CONTROL

IT INFRASTRUCTURE

SOFTWARE & SERVICES

FRIEDHELM LOH GROUP

