

Premium tool solutions
 Made in Germany



INSTALLATION GUIDE FOR MANOSKOP® 714 & 766

		❄ -10° ☀ +60° 🚫 no fluids
		❄ +/- 0° ☀ +40° 🚫 no fluids

DC 2,3 V | max. 150 mA

www.stahlwille.de/operating-instructions



1

remove covering

 
 






2

3


4

Click









5A MANOSKOP® 766

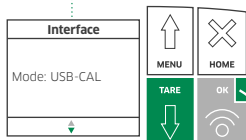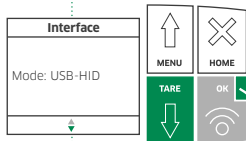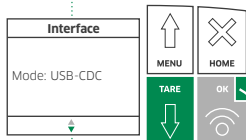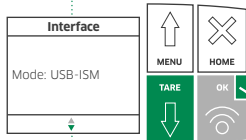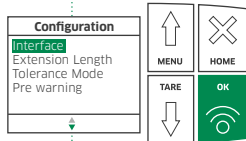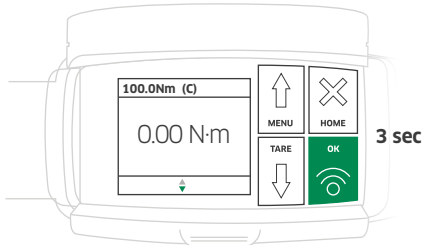


Only STAHLWILLE Services

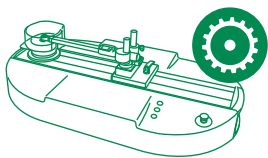

5B MANOSKOP® 714

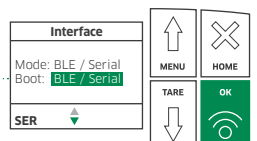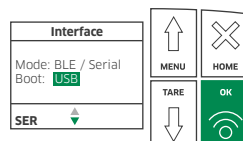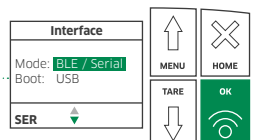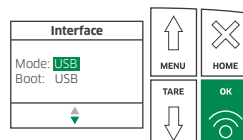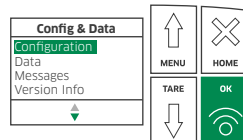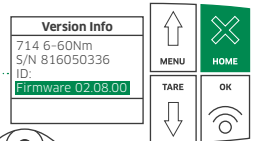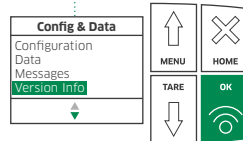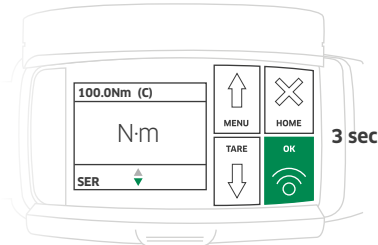

+ Software
SENSOMASTER 4

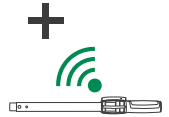

6 INSTALL BLE MANAGER



www.stahlwille.de/en/downloads/

STATUS MANOSKOP® 714 & 766



Ready to connect



Connected and
ready to use



MANOSKOP® 714
Firmware Update
is required (02.08.00)

