

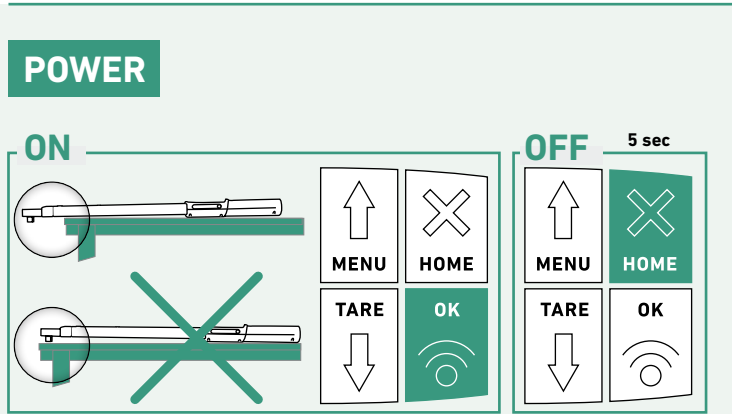


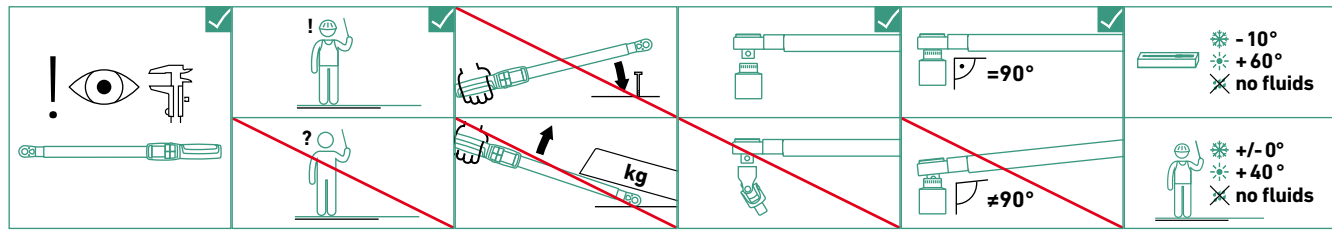


DISPLAY

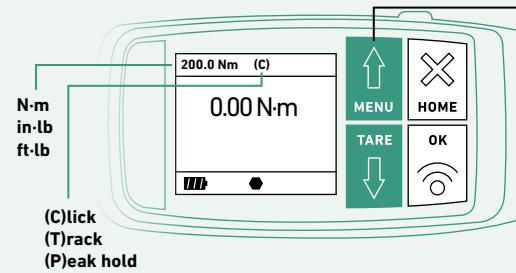

QUICK SETTING

- A** 2 x Click
- B** 110.0 N·m
100.0 N·m
90.0 N·m
- C** Press OK

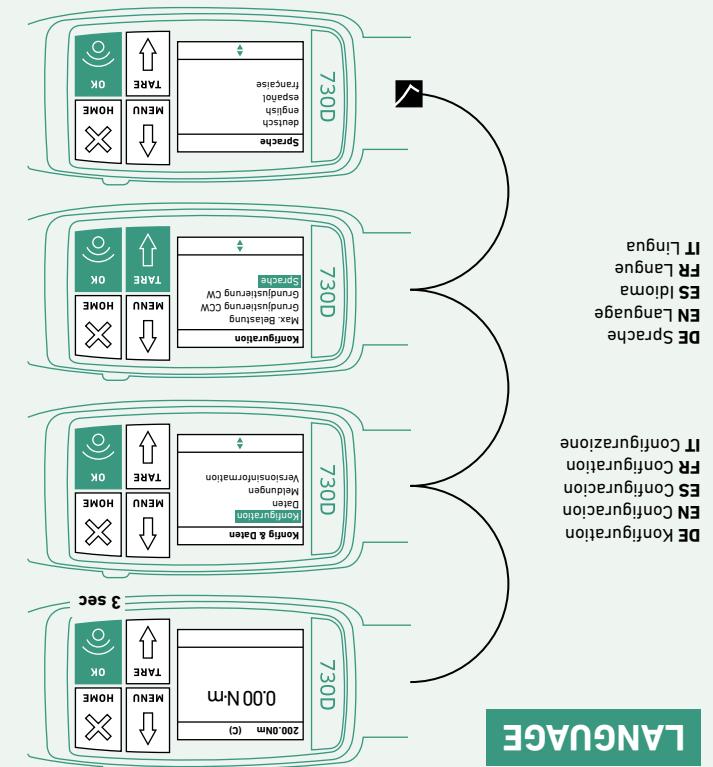



STÄHLWILLE Edward Wille GmbH · Lindentallee 27 · 42349 Wuppertal · Germany
 TEL.: +49 202 4791-0 · info@stahlwille.de · www.stahlwille.com
 © STÄHLWILLE Edward Wille GmbH // 1-11-25 MMB // V 2.0 // 91974045

TOOLS THAT
 ... inspire

MANOSKOP® 730D eClick
 Short instructions

STÄHLWILLE®

MADE IN CRONENBERG
 MADE IN GERMANY

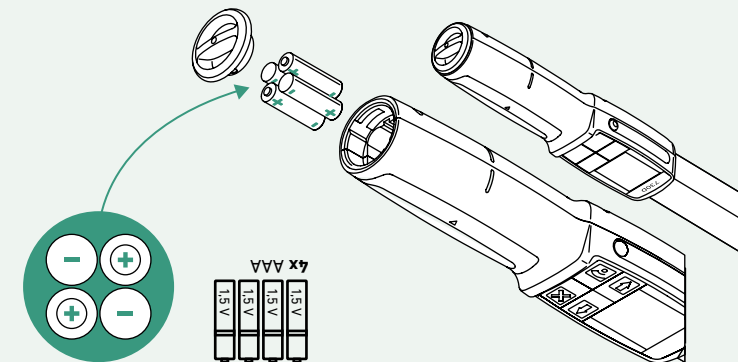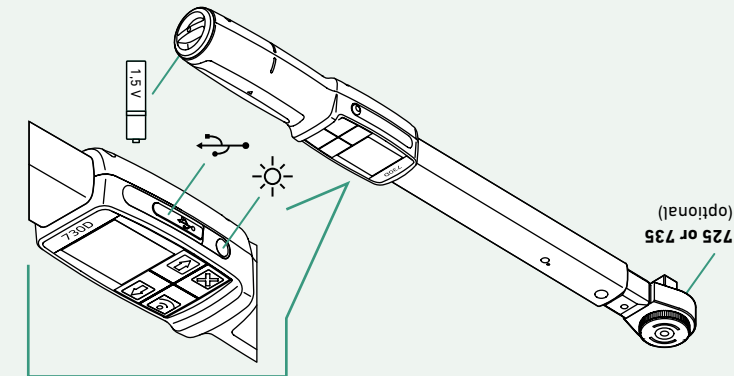




DE Verpackungsinhalt
EN Contents
ES Contenido del embalaje
FR Contenu du packaging
IT Contenuto della confezione



 [www.stahlwille.com/
en_de/products/
detail/851204](http://www.stahlwille.com/en_de/products/detail/851204)



1x



1x



4x AAA



1x




2x

1


DE Praxisbeispiel
EN Practical example
ES Ejemplo práctico
FR Exemple pratique
IT Esempio pratico

3 sec

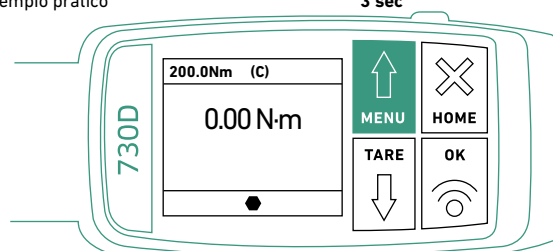


2

EN Main Menu > Direct Input
ES Menu Principal > Entrada directa
FR Menu Principal > Mode direct
IT Menu principale > Metodo diretto

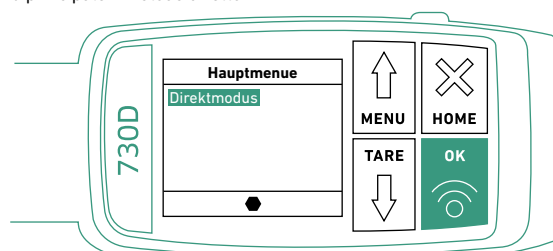


3

EN Setup Menu > Torque
ES Entrada Directa > Par de apriete
FR Menu Direct > Couple
IT Impostazione diretta > Coppia

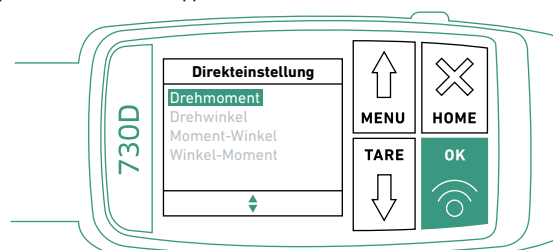


4

EN Setup Menu > Nm
ES Entrada Directa > Nm
FR Menu Direct > Nm
IT Impostazione diretta > Nm

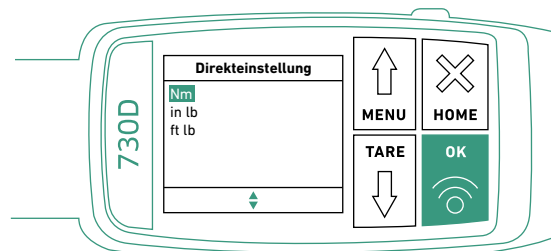


8

EN Setup Menu > Click
ES Entrada Directa > Disparo
FR Menu Direct > Déclenchement
IT Impostazione diretta > Scatto

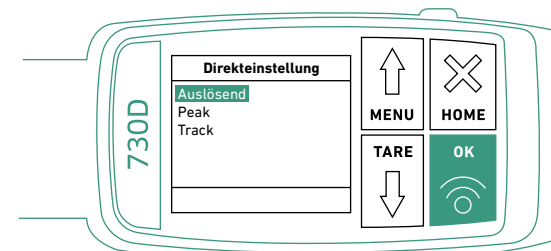


5

EN Setup Menu > Torque
ES Entrada Directa > Par de apriete
FR Menu Direct > Couple
IT Impostazione diretta > Coppia

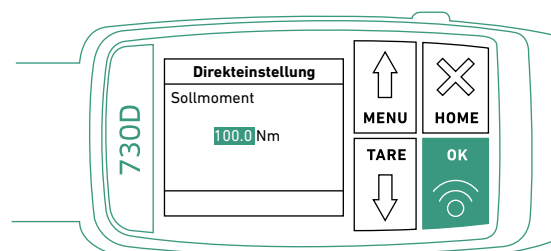


9

EN Setup Menu > Extension Length
ES Entrada Directa > Cota del util
FR Menu Direct > Longueur embout
IT Impostazione diretta > Misura di estensione

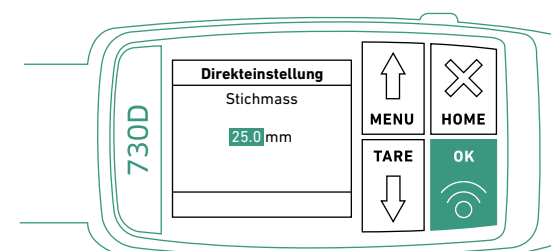


6

EN Setup Menu > Rel. Tolerance
ES Entrada Directa > Tolerancia relativa
FR Menu Direct > Tolérances rel.
IT Impostazione diretta > Tolleranza rel.

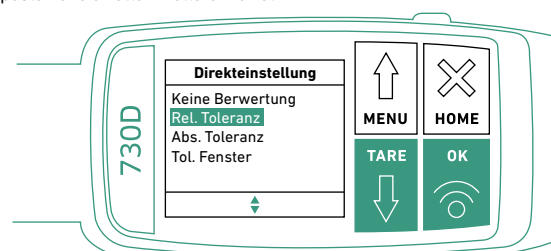


10

EN Setup Menu > Joint-ID
ES Entrada Directa > Joint-ID
FR Menu Direct > Joint-ID
IT Impostazione diretta > Joint-ID

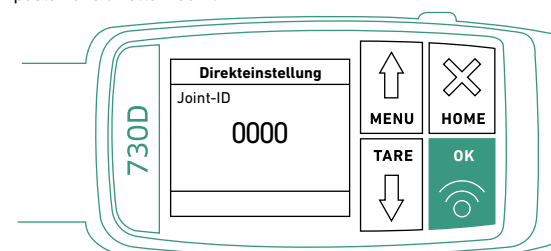


7

EN Setup Menu > Torque +Tol 10 % | Torque -Tol 0 %
ES Entrada Directa > Apriete +Tol 10 % | Apriete -Tol 0 %
FR Menu Direct > Couple +Tol 10 % | Couple -Tol 0 %
IT Impostazione diretta > Coppia +Toll... | Coppia -Toll...

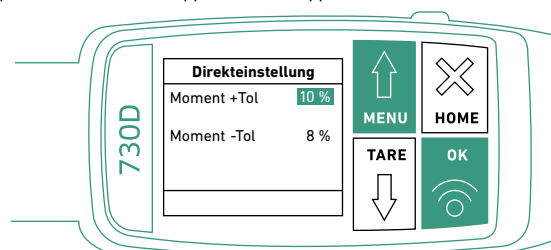

11

EN Parameter
ES Parametro
FR Paramètres
IT Parametri

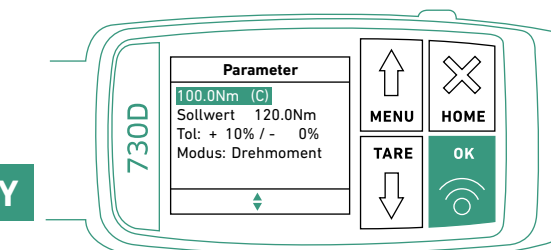

READY