





Quick Installation Guide

Wireless Touchpad Presenter


Installation

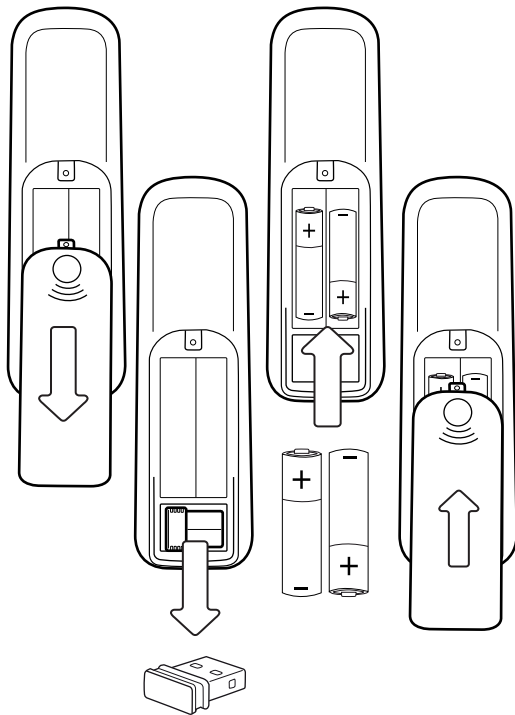


Installation

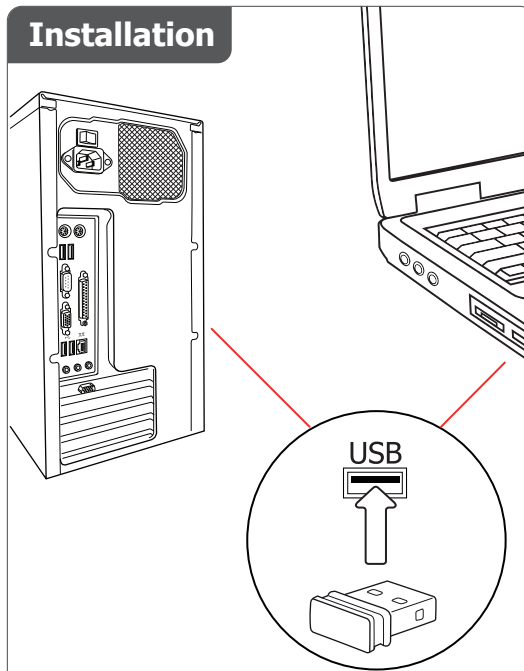


Presentation

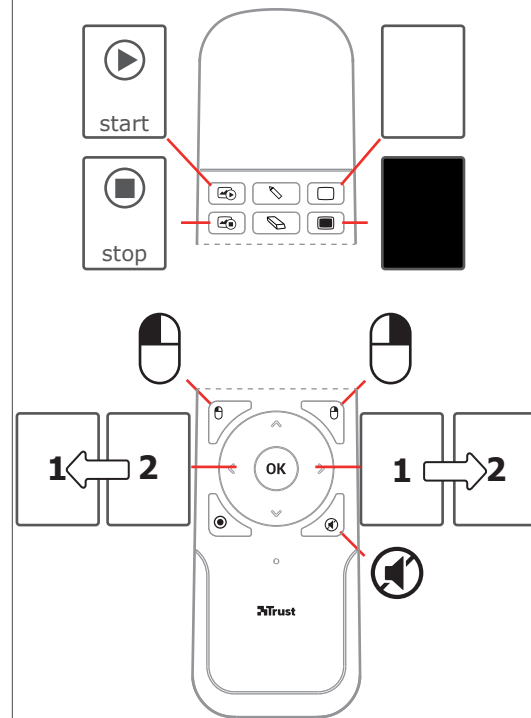

Special functions

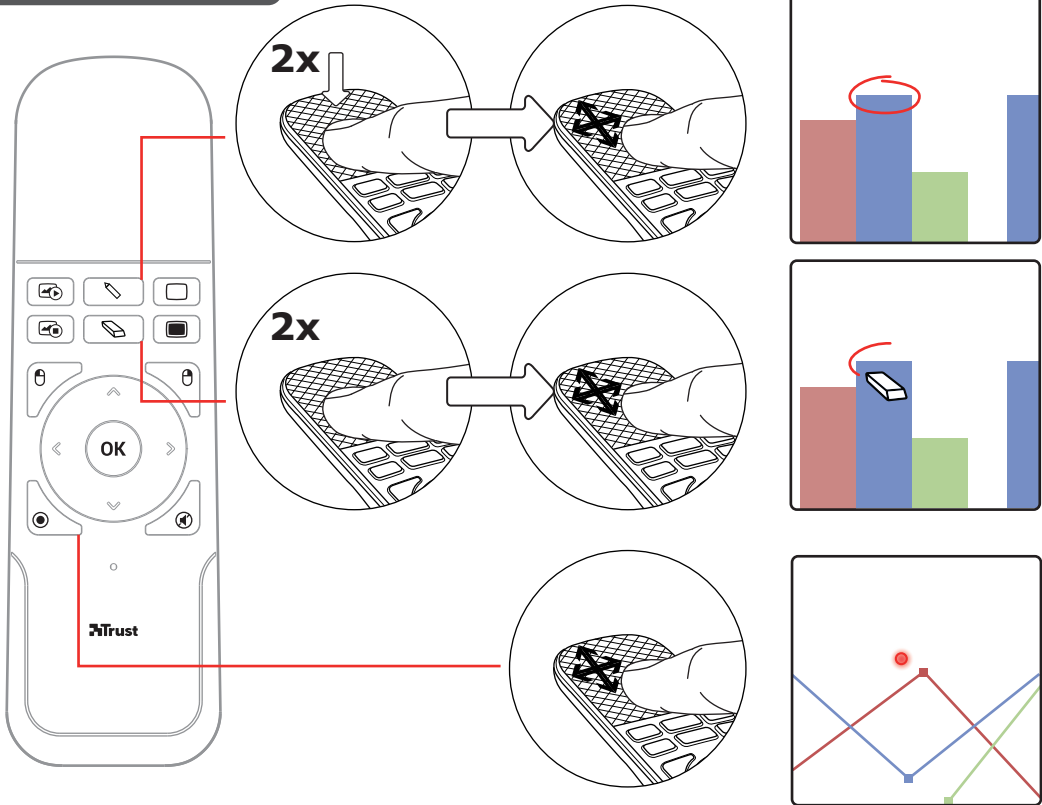

Mouse functions

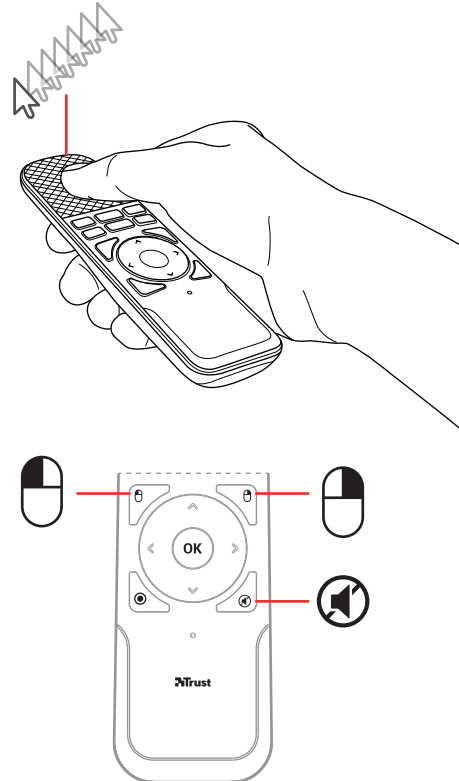

Frequently asked questions













www.trust.com/19867/faq



Multimedia Key Sheet

Wireless Touchpad Presenter

	EN	DE	IT	NL	FI	SE	FR	ES	RU	PL	CZ	BR
	Left Mouse Click	Linker Mausclick	Clic con pulsante sinistro del mouse	Linkermuisklik	Vasemman hiiren napsautus	Vänster musklick	Clic gauche de la souris	Clic izquierdo del ratón	Щелчок левой кнопкой	Kliknięcie lewym przyciskiem myszy	Levé kliknutí myši	Clique esquerdo do mouse
	Right Mouse Click	Rechter Mausclick	Clic con pulsante sinistro del mouse	Rechtermuisklik	Oikean hiiren napsautus	Höger musklick	Clic droit de la souris	Clic derecho del ratón	Щелчок правой кнопкой	Kliknięcie prawym przyciskiem myszy	Pravé kliknutí myši	Clique direito do mouse
	Laser Pointer (CTRL+L)	Laserpointer (CTRL+L)	Puntatore Laser (CTRL+L)	Laser Pointer (CTRL+L)	Laserosoitin (CTRL+L)	Laserpekare (CTRL+L)	Pointeur Laser (CTRL+L)	Puntero Láser(CTRL+L)	лазерный луч (CTRL+L)	wiązka lasera (CTRL+L)	laserový ukazatel(CTRL+L)	Ponteira Laser (CTRL+L)
	Pen Function (CTRL+P)	Stift-Funktion (CTRL+P)	Funzione penna (CTRL+P)	Penfunctie (CTRL+P)	Kynätoiminto (CTRL+P)	Pennfunktion (CTRL+P)	Fonction stylet(CTRL+P)	Función Pluma (CTRL+P)	Функция пера (CTRL+P)	Funkcja pióra (CTRL+P)	Funkce pero (CTRL+P)	Função caneta (CTRL+P)
	Eraser Function (CTRL+E)	Radierer-Funktion (CTRL+E)	Funzione gomma (CTRL+E)	Gumfunctie (CTRL+E)	Pyyhintoiminto (CTRL+E)	Suddfunktion (CTRL+E)	Fonction gomme (CTRL+E)	Función Goma (CTRL+E)	Функция ластика (CTRL+E)	Funkcja gumki (CTRL+E)	Funkce guma (CTRL+E)	Função borracha (CTRL+E)
	Start Presentation (F5)	Präsentation starten (F5)	Avvia presentazione (F5)	Start presentatie (F5)	Käynnistä esitys (F5)	Starta presentation (F5)	Démarrer la présentation (F5)	Iniciar presentación (F5)	Начать презентацию (F5)	Rozpocznij prezentację (F5)	Spustit prezentaci (F5)	Iniciar apresentação (F5)
	Stop Presentation (Esc)	Präsentation beenden (Esc)	Arresta presentazione (Esc)	Stop presentatie (Esc)	Lopeta esitys (Esc)	Stoppa presentation (Esc)	Arrêter la présentation (Échap)	Detener presentación (Esc)	Остановить презентацию (Esc)	Zatrzymaj prezentację (Esc)	Zastavit prezentaci (Esc)	Parar apresentação (Esc)
	White Screen (w)	Weißer Bildschirm (w)	Schermo bianco (w)	Wit scherm (w)	Valkoinen näyttö (w)	Vit skärm (w)	Écran blanc (w)	Pantalla blanca (w)	Белый экран (w)	Biały ekran (w)	Bílá obrazovka (w)	Tela branca (w)
	Black Screen (b)	Schwarzer Bildschirm (b)	Schermo nero (b)	Zwart scherm (b)	Musta näyttö (b)	Svart skärm (b)	Écran noir (b)	Pantalla negra (b)	Черный экран (b)	Czarny ekran (b)	Černá obrazovka (b)	Tela preta (b)
	OK Enter (confirm)	Eingabetaste (bestätigen)	Invio (conferma)	Enter (bevestigen)	Enter-näppäin (vahvista)	Enter (bekräfta)	Entrée (confirmer)	Intro (confirmar)	Enter (подтвердить)	Enter (potwierdź)	Enter (potvrdit)	Enter (confirmar)
	Arrow keys	Pfeiltasten	Tasti freccia	Pijltoetsen	Nuolinäppäimet	Piltangenten	Touches fléchées	Teclas de flecha	Клавиши со стрелками	Klawisze strzałek	Kurzorové klávesy	Teclas de direção
	Mute	Ton aus	Mute [Muto]	Geluid dempen	Mykistys	Ljud av	Muet	Silencio	Отключение звука	Wyciszenie	Ztlumit	Modo silencioso
	LED light blinking: <i>Battery Empty</i>	LED-Anzeige blinkend: <i>Akku leer</i>	Luce LED lampeggiante: <i>Batteria esaurita</i>	LED-lampje knipperend: <i>Batterij leeg</i>	LED-valo Vilkkuva: <i>Akku tyhjä</i>	LED-ljus blinkning: <i>Batteri tomt</i>	Voyant LED Clignotement: <i>Piles vides</i>	Luz LED Parpadeo <i>Batería agotada</i>	Светодиодный индикатор Мигающий: <i>Батареи разряжены</i>	Lampka LED Migająca: <i>Bateria wyczerpana</i>	LED světlo blikání: <i>Baterie je vybitá</i>	Luz do LED Piscando: <i>Bateria vazia</i>

RO	HU	BG	EL	PT	NO	DA	TR	SK	SI	HR	RS	AR
 Clic stânga mouse	Bal egérgomb kattintás	Щракване с ляв бутон на мишката	Αριστερό Κλικ με το Ποντίκι	Clique como botão esquerdo do rato	Venstre museklikk	Venstre museklik	Sol fare tıklaması	Kliknutie ľavým tlačidlom	Klik z levo miškino tipko	Lijevi klik mišem	Levi klik mišem	النقر بزر الماوس الأيسر
 Clic dreapta mouse	Jobb egérgomb kattintás	Щракване десен бутон на мишката	Δεξιό Κλικ με το Ποντίκι	Clique como botão direito do rato	Høyre museklikk	Højre museklik	Sağ fare tıklaması	Kliknutie pravým tlačidlom	Klik z desno miškino tipko	Desni klik mišem	Desni klik mišem	النقر بزر الماوس الأيمن
 Indicator Laser (CTRL+L)	Lézerfény (CTRL+L)	лазерна показалка(CTRL+L)	δείκτης λέιζερ (CTRL+L)	Apontador Laser (CTRL+L)	Laserpeker (CTRL+L)	Lasergepind (CTRL+L)	lazer işaretçi (CTRL+L)	laserové ukazovátko(CTRL+L)	laserski kazalnik (CTRL+L)	laserski pokazivač (CTRL+L)	laserski pokazivač (CTRL+L)	مؤشر ليزر (CTRL+L)
 Funcție pix (CTRL+P)	Toll funkció(CTRL+P)	Функция Писалка(CTRL+P)	Λειτουργία Πένας (CTRL+P)	Função de caneta (CTRL+P)	Pennfunksjon (CTRL+P)	Pennfunktion (CTRL+P)	Kalem Fonksiyonu (CTRL+P)	Funkcia pera (CTRL+P)	Funkcija pisala (CTRL+P)	Funkcija olovke (CTRL+P)	Funkcija olovke (CTRL+P)	وظيفة القلم (CTRL+P)
 Funcție radieră (CTRL+E)	Radír funkció (CTRL+E)	Функция Изтриване (CTRL+E)	Λειτουργία Γόμας (CTRL+E)	Função de borracha (CTRL+E)	Viskelærfunksjon (CTRL+P)	Slettefunktion (CTRL+E)	Silgi fonksiyonu (CTRL+E)	Funkcia gumy (CTRL+E)	Funkcija radirke (CTRL+E)	Funkcija gumice (CTRL+E)	Funkcija gumice (CTRL+E)	وظيفة الممحاة (CTRL+E)
 Pornire prezentare (F5)	Bemutató indítása(F5)	Старт Презентация (F5)	Έναρξη Παρουσίασης (F5)	Iniciar apresentação (F5)	Start presentasjon (F5)	Start præsentation (F5)	Başlatma Sunumu (F5)	Spustenie prezentácie (F5)	Začni predstavitev (F5)	Započeti prezentaciju (F5)	Pokrenuti prezentaciju (F5)	بدء العرض (F5)
 Oprire prezentare (Esc)	Bemutató megállítása(Esc)	Стоп Презентация (Esc)	Τερματισμός Παρουσίασης (Esc)	Parar apresentação (Esc)	Stopp presentasjon (Esc)	Stop præsentation (Esc)	Durdurma Sunumu (Esc)	Zastavenie prezentácie (Esc)	Ustavi predstavitev (Esc)	Zaustaviti prezentaciju (Esc)	Zaustaviti prezentaciju (Esc)	إيقاف العرض (Esc)
 Ecran alb (w)	Fehér képernyő (w)	Бял екран (w)	Λευκή Οθόνη (w)	Ecrã a branco (w)	Hvit skjerm (h)	Hvid skærm (w)	Beyaz Ekran (w)	Biela obrazovka (w)	Beli ekran (w)	Bijeli zaslon (w)	Beli ekran (w)	الشاشة البيضاء (w)
 Ecran negru (b)	Fekete képernyő (b)	Черен екран (b)	Μαύρη Οθόνη (b)	Ecrã a preto (b)	Svart skjerm (s)	Sort skærm (b)	Siyah Ekran (b)	Čierna obrazovka (b)	Črni ekran (b)	Crni zaslon (b)	Crni ekran (b)	الشاشة السوداء (b)
 OK Enter (confirmare)	Enter (megeősítés)	Enter (потвърди)	Enter (επιβεβαίωση)	Enter (confirmar)	Enter (bekreft)	Enter (bekræft)	Enter (onayla)	Enter (potvrđiť)	Enter (potrdi)	Enter (potvrđi)	Enter (potvrđi)	إدخال (تأكيد)
 Taste săgeată	Nyíl gombok	Клавиши със стрелки	Πλήκτρα με βέλη	Teclas de seta	Piltaster	Piletaster	Ok tuşları	Kurzorové klávesy	Smerne tipke	Tipke sa strelicama	Tasteri sa strelicama	مفاتيح الأسهم
 Mut	Némítás	Исключане на звука	Σίγαση	Sem som	Demp	Lyd fra	Sessiz	Stlmiť	Nemo	Prigušeno	Prigušeno	كتم الصوت
Lumină LED	LED-fény	LED лампа	Ένδειξη LED	Luz LED	LED-lys	LED-lamper	LED ışığı	LED kontrolka	LED lučka	LED svjetlo	LED lampica	لمبة المؤشر
intermitent: <i>Baterie descărcată</i>	villogó: <i>Az akkumulátor lemerült</i>	Мигане: <i>Батерията е изтощена</i>	Αναβοσβήνει: <i>Κενή Μπαταρία</i>	piscar: <i>Bateria descarregada</i>	blinking: <i>Batteri tomt</i>	blinkende: <i>Batteri tomt</i>	yanıp sönüyor: <i>Pil boş</i>	blikanie: <i>Vybitá batéria</i>	Sveti: <i>Prazna baterija</i>	treperi: <i>Baterija prazna</i>	Treperi: <i>Baterija prazna</i>	وميض: بطارية فارغة