

DENVER[®]
denver-electronics.com

Original Instruction

SCK-5400



www.facebook.com/denverelectronics

Before operating this electric kids scooter, parents/adult supervisors must read all the instructions for safe assembly, operations and maintenance. User's manual can guide you through the functions and usage of the electric kids scooter. Before using this electric kids scooter, familiarize yourself with how to operate, so that you can keep the electric kids scooter in the best condition possible.

The instruction manual must be retained since it contains important information.

Warning: This toy contains batteries that are non-replaceable.

Warning!

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Chapter 1 Chapter 1 General information

We urge owners of this electric kids scooter model to charge and store it in a safe place. To increase the safety and life of the batteries associated with this model it is important not to charge this model if the temperature is below 5°C or above 45°C. In addition, the charger must be disconnected when the battery is fully charged. Use only with the supplied charger XHK-922-25210 on the product.

The battery charger used with the electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.



WARNING:

To avoid serious injury:

PARENTAL AND ADULT RESPONSIBILITY AND SUPERVISION ARE NECESSARY.

Riding this electric kids scooter can be hazardous. Parents and supervising adults need to select the riding products which are appropriate for their child's age to avoid children are too immature or inexperienced to endanger themselves.

Parents/supervising adults must assemble the product and make sure the product is working well before they let the children use the product.

Parents/supervising adults must teach children how to safely ride this electric scooter. Always pay attention to where the children are going.

Cleaning and maintenance shall not be made by children, only by parents or supervising adults. Please make sure to cover the charging port with the rubber protection cap to avoid electrical problems. Always disconnect the product from charger prior to wiping it down or cleaning it with a damp cloth. Only clean the scooter with a damp cloth. Do not use running water or a pressured water-gun. Do not clean with alcohol, gas, kerosene or other corrosive and volatile chemical solvents.

Do not immerse the product in water.

Store the product in a dry and cool place when not use it. Defectives caused by storing or using the electric kids scooter in wet/humid places are not covered by the warranty.

Do not leave the device exposed to sunlight in a car.

1.1 The risk of driving



WARNING:

- This toy is unsuitable for children under 6 years due to its maximum speed.
- Protective equipment should be worn. Not to be used in traffic.
- 50 kg max.
- Learn how to drive safely before you drive fast on the electric kids scooter.
- Do not make dangerous moves or one-handed rides while the scooter is running.

Keep your feet on the foot pedal.

- Falling, losing control, crashing, including violating the rules in the user's manual can lead to injury.
- Speed and range may differ based on rider's weight, terrain, temperature, and driving style.
- Make sure to wear helmet, protective clothing, kneepads and elbow pads before using the electric kids scooter to avoid serious injury.



- Do not wear loose clothing or open laces that can be caught in the wheels.
- Make sure to read the manual carefully before using the electric kids scooter.
- Only for use in dry weather. Don't ride in rain, snow or moist areas.
- When encountering rough or uneven road conditions, please slow down or get off the scooter.

- Do not try to directly pass steps exceeding 3 cm. It may cause the scooter to subvert, causing the rider to be injured or the scooter to be damaged.
- This electric kids scooter is for domestic use only. Direct parental/adult supervision is required at all times. Only use the product in controlled environments free of potential traffic hazards and do not use it on public streets.
- Do not use this product if the temperature is below -5°C.
- Do not use it in a sloping section over 5 degrees. For use over 5 degrees uphill, you need to assist with your foot.

Please note:

The manufacturer accepts no liability for improper use of this product.

1.2 The preparation before operation

Before using, the battery should be fully charged. Please check Chapter 2.3.

1.3 The weight limitation of the operator

The reason of the weight limitation:


1. guarantee the safety of the operator
2. avoid overloading which can make motor defective.

Maximum load: 50kg.


Defective motor caused by overloading will not be covered by the warranty.

Chapter 2 Operating the Electric kids scooter


2.1 (A) Product installation instructions

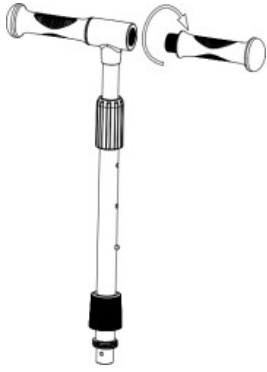


1. Tighten the handle in the direction of the arrow.

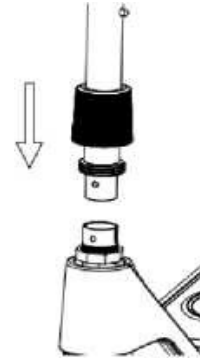

2. Connect the vertical pipe to the bottom plate and align it with the screw

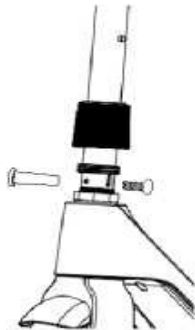


3. Lock the screw with a screwdriver

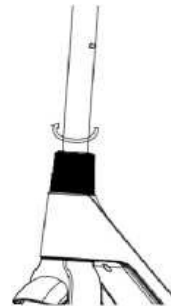


4. Tighten the cap in the direction of the arrow


(B): Product expansion demonstration

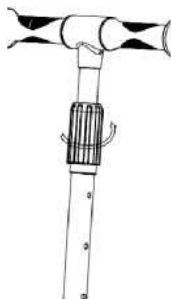

1. Untwist in the direction of the arrow

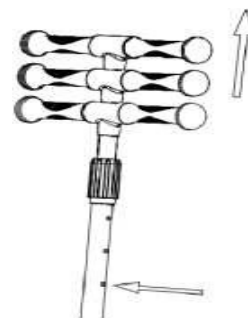

2. Press the metal lock on the handle, and then hold it while you pull up, or push down until the handle reaches the preferred height.

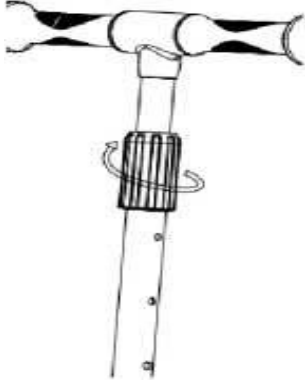

3. Tighten the cap after adjusting the height

2.2 Using the scooter

Start using the electric kids scooter.

1. Hold the handle with both hands and place one foot on the round pedal switch and keep it there.



2. Gently push forward with the other foot. When you reach 3km/h then the motor will make a BEEP and the engine starts.
3. Now the electric kids scooter drives itself and will maintain a speed of 3 -8km/h dependent on the surface.

4. If you want to stop the motor again you just step off the pedal switch.
5. If you want to slow down then step lightly on the rear mechanical brake.



6. If you want to stop. Please use one foot to step on the rear mechanical brake. After hearing the BEEP, then continue to step on the brake until the electric kids scooter stops.
7. If the scooter gives a continuous series of “beeps ,beeps ,beeps,beeps ,beeps”, the battery is low. Please charge the scooter.
8. If the scooter gives a continuous series of “beeps ,beeps ,beeps”, means over speeding . Please slow down otherwise scooter will be damaged.
9. **Automatically turn off:** The scooter will automatically turn off after 15 seconds of inactivity. If you need to use it , please slide the motor again.
10. **Lights:** After the motor is started, the lights cycle from cyan to seven colors, then turn off, and turn on again when the induction contact is pressed.

When the scooter is started, press the switch by foot, then the buzzer will emit a”beep”. If it is not started when press the switch, the buzzer will not sound. In this way can show that you drive the scooter in right way.

Maintenance

To ensure you get the best possible performance and experience from your electric scooter, it is important to do regular maintenance for important parts of the product.

- Battery maintenance

- Bearings, Screws, Brakes and Wheels
- Storage and Cleaning

Your electric scooter will require some maintenance so please read and familiarize yourself with this guide.

● Battery maintenance

All batteries have a life cycle, and performance will decrease over time, however here are some advice to maximize the life span of the battery.

Make sure that the battery is charged at regular intervals, even if you do not use the electric scooter for a long time. This is to prevent damage to the battery, caused by low voltage over an extended period.

Avoid draining the battery completely. It is best to charge while there is still power on it. This will extend battery life. If the battery is constantly depleted, it will damage the battery (damaged battery caused by wrong handling are not covered by the warranty).

If riding the electric scooter in cold or very hot areas, the battery time can be lower than when riding in temperatures from 15-25° Celsius. This is not a failure on the batteries, but normal behavior.

Please notice: Even a fully charged battery will run out of power if the electric scooter is not used for a period. Expect a fully charged battery to keep power between 90 and 120 days in off mode, before it is fully discharged. If only partially charged, this period is lower.

Please make sure the battery does not get above 50° Celsius, or below minus 10° Celsius for a longer period. (e.g. don't leave the electric scooter in a hot car in summer, do not put battery into fire etc.) Low temperature (e.g. subzero temperature) can damage the battery cells.

Keep the Electric scooter away from open flame or other sources of heat to prevent the battery from getting too hot. Also make sure not to leave the electric scooter at freezing temperatures. Both heat and excessive cold can cause the battery to discharge.

Only use original charger or an official replacement, as different batteries may require specific charger,

and if using other chargers, this could cause damage to the product.

Do not overcharge and discharge the battery.

Please make sure to charge the battery before it is completely out of power, to avoid damaging the battery cells. (damaged battery caused by wrong handling are not covered by the warranty)

It is forbidden to disassemble battery package. This is only to be handled by official service repair centers and professionals.

● Bearings, Screws, brakes and Wheels

Your electric scooter is made up of moving parts, which in time, will be susceptible to wear and tear.

Bearings and screws:

The electric scooter has sealed and dustproof bearings so that no lubrication is required. Check the bearings for wear at regular intervals to avoid unsafe riding. Do not jump on and off and do not apply excessive force otherwise to avoid damage to the bearings. This is not a sports electric scooter.

Make sure that all screws are properly tightened to avoid unsafe situations.

Please check the screws regularly and tighten if they seem loose.

Brakes:

Check the brake for wear at regular intervals to avoid unsafe riding. Do not apply excessive force to avoid damage to the brake.

Wheels:

Check the wheels for wear at regular intervals to avoid unsafe riding.

Electric scooters come with different wheels but can in general be separated into tires with inflatable inner tubes and solid wheels.

If the wheel seems wobbly even after screws are tightened, the bearings might be worn down and need replacement



WARNING

- Please make sure to check that the steering system is correctly adjusted and that all connection components are firmly secured and not broken before riding, refer to handle assembly and safety instruction.
- Please read operation guide and warnings of correct techniques for use and braking
- Always wear shoes.
- We highly recommend to always wear helmet/pads for your own protection.
- Self - locking nuts and other self - locking fixings may lose their effectiveness.
- All parts and materials of electric scooter cannot be changed, modifications of the scooter are not allowed. If done, then warranty is void.

● Storage and cleaning

If your Electric scooter gets dirty, please clean it with a damp cloth only, you may not use pressured water - gun or running water, as this could damage vital parts. It is also possible to use a little toothpaste if the dirt is stuck. Remember to clean with damp cloth after this.

Please make sure to keep the electric scooter turned off while cleaning it, and make sure to cover the charging port with the rubber protection cap to avoid problems with the electronics.

Make sure to dry the scooter with a towel, should it become wet.

Please notice: Do not use alcohol, gas, kerosene or other corrosive and volatile chemical solvents. This can damage both the appearance and the internal structure of the electric scooter.

Please store your Electric scooter in a dry and cool environment when not in use. Avoid leaving it outdoors, as it is not made for storing in wet areas. Nor is it good to expose to high temperatures caused by direct sun for a long time.

2.3 Charging the scooter

This chapter mainly discusses the charging methods, battery maintenance, safety issues and battery specifications. For safety of yourself and others, and extending the battery's life and improving battery

performance, please make sure to follow the following operations. If the product is not used for a long period of time, be sure to charge it once a month to protect the battery life. Charger should only be operated by an adult. It is not a toy.

Note: If the battery is damaged due to water, collision and other abnormal usage, it is not covered by the warranty.

Low battery

If the electric kids scooter gives a continuous series of “beeps”, the battery is low. Please stop riding and charge immediately after the scooter emits a low battery warning tone to avoid damage to the battery or affect your use.

Charging the battery

1. Only use the supplied and dedicated charger (XHK-922-25210).
2. Open the charging rubber cover on the pedal and insert the charger output connector into the charging hole.



3. Plug the charger input power into the power socket.
4. The charger indicator is red, indicating that it is charging. When the charger indicator turns green, the battery is fully charged.
5. When the charging is finished, unplug the battery charger from the mains power supply and from the electric kids scooter and close the charging rubber cover again.
6. The electric kids scooter is ready for use.



WARNING:

Do not charge the battery or use the product in the following cases.

- Giving out some odor or excessive heat.
- Leakage of any substance.



WARNING:

- Do not ride the electric kids scooter when charging!
- It is prohibited to disassemble the battery.
- Do not touch any substance leaking out of the battery.
- Do not let children and animals touch the battery.
- Batteries contain dangerous substances inside. It is forbidden to open the battery and stick objects into the battery.
- Use only the supplied charger (XHK-922-25210 25.2V 1A).
- Don't over charge or discharge the battery.



WARNING:

Lithium battery inside!

Regarding battery charging

Important – Please read!

Dear customer. We hope you get a lot of joy out of your new kids scooter.

The battery in these kinds of scooters is not fully charged from production line to avoid slow charge or damage. When left unused, the battery will slowly discharge.

If you cannot turn on your kids scooter, and it doesn't seem to charge (the charger light up green instantly), then please do the following.

1. Leave the charger in for 4-5 hours. This will make sure the battery will be fully charged again (it can take 3-4 hours before it starts normal charging).
2. If this does not solve your problem, please ride the kids scooter manually without turning it on. Use your legs to give speed, for around 100 m, and then stop and connect the charger. The engine in the rear wheel will this way help to activate the charging function and it will charge normally. (fully charge takes 2-2½ hours if using this way)

Please enter: www.denver-electronics.com to obtain the electronic version of the manual.

Parameters	
Model	SCK-5400
Color	Black, White, Blue, Pink
Speed	up to 8km/h
Maximum grade	About 5°
Maximum running distance	6km
Battery	Type: Li-ion battery Nominal voltage (V): 21.6V Voltage (V): 25.2V Battery capacity: 2000mAh
Ride condition	Not recommended for kids below 6 years of age. Ride load less than 50kg
Charger	Rated input voltage (V): 100V - 240V AC Rated output voltage (V): 25.2V Rated current (A): 1 A
Charging Time	About 2.0-2.5h
Motor power	80W
Wheel	4.5" front wheel , 3.5" inch rear motor wheel
Braking method	Manual brake on back wheel.

Low battery protection	Will sound "beep, beep, beep" when power is 15%
-------------------------------	--

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER ELECTRONICS A/S

DENVER[®]

www.denver-electronics.com



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

DENVER ELECTRONICS A/S

Omega 5A, Soefte

DK-8382 Hinnerup

Denmark

www.facebook.com/denverelectronics

WARNINGS

Please read the manual completely and the instructions below before using the product.

Product names: DENVER SCK-5400

Product type: Electric Kids kick scooter Year of manufacturing: 2021



- Note: ONLY use the supplied charger labeled XHK-922-25210 with the following output
- voltage to charge this balance scooter: 21.6V - 1A.
- Using another charger may damage the product or create other potential risks.
- Never charge the product without supervision.
- The charging period of the product should not exceed three hours. Stop charging after three hours.
- The product should only be charged in temperatures between 0°C and 45°C.
- If charging at lower or higher temperatures, there is a risk that the performance of the battery will be reduced and a potential risk of damage to the product and personal injury.
- The product should only be used in temperatures between -10°C and +45°C.
- If used at lower or higher temperatures, there is a risk that the performance of the battery will be reduced and a potential risk of damage to the product and personal injury
- Store the product at temperatures between 0°C and 35°C. (optimum storage temperature is 25°C)
- Charge and store the product in an open, dry area and away from flammable materials (i.e. materials that may burst into flames).
- Do not charge in sunlight or near open fire.
- Do not charge the product immediately after use. Let the product cool down for one hour before charging.
- If the product is left with other persons for example during a holiday period, it should be partially charged (20-50% charged). Not fully charged.
- When shipped from the factory, the product has often been partially charged. Keep the product in a partially charged state, until it is going to be used.

DENVER ELECTRONICS A/S

Omega 5A, Soeften,

DK - 8382 Hinnerup, Denmark

www.denver-electronics.com



EC Declaration of Conformity (Safety of toys Directive)

The undersigned

Company Name: DENVER ELECTRONICS A/S

Address: Omega 5A, Soefften, 8382 Hinnerup, Denmark

Certifies that the design and manufacturing of this product

Product Brand Name: DENVER

Product Model No.: SCK-5400BLACK, SCK-5400BLUE, SCK-5400PINK,
SCK-5400WHITE

Product Type: Electric Kids kick scooter

Year of Fabrication: 2021

Serial number: 1 4 4 3 5 - 0 2 / 2 1 / 0 0 0 0 1 - 1 4 4 3 5 - 0 2 / 2 1 / 0 2 5 0 0
1 4 4 3 6 - 0 2 / 2 1 / 0 0 0 0 1 - 1 4 4 3 6 - 0 2 / 2 1 / 0 1 5 0 0
1 4 4 3 7 - 0 2 / 2 1 / 0 0 0 0 1 - 1 4 4 3 7 - 0 2 / 2 1 / 0 1 5 0 0
1 4 4 3 8 - 0 2 / 2 1 / 0 0 0 0 1 - 1 4 4 3 8 - 0 2 / 2 1 / 0 0 5 0 0

Confirms to the following
directives:

Safety of toys Directive 2009/48/EC;

Toy directive Standards: EN 71-1:2014 + A1:2018 ;


EN 71-2:2011+A1:2014;

EN 71-3:2019;

EN 62115: 2005+A12: 2015

and therefore complies with the essential requirements of the Toy Directive.

The identity and signature of the person empowered to draw up the declaration and compile the technical files on behalf of the manufacturer:

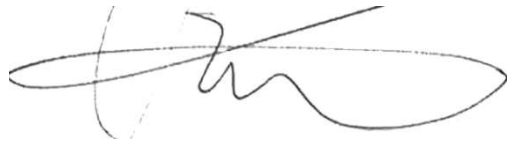

Signature:

Full Name: Alfred Blank

Position: CEO

Company: DENVER ELECTRONICS A/S

Date: 15th Jan, 2021
