USER MANUAL



Seeker 4 Pro

A powerful flashlight with a multifunctional holster.

IN THE BOX



Table 1:
SPECIFICATIONS

COOL WHITE CCT: 5700~7000K CRI:70
NEUTRAL WHITE CCT: 4000~5000K CRI:70

Mode	Output	Runtime
TURBO	4,600 lumens	100% 2.5min → 26% 122min → 13% 35min
HIGH	1,200 lumens	100% 135min → 50% 35min → 25% 10min
MEDIUM	300 lumens	100% 11h
LOW	50 lumens	100% 60h
MOONLIGHT	5 lumens	100% 15days

16,895cd | 260m | 1.5m

IPX8 | (L)133*(D)35mm (L)5.24*(D)1.38in | 205g/7.23oz (Including Battery)

Rechargeable Li-ion Battery 5000mAh 3.6V (18Wh) | Working temperature: 0-40°C

** Above data are tested per ANSI/PLATO FL 1-2019 standard in Olight's labs for reference.*

Table 2:
USB-C Charging Cable

Charge Type	USB-C
Cable length	0.8m
Input	5V/2A
Time to fully charge	About 3.5 hours

MCC (Optional Accessory)

Cable length	0.5m
Input	5V/2A
Output	CC&CV 4.2V±0.05V 2.0A
Time to fully charge	About 4.5 hours

Note: The MCC is not included in the package. If necessary, please purchase it from Olight Store.

Figure 1
Remove the insulating film

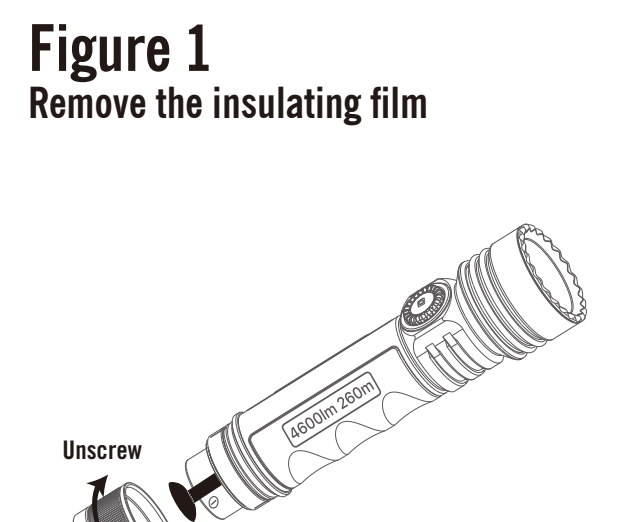

Figure 2
Charging

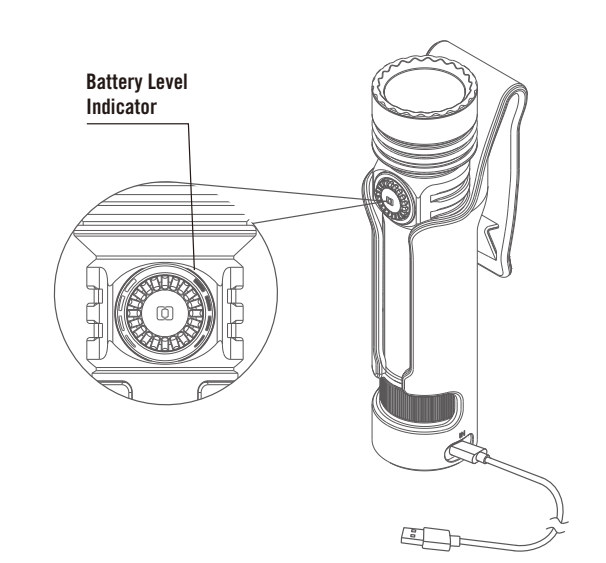

Figure 3
Lockout

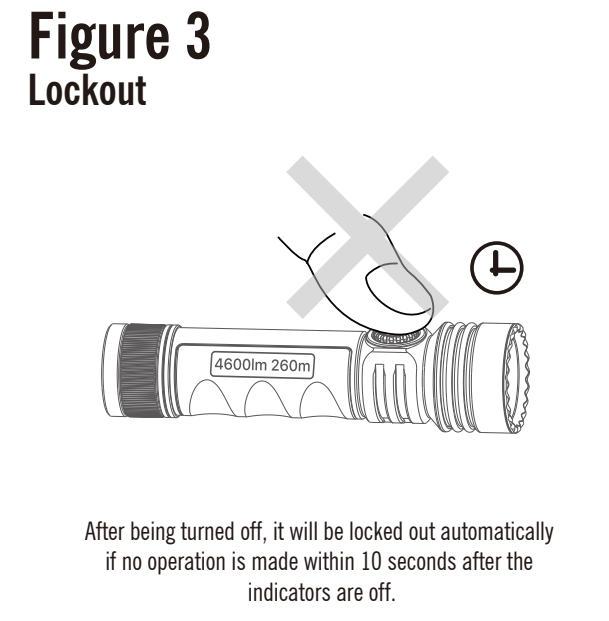

After being turned off, it will be locked out automatically if no operation is made within 10 seconds after the indicators are off.

Figure 4
Unlock

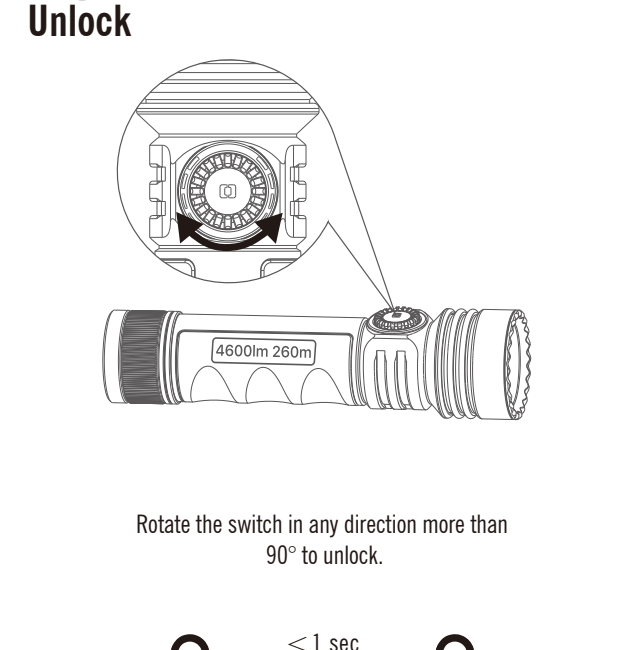

Rotate the switch in any direction more than 90° to unlock.

Figure 5
On/Off

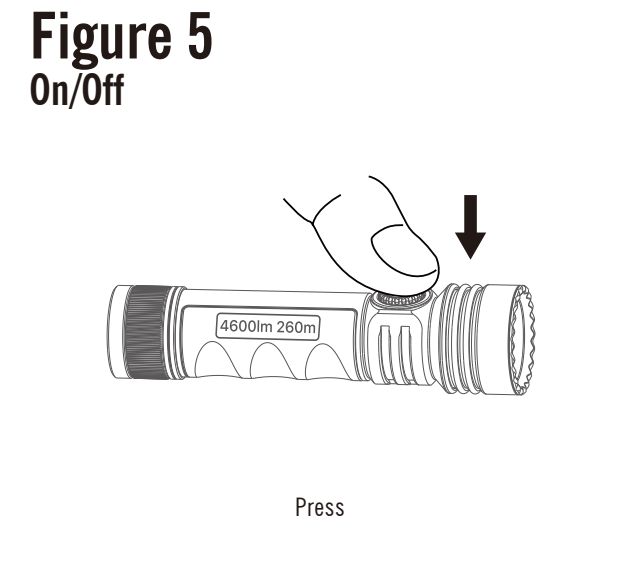

Figure 6
Moonlight

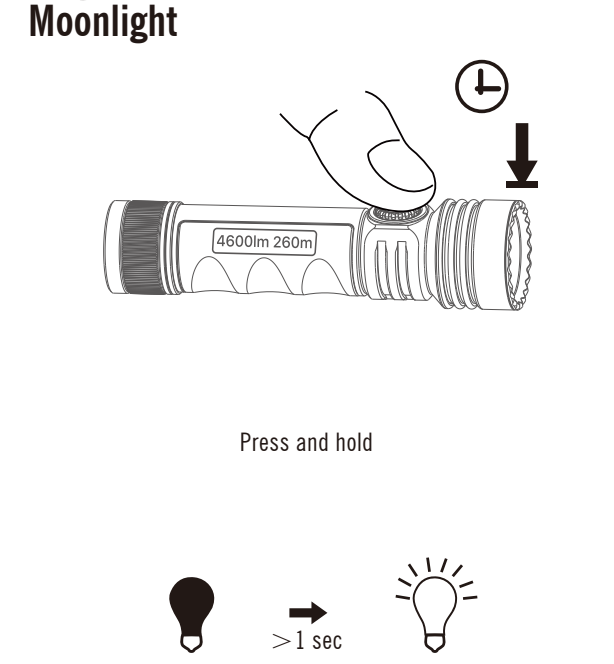

Figure 7
Turbo

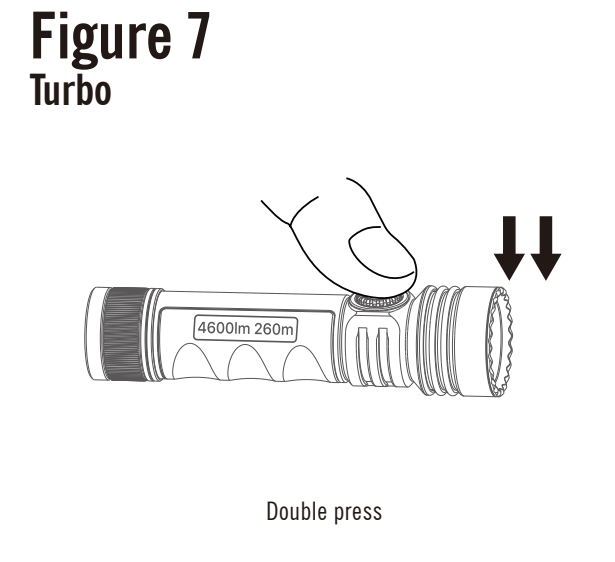

Figure 8
Strobe

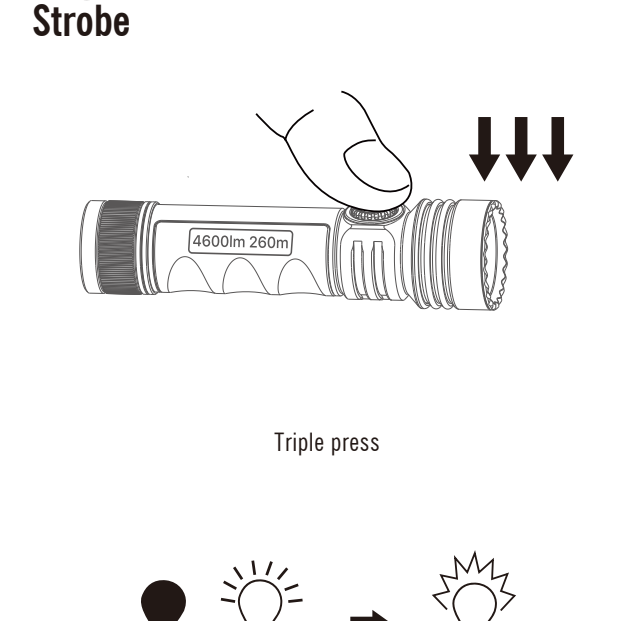

Figure 9
Change brightness level

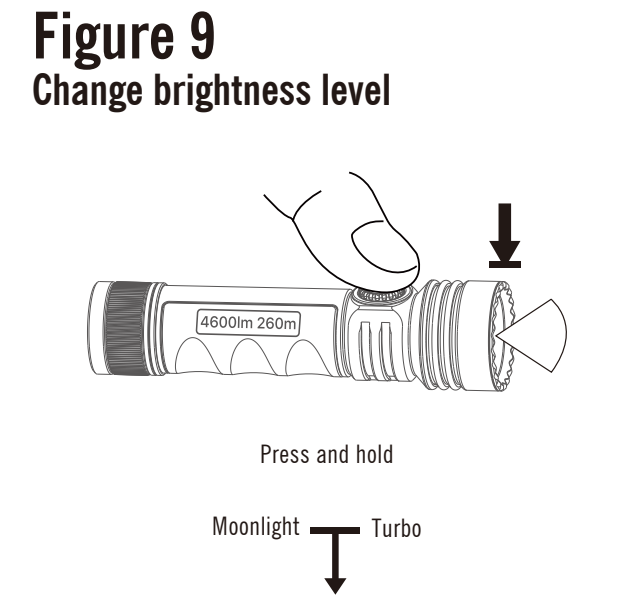

Figure 10-1
While off: Stepless increasing and decreasing

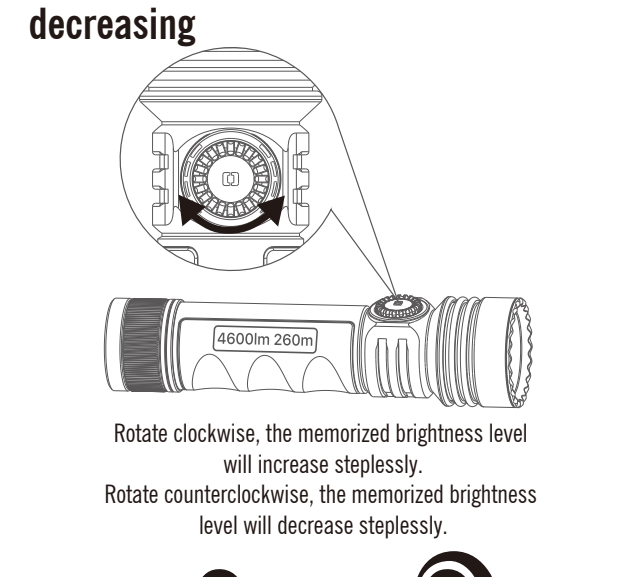

Rotate clockwise, the memorized brightness level will increase steplessly.
Rotate counterclockwise, the memorized brightness level will decrease steplessly.

Figure 10-2
While on: Stepless increasing and decreasing

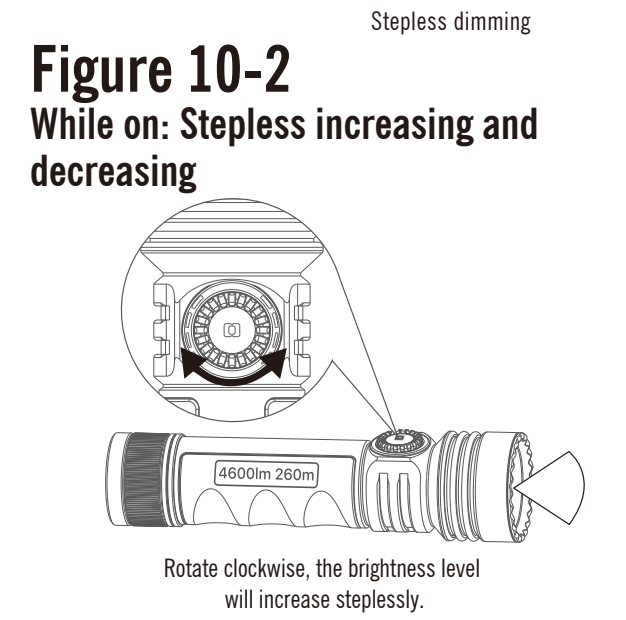

Rotate clockwise, the brightness level will increase steplessly.
Rotate counterclockwise, the brightness level will decrease steplessly.

Figure 11
Timer

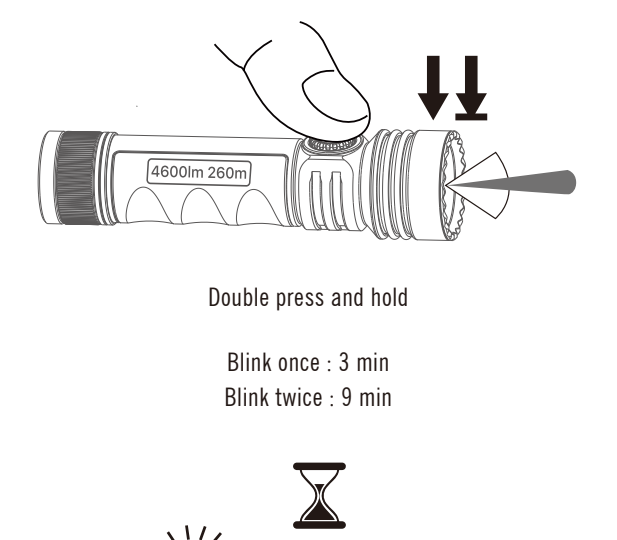

Figure 12
How to use the holster

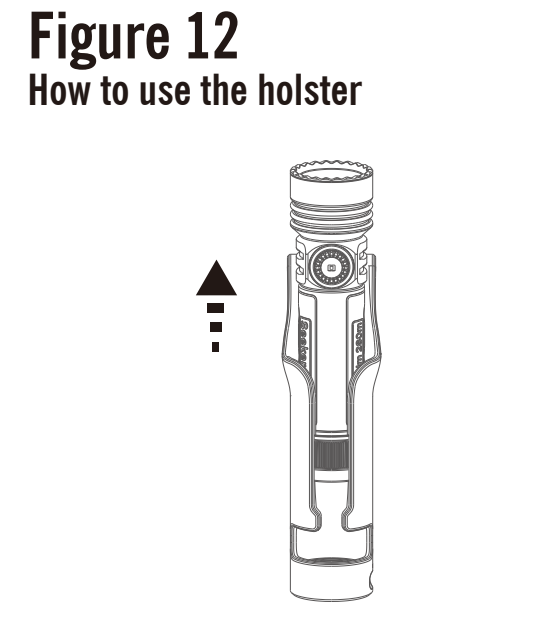

While off, remove the flashlight from the holster to unlock.

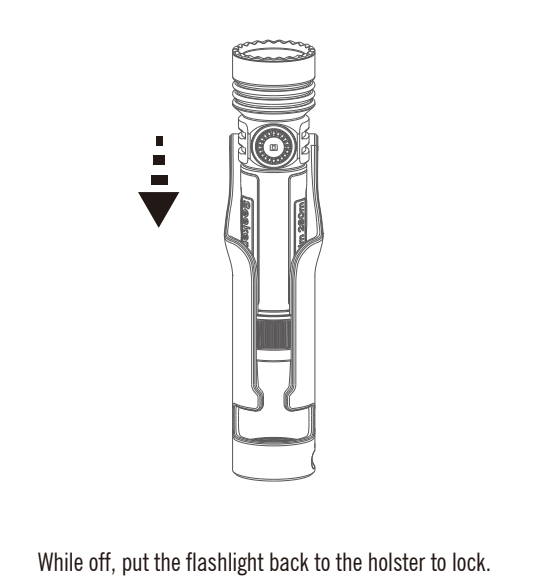

While off, put the flashlight back to the holster to lock.

Figure 13
How to use the fixing bracket

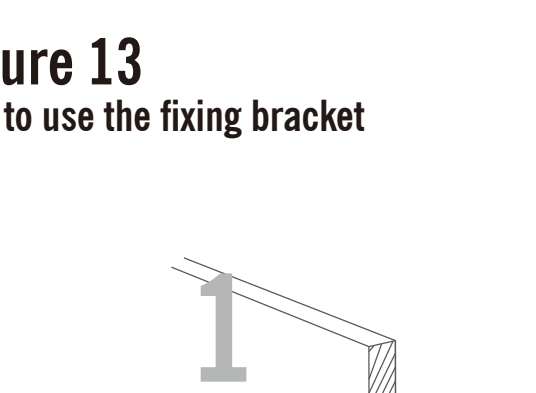

Use tools to punch holes in the wall or wooden board

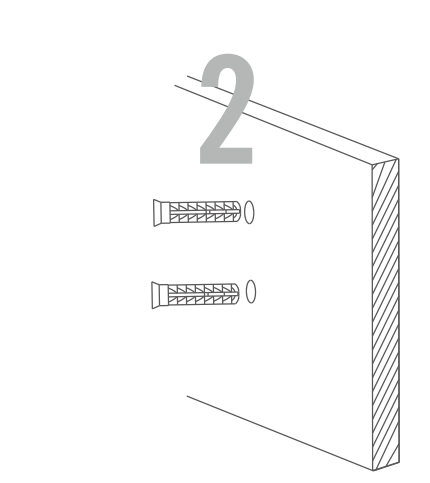

Insert the screw anchors

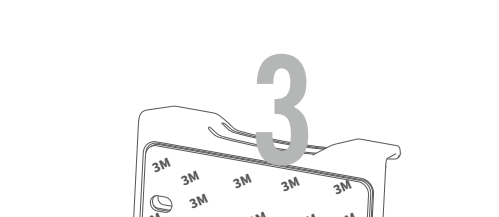

Remove the 3M adhesive sticker on the back of the fixing bracket and align it with the hole on the wall
(Note: Please stick the 3M adhesive sticker on a flat and smooth wall or car panel)

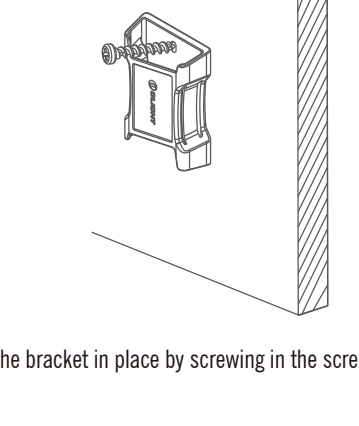

Secure the bracket in place by screwing in the screws

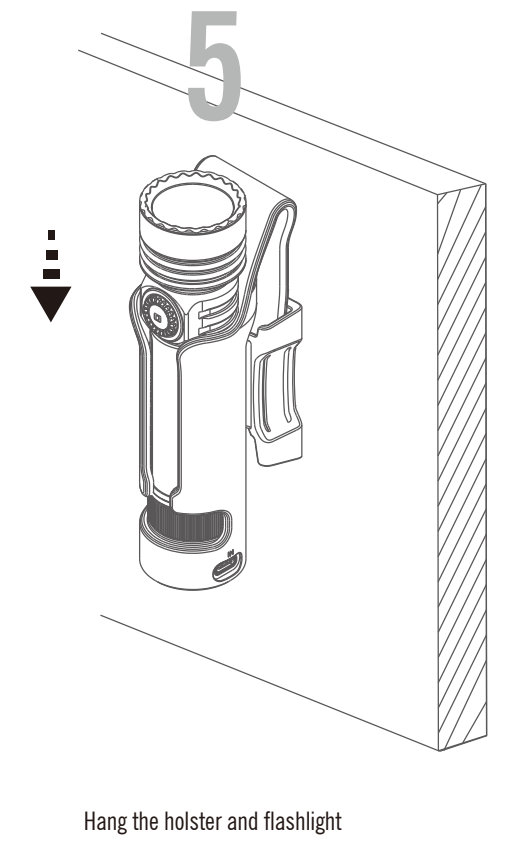

Hang the holster and flashlight

Figure 14
How to take the vertical holster out of the fixing bracket

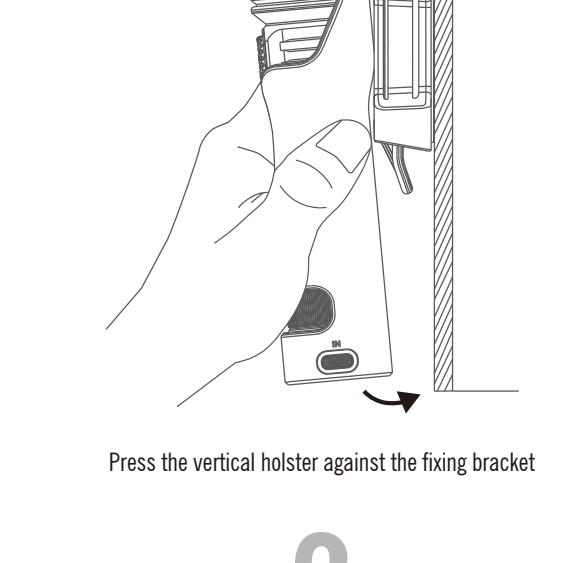

Press the vertical holster against the fixing bracket

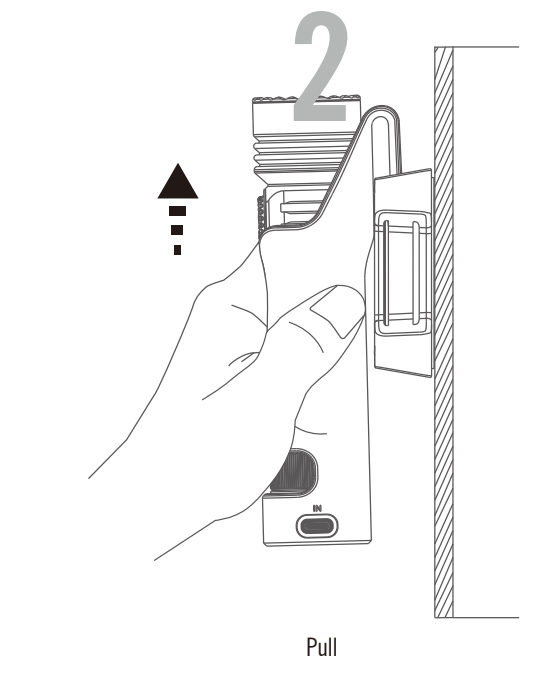

Pull

Figure 15-1
Brightness level indicators

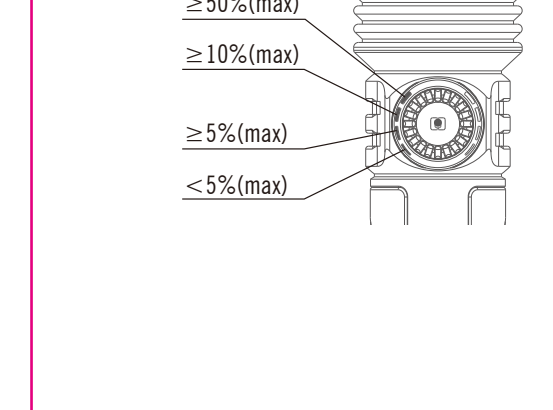

Figure 15-2
Battery Level indicators

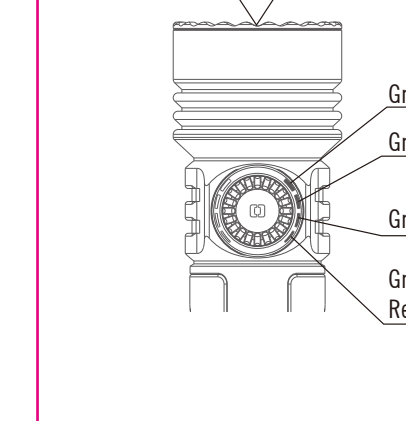

CONTENTS

(EN) English 01
(CN) 简体中文 03
(FI) Finnish 04
(NO) Norwegian 06
(SV) Swedish 08
(NL) Nederlands 10
(PL) Polska 12
(DE) Deutsch 14
(HU) Magyarország 16
(RU) Русский 19
(ES) Español 21
(RO) Romanesc 24
(UA) Ukrainian 26
(JP) 日本語 29
(KR) 한국어 31
(TH) ไทย 33
(FR) Français 35
(IT) Italiano 38
(SK) Slovenskýjazyk 40
(PT) Português 42

(EN) English

Multi-language dictionary, see Table 3.

1. Product parameters, see Table 1 and Table 2.

2. Operating instructions as below:

2.1 Remove the insulating film before use, see Figure 1.

2.2 Charging, see Figure 2.

While charging, the battery level indicators on the dashboard will be dynamically illuminated. Once it is fully charged, all battery level indicators will be lit.

2.3 Lockout, see Figure 3.

After turned off, it will be locked out automatically if no operation is made within 10 seconds after the indicators are off. In lockout mode, pressing the side switch will display the remaining battery level.

2.4 Unlock, see Figure 4.

Default Method: Rotate the switch more than 90° in any direction within 1 second to unlock. Once unlocked, the brightness and battery level indicators will respectively display the memorized brightness level and remaining battery level.

Note: An additional method (i.e., press and hold the switch for 1 second in lockout mode until Moonlight turns on) can be activated through the following operation: Press and hold the switch before installing the battery. Keep holding the switch until the battery is installed and the light turns on for 3 seconds, indicating a successful operation. The additional method can be deactivated using the same method. After illuminating for 3 seconds, if the light remains on, it indicates that the additional method has been activated; if the light goes off, it indicates that the additional method has been deactivated.

3. While unlocked:

3.1 On/Off, see Figure 5.

Press the switch to turn it on/off. When the light is turned on, it will return to the memorized brightness level. (The High mode and above brightness will be memorized as High mode. The Medium mode and above brightness level will be automatically stored as the memorized mode after turned off, and after one minute it will be memorized as Medium mode. The brightness level lower than Medium mode will be automatically stored as the memorized mode after turned off.)

3.2 Moonlight, see Figure 6.

While off, press and hold the switch for 1s to enter Moonlight mode.

3.3 Turbo, see Figure 7.

Quickly double press the switch to enter Turbo mode, double press again to return to the memorized mode.

3.4 Strobe, see Figure 8.

Quickly press the switch three times or more to enter Strobe mode. Press or press and hold to exit the mode.

3.5 Change the brightness level, see Figure 9.

While on, press and hold the switch and it will automatically cycle through Low, Medium, High and Low mode. The mode is selected when the switch has been released. (Please note: Moonlight and Turbo are not in the automatic cycle.)

3.6 Stepless increasing and decreasing:

While off: Rotate the switch clockwise to ramp up the memorized brightness level to the highest(High mode) in permitted conditions. The corresponding brightness level grid of the brightness controller will flash to notify when the brightness reaches its highest setting. Rotate the switch counterclockwise to decrease the brightness level until it enters Moonlight mode. The corresponding brightness level grid of the brightness controller will flash to notify when the brightness reaches its lowest setting. **See Figure 10-1.**

While on: Rotate the switch clockwise to ramp up the memorized brightness level to the highest(Turbo mode) in permitted conditions. The corresponding brightness level grid of the brightness controller will flash to notify when the brightness reaches its highest setting. Rotate the switch counterclockwise to decrease the brightness level until it enters Moonlight mode. The corresponding brightness level grid of the brightness controller will flash to notify when the brightness reaches its lowest setting. **See Figure 10-2.**

3.7 Timer, see Figure 11.

The Seeker 4 Pro comes with a long timer (9 minutes) and a short timer (3 minutes) for automatic light-off when in use. When the light is on, double press and hold the switch under the current brightness level to access the timer settings. A single blink accesses the short timer while two blinks accesses the long timer. The light will automatically turn off when the timer runs its course.

4. How to use the holster, see Figure 12.

One step unlocking: When removing the flashlight from the holster, the flashlight will be quickly unlocked automatically. The indicators on the dashboard will display the memorized brightness level and the remaining battery level and then turn off after 5 seconds. The flashlight can be turned on directly with a single press within 10 seconds after the dashboard indicators are off.

One step locking: When the flashlight is off, it will be locked if put back to the holster.

5. How to use the fixing bracket, see Figure 13.

Begin by using tools to punch holes in the wall or wooden board, then insert the screw anchors. Next, remove the 3M adhesive sticker on the back of the fixing bracket and align it with the hole on the wall. Finally, secure the bracket in place by screwing in the screws. (Note: Please stick the 3M adhesive sticker on a flat and smooth wall or car panel)

6. How to take the vertical holster out of the fixing bracket, see Figure 14.

Press the vertical holster against the fixing bracket, then pull it up and out of the fixing bracket.

7. Indicators dashboard:

7.1 Brightness level indicators, see Figure 15-1.

7.2 Battery Level indicators, see Figure 15-2.

(CN) 简体中文

多语言字典，参见 Table 3。

1. 产品参数参见 Table 1与Table 2。

2. 操作指引见下:

2.1 使用前移除绝缘片，参见Figure 1。

2.2 充电，参见Figure 2。

充电时仪表盘的电量格会动态显示，全部亮表示充满。

2.3 锁键，参见Figure 3。

关机待仪表盘指示灯熄灭后10s内无按键操作，自动锁键；锁键模式下按侧按键，电量指示灯指示当前剩余电量。

2.4 解锁，参见Figure 4。

默认模式：任意方向1s内旋转按键大于90°手电解锁，解锁后亮度及电量指示灯分别指示当前记忆亮度和剩余电量。

注：可通过特殊操作增加长按解锁模式（即在锁键状态下长按按键1s解锁并进入月光档），操作如下：

安装电池前按下按键不放，安装电池后保持按键长按直到白光亮起三秒后则完成新增长按解锁模式。采用同样的方法可切换为默认解锁方式。切换完成后若白光常亮则表示增加长按解锁模式，若白光灭则表示为默认模式。

3. 非锁键状态下:

3.1 开/关手电，参见Figure 5。

单击开/关机。开机时亮度输出为记忆亮度(高档及以上亮度记忆为高档，中档及以上亮度关机自动存为记忆亮度，1分钟之后记忆成中档，中档以下亮度关机时自动存为记忆亮度）。

3.2 月光档，参见Figure 6。

关机状态长按1s进入月光档。

3.3 Turbo档，参见Figure 7。

快速双击进入Turbo模式，再次双击返回记忆档位。

3.4 爆闪，参见Figure 8。

快速连击按键三次或以上进入爆闪，单击或长按可退出爆闪。

3.5 改变亮度，参见Figure 9。

开机状态下长按按键改变亮度，输出从当前亮度开始，按月光档或极亮档->低档->中档->高档->低档顺序改变，释放按键选定亮度。（注意：月光档，极亮档不在调光循环序列里）

3.6 无极调光增加与降低:

关机状态: 关机状态下顺时针旋转，亮度无极增加，最高可到输出条件允许的最高亮度（最高亮度为高亮档）；当旋转至当前最高亮度时，将通过当前亮度等级最高位指示灯闪烁提醒。逆时针旋转，亮度无极降低，最低可到月光档；旋转至当前最低亮度时，将通过亮度等级最低位指示灯闪烁提醒；**参见Figure 10-1。**

开机状态: 开机状态下顺时针旋转，亮度无极增加，最高可到输出条件允许的最高亮度（最高亮度为极亮档）；当旋转至当前最高亮度时，将通过当前亮度等级最高位指示灯闪烁提醒。逆时针旋转，亮度无极降低，最低可到月光档；旋转至当前最低亮度时，将通过亮度等级最低位指示灯闪烁提醒；**参见Figure 10-2。**

3.7 定时，参见Figure 11。

可设置两种指定的点亮时间：长定时（9分钟）与 短定时（3分钟）。开机后，在当前亮度下，双击按键并保持,输出闪一次为短定时，闪两次为长定时，计时结束自动关机。

4. holster的使用，参见Figure 12。

快捷解锁: 将手电从holster中拔出，手电快捷自动解锁，仪表盘指示灯显示记忆亮度等级以及剩余电量5秒后熄灭，仪表盘熄灭10秒内单按可直接开机。

快捷锁键: 将处于关机状态的手电放回holster则锁键。

5. 固定支架的使用，参见Figure 13。

先使用工具在墙或木板上打孔，然后再放入膨胀螺钉，撕开固定支架背面的3M胶贴纸对准墙上孔位粘贴，最后拧入螺丝完成固定。（注意：3M胶贴纸请粘于平整光滑的墙面或车面板上）

6. 如何把Vertical Holster从固定支架里取出，参见Figure 14。

将Vertical Hoslter向固定支架按压后，将其向上抽出固定支架。

7. 仪表盘指示灯说明:

7.1 亮度指示灯，参见Figure 15-1。

7.2 电量指示灯，参见Figure 15-2。

(FI) Finnish

Monikielinen sanakirja, katso Table 3.

1. Tuotteen tiedot, katso taulukko 1 ja 2.

2. Käyttöohjeet alla;

2.1 Poista eristekalvo ennen käyttöönottoa, katso kuva 1.

2.2 Lataus, katso kuva 2.

Akun varauksen indikointivalot näkyvät dynaamisesti näytöllä latauksen aikana. Kun lataus on valmis, kaikki merkkivalot palavat.

2.3 Näppäinlukko, katso kuva 3.

Näppäinlukko asettuu automaattisesti päälle, mikäli valaisinta ei käytetä 10 sekuntiin sen sammuttamisen jälkeen. Kun näppäinlukko on päällä, akun varaus voidaan tarkistaa näpäyttämällä sivukytkintä, jolloin indikaattorit tulevat näkyviin näytölle.

2.4 Näppäinlukon avaaminen, katso kuva 4.

Oletusmenetelmä: Avaa lukitus kääntämällä kytkintä yli 90° mihin tahansa suuntaan 1 sekunnin sisällä. Kun lukitus on avattu, kirkkauden ja akun varaustason ilmaisimet näyttävät vastaavasti muistiin tallennetun kirkkaustason ja jäljellä olevan akun tason.

Huomautus: Lisämenetelmä (eli paina ja pidä kytkintä painettuna 1 sekunnin ajan lukitustilassa, kunnes Moonlight syttyy) voidaan aktivoida seuraavalla toiminnolla: Pidä kytkintä painettuna ennen akun asentamista. Pidä kytkintä painettuna, kunnes akku on asennettu ja valo syttyy 3 sekunniksi osoittaen onnistuneen toiminnan. Lisämenetelmä voidaan poistaa käytöstä samalla tavalla. 3 sekunnin päälläolon jälkeen, jos valo jää palamaan, se osoittaa, että lisämenetelmä on aktivoitu; jos valo sammuu, se osoittaa, että lisämenetelmä on poistettu käytöstä.

3. Lukitustilassa:

3.1 On/Off, katso kuva 5.

Table 3
Multi-language dictionary

EN	Moonlight	Low	Medium	High	Turbo	Strobe	Stepless dimming	Press	Double press	Press and hold	Triple press	Blink once	Blink twice
CN	月光档	低档	中档	高档	极亮档	爆闪	无极调光	单击	双击	长按	三击	闪烁一次	闪烁二次
FI	Moonlight-tila	Low-tila	Medium-tila	High-tila	Turbo-tila	Strobo	Portaaton himmennys	Napauta	Kaksoisnapauta	Paina ja pidä painettuna	Kolmoisnapauta	Vilkuta kerran	Vilkuta kaksi kertaa
NO	Moonlight modus	Lav modus	Medium modus	Høy modus	Turbo modus	Blink modus	Trinnløs dimming	Trykk	Trykk to ganger	Hold inne	Trykk tre ganger	Blink en gang	Blink to ganger
SV	Moonlight läge	Lågläge	Mellanläge	Högt läge	Turboläge	Blixt läge	Steglös dimring	Tryck	Dubbeltryck	Tryck och håll	Trippel Tryck	Blinka en gång	Blinka två gånger
NL	Maanlicht modus	Lage Modus	Gemiddelde Modus	Hoge Modus	Turbo Modus	Stroboscoop	Traploos dimmen	Druk	Dubbel drukken	Houd ingedrukt	Driemaal drukken	Knipper één keer	Knipper twee keer
PL	Tryb moonlight	Tryb niski	Tryb średni	Tryb wysoki	Tryb turbo	Strobe	Bezstopniowe przyciemnianie	Naciśnij	Naciśnij dwa razy	Naciśnij i przytrzymaj	Naciśnij trzy razy	Mruga raz	Mruga dwa razy
DE	Mondlichtmodus	Niedriger Modus	Mittlerer Modus	Hoher Modus	Turbo-Modus	Strobe	Stufenlose Helligkeitseinstellung	Drücken	Zweimal drücken	Gedrückt halten	Dreimal drücken	Blinkt einmal	Blinkt zweimal
HU	Holdfény mód	Alacsony mód	Közepes mód	Magas mód	Turbó mód	Stroboszkóp	Folyamatos tompítás	Megnyomás	Dupla megnyomás	Nyomva tartás	Tripla megnyomás	Egy pislogás	Két pislogás
RU	Режим мунлайт	Минимальный режим	Средний режим	Максимальный режим	Турбо режим	Режим стробоскоп	Плавное затемнение	Нажмите	Двойное нажатие	Нажмите и удерживайте	Тройное нажатие	Мигание один раз	Мигание два раза
ES	Modo de luz de luna	Modo de potencia baja	Modo de potencia media	Modo de potencia alta	Modo turbo	Estroboscópico	Atenuación continua	Presione	Presione dos veces	Mantenga presionado	Presione tres veces	Parpadee una vez	Parpadee dos veces
RO	Mod de veghe	Mod mic	Mod mediu	Mod mare	Mod turbo	Stroboscop	Diminuare continuă a intensității luminoase	Apăsare	Apăsare dublă	Apăsați și mențineți apăsat	Apăsare triplă	Clipește o dată	Clipește de două ori
UA	Режим Moonlight	Режим Low	Режим Medium	Режим High	Турбо-режим	Режим стробоскопа	Плавне затемнення	Прес	Подвійне натискання	Натисніть і утримуйте	Потрійне натискання	Один раз моргнути	Двічі моргнути
JP	ムーンライトモード	ローモード	メディアムモード	ハイモード	ターボモード	ストロボモード	無段階調光	プレス	ダブルプレス	押したまま	トリプルプレス	一度点滅	二度点滅
KR	문라이트 모드	로우 모드	미디엄 모드	하이 모드	터보 모드	스트로브	스텝리스 조도 감소	누르기	2번 누르기	길게 누르기	3번 누르기	1번 깜빡임	2번 깜빡임
TH	โหมดแสงจันทร์	โหมดความสว่างต่ำ	โหมดความสว่างปานกลาง	โหมดความสว่างสูง	โหมดเทอร์โบ	กระพริบ	หรี่แสงอย่างไร้รอยต่อ	กด	กดสองครั้ง	กดค้างไว้	กดสามครั้ง	กะพริบหนึ่งครั้ง	กะพริบสองครั้ง
FR	Mode Luciole	Mode Faible	Mode Moyen	Mode Haut	Mode Turbo	Stroboscope	Gradation continue	Appuyer	Double pression	Appuyer et maintenir	Triple pression	Clignote une fois	Clignote deux fois
IT	Modalità chiaro di luna	Modalità bassa	Modalità media	Modalità alta	Modalità Turbo	Strobo	Dimmerazione continua	Premere	Premere due volte	Premere e tenere premuto	Premere tre volte	Lampeggia una volta	Lampeggia due volte
SK	mesačny svit	slaby režim	stredný režim	vysoky režim	turbo režim	stroboskop	Súvislé tlmenie	Stlačenie	Dvojité stlačenie	Stlačenie a podržanie	Trojité stlačenie	Jedno žmurknutie	Dve žmurknutia
PT	Modo Luar	Modo baixo	Modo Médio	Modo alto	Modo turbo	Strobo	Escurecimento contínuo	Pressionar	Pressionar duas vezes	Manter pressionado	Pressionar três vezes	Piscar uma vez	Piscar duas vezes

WARRANTY

We are proud to offer a lifetime warranty in Australia, China, France, Germany, and the USA. We are also working hard to expand coverage to more countries, where we provide a 2 or 5-year warranty. The warranty covers defects in material and workmanship under normal use, excluding loss, theft, deliberate damage, or cosmetic damage. For complete warranty information, please visit Olight.com or your local Olight official website.

Australia Customer Support
contact@olightstore.com.au
Austria Customer Support
kontakt@olightstore.at
Canada Customer Support
cs@olightstore.ca
China Customer Support
Wechat: olightcs
France Customer Support
cs@olightstore.fr
Germany Customer Support
kontakt@olightstore.de
Italy Customer Support
contatto@olightstore.it
Japan Customer Support
cs@olightstore.jp
Korea Customer Support
olightkorea@olight.com
Spain Customer Support
contacto@olightstore.es
Thailand Customer Support
cs@olightstore.co.th
UK Customer Support
contact@olightstore.uk
USA Customer Support
cs@olightstore.com
For other countries and regions, please contact Global Customer Support
contact@olight.com

Download the Olight App

App Store | Google Play

Exclusive Offers | Smart Device Control | Customer Service

Dongguan Olight E-Commerce Technology Co., Ltd
4th Floor, Building 4, Kegu Industrial Park, No. 6 Zhongnan Road, Chang'an Town, Dongguan City, Guangdong, China.
Made in China
CAN ICES-005 (B) / NMB-005 (B)
3.4000.1147
C. 03, 12, 2025

THANK YOU!