
OLIGHT

USER MANUAL

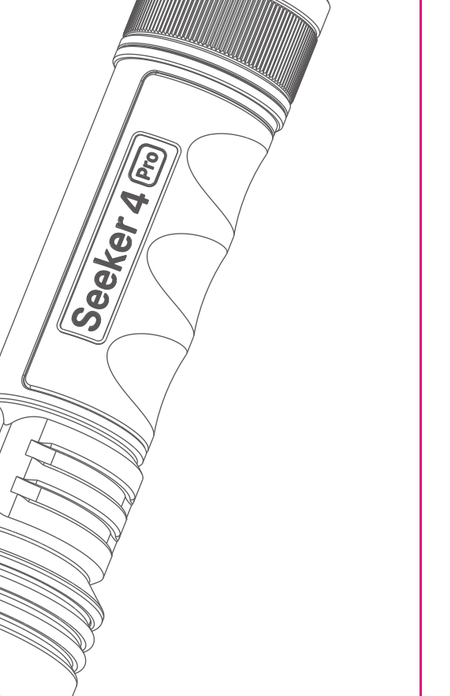

Seeker 4 Pro

A powerful flashlight with a multifunctional holster.

IN THE BOX

Seeker 4 Pro; Holster fixing bracket; Plastic Expansion Screws X2; Vertical Holster; USB-C Charging Cable

Table 1: SPECIFICATIONS

COOL WHITE CCT: 5700～7000K CRI:70
NEUTRAL WHITE CCT: 4000～5000K CRI:70

Mode	Output	Runtime
TURBO	4,600 lumens	100% 2.5min → 26% 122min → 13% 35min
HIGH	1,200 lumens	100% 135min → 50% 35min → 25% 10min
MEDIUM	300 lumens	100% 11h
LOW	50 lumens	100% 60h
MOONLIGHT	5 lumens	100% 15days

16,895cd; 260m; 1.5m; IPX8; (L)133*(D)35mm (L)5.24*(D)1.38in; 205g/7.23oz (Including Battery); Rechargeable Li-ion Battery 5000mAh 3.6V (18Wh); Working temperature: 0-40°C

** Above data are tested per ANSI/NEMA FL 1-2009 standard in Olight's labs for reference.*

Table 2: USB-C Charging Cable

Charge Type	USB-C
Cable length	0.8m
Input	5V/2A
Time to fully charge	About 3.5 hours

MCC (Optional Accessory)

Cable length	0.5m
Input	5V/2A
Output	CC&CV 4.2V±0.05V 2.0A
Time to fully charge	About 4.5 hours

Note: The MCC is not included in the package. If necessary, please purchase it from Olight Store.

Figure 1
Remove the insulating film

Unscrew → Remove the insulating film

Figure 2
Charging

Battery Level Indicator

Figure 3
Lockout

After being turned off, it will be locked out automatically if no operation is made within 10 seconds after the indicators are off.

>10 sec

Figure 4
Unlock

Rotate the switch in any direction more than 90° to unlock. <1 sec

Or

Press and hold >1 sec

Figure 5
On/Off

Press — OFF ⇌ ON

Figure 6
Moonlight

Press and hold — >1 sec — Moonlight

Figure 7
Turbo

Double press — Or → TURBO

Figure 8
Strobe

Triple press — Or → Strobe

Figure 9
Change brightness level

Press and hold — Moonlight, Turbo, Low, Medium, High

Figure 10-1
While off: Stepless increasing and decreasing

Rotate clockwise, the memorized brightness level will increase steplessly. Rotate counterclockwise, the memorized brightness level will decrease steplessly.

Stepless dimming

Figure 10-2
While on: Stepless increasing and decreasing

Rotate clockwise, the brightness level will increase steplessly. Rotate counterclockwise, the brightness level will decrease steplessly.

Stepless dimming

Figure 11
Timer

Double press and hold

Blink once : 3 min
Blink twice : 9 min

Figure 12
How to use the holster

While off, remove the flashlight from the holster to unlock.

While off, put the flashlight back to the holster to lock.

Figure 13
How to use the fixing bracket

Figure 14
How to take the vertical holster out of the fixing bracket

Figure 15-1
Brightness level indicators

Figure 15-2
Battery Level indicators

≥75%; 50%～75%; 25%～50%; 10%～25%; <10%

CONTENTS

(EN) English 01
(CN) 简体中文 02
(FI) Finnish 04
(NO) Norwegian 05
(SV) Swedish 07
(NL) Nederlands 09
(PL) Polska 11
(DE) Deutsch 13
(HU) Magyarország 15
(RU) Русский 17
(ES) Español 19
(RO) Romanesc 22
(UA) Ukrainian 23
(JP) 日本語 26
(KR) 한국어 28
(TH) ไทย 30
(FR) Français 32
(IT) Italiano 34
(SK) Slovenskýjazyk 36
(PT) Português 38

(EN) English

Multi-language dictionary, see Table 3.

1. Product parameters, see Table 1 and Table 2.

2. Operating instructions as below:

2.1 Remove the insulating film before use, see Figure 1.

2.2 Charging, see Figure 2.

While charging, the battery level indicators on the dashboard will be dynamically illuminated. Once it is fully charged, all battery level indicators will be lit.

2.3 Lockout, see Figure 3.

After turned off, it will be locked out automatically if no operation is made within 10 seconds after the indicators are off. In lockout mode, pressing the side switch will display the remaining battery level.

2.4 Unlock, see Figure 4.

To unlock, rotate the switch more than 90° in any direction, or press and hold the button for about 1 second until the flashlight enters Moonlight mode. After it is unlocked, the brightness and battery level indicators will respectively display the memorized brightness level and remaining battery level.

3. While unlocked:

3.1 On/Off, see Figure 5.

Press the switch to turn it on/off. When the light is turned on, it will return to the memorized brightness level. (The High mode and above brightness will be memorized as High mode. The Medium mode and above brightness level will be automatically stored as the memorized mode after turned off, and after one minute it will be memorized as Medium mode. The brightness level lower than Medium mode will be automatically stored as the memorized mode after turned off.)

3.2 Moonlight, see Figure 6.

While off, press and hold the switch for 1s to enter Moonlight mode.

3.3 Turbo, see Figure 7.

Quickly double press the switch to enter Turbo mode, double press again to return to the memorized mode.

3.4 Strobe, see Figure 8.

Quickly press the switch three times or more to enter Strobe mode. Press or press and hold to exit the mode.

3.5 Change the brightness level, see Figure 9.

While on, press and hold the switch and it will automatically cycle through Low, Medium, High and Low mode. The mode is selected when the switch has been released. (Please note: Moonlight and Turbo are not in the automatic cycle.)

3.6 Stepless increasing and decreasing:

While off: Rotate the switch clockwise to ramp up the memorized brightness level to the highest(High mode) in permitted conditions. The corresponding brightness level grid of the brightness controller will flash to notify when the brightness reaches its highest setting. rotate the switch counterclockwise to decrease the brightness level until it enters

Moonlight mode. The corresponding brightness level grid of the brightness controller will flash to notify when the brightness reaches its lowest setting. **See Figure 10-1.**

While on: Rotate the switch clockwise to ramp up the memorized brightness level to the highest(Turbo mode) in permitted conditions. The corresponding brightness level grid of the brightness controller will flash to notify when the brightness reaches its highest setting. rotate the switch counterclockwise to decrease the brightness level until it enters Moonlight mode. The corresponding brightness level grid of the brightness controller will flash to notify when the brightness reaches its lowest setting. **See Figure 10-2.**

3.7 Timer, see Figure 11.

The Seeker 4 Pro has a long (9 minutes) and short (3 minutes) timer when the light needs to be automatically turned off. When the light is on, double press and hold the switch under the current brightness level to access the timer settings. A single blink accesses the short timer while two blinks accesses the long timer. The light will automatically turn off when the timer runs its course.

4. How to use the holster, see Figure 12.

One step unlocking: When removing the flashlight from the holster, the flashlight will be quickly unlocked automatically. The indicators on the dashboard will display the memorized brightness level and the remaining battery level and then turn off after 5 seconds. The flashlight can be turned on directly with a single press within 10 seconds after the dashboard indicators are off.

One step locking: When the flashlight is off, it will be locked if put back to the holster.

5. How to use the fixing bracket, see Figure 13:

Begin by using tools to punch holes in the wall or wooden board, then insert the expansion screws. Next, remove the 3M adhesive sticker on the back of the fixing bracket and align it with the hole on the wall. Finally, secure the bracket in place by screwing in the screws.(Note: Please stick the 3M adhesive sticker on a flat and smooth wall or car panel)

6. How to take the vertical holster out of the fixing bracket, see Figure 14.

Press the vertical holster against the fixing bracket, then pull it up and out of the fixing bracket.

7. Indicators dashboard:

7.1 Brightness level indicators, see Figure 15-1.

7.2 Battery Level indicators, see Figure 15-2.

(CN) 简体中文

多语言字典，参见 Table 3。

1. 产品参数参见 Table 1与Table 2。

2. 操作指引见下：

2.1 使用前移除绝缘片，参见Figure 1。

2.2 充电，参见Figure 2。

充电时仪表盘的电量格会动态显示，全部亮表示充满。

2.3 锁键，参见Figure 3。

关机待仪表盘指示灯熄灭后10s内无按键操作，自动锁键；锁键

WARRANTY

Within 30 days of purchase: Contact the original seller for repair or replacement.

Within 5 years of purchase: Contact Olight for repair or replacement.

Battery warranty: Olight offers a one-year warranty for all rechargeable batteries.

Holster: One year.

If you experience quality problems or damage with low-value fittings like lanyards or clips within 30 days of purchase under normal use conditions, please contact our after-sale service. For issues that occur after 30 days or for damage caused by abnormal use conditions, we provide a conditional quality assurance as appropriate.

USA Customer Support
cs@olightstore.com

Global Customer Support
contact@olightworld.com

Visit **www.olightworld.com** to see our complete product line of portable illumination tools.

Dongguan Olight E-Commerce Technology Co., Ltd.
4th Floor, Building 4, Kegu Industrial Park, No 6 Zhongnan Road, Changan Town, Dongguan City, Guangdong, China.
Made in China

CAN ICES-005 (B) / NMB-005 (B)

3.4000.0619 A.06, 17, 2023